

Tutorial, VCDS 805 programming and upgrading


Tutorial about repairing or upgrading VAG COM interface with 1.78 firmware working with VCDS 805 english version.


Firstly we must supply the interface with a voltage of 12 volts, for this we solder 2 wire on 7805 regulator like the picture :

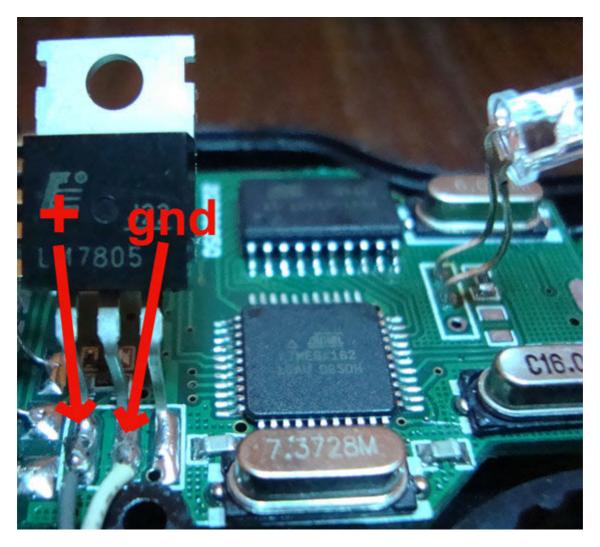

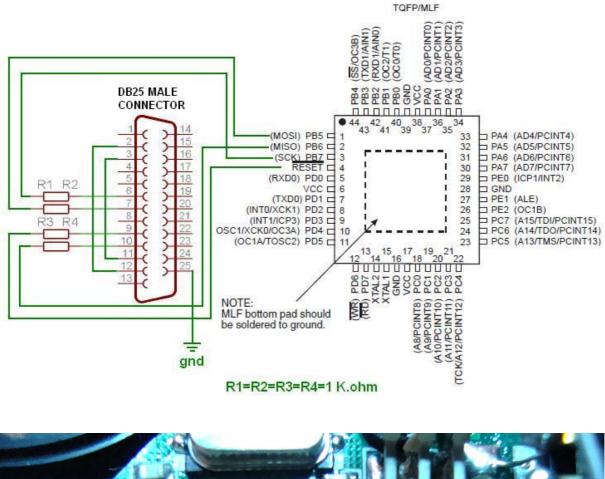


After we must connect the ATMEGA 162 ship with port LPT of the PC to program it as shown on this pictures :

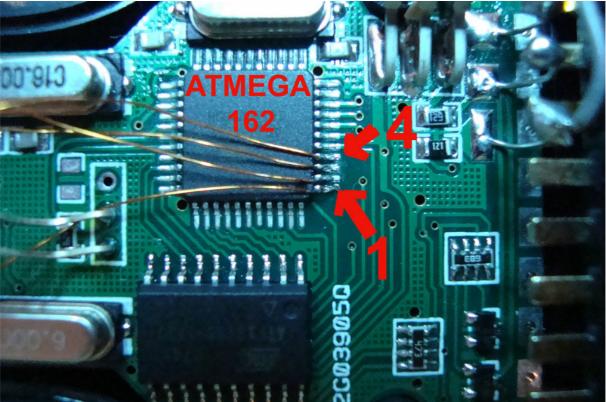

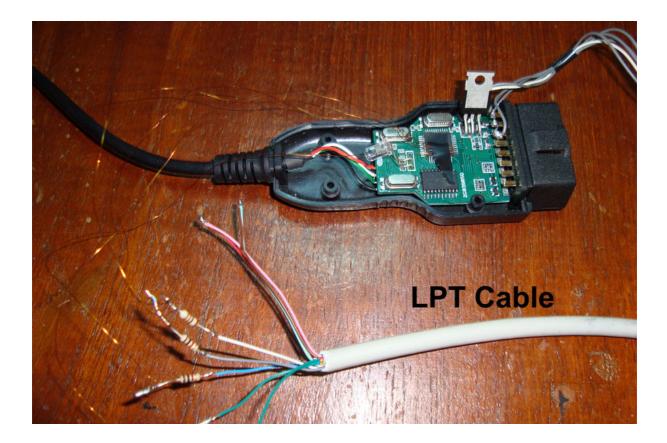

Final result :

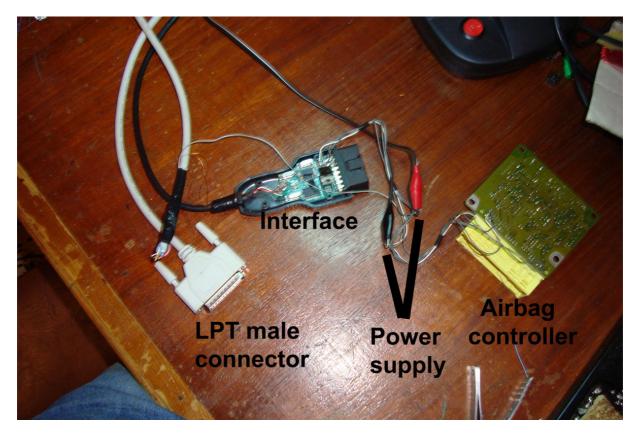

The airbag controller is not needed, i use it only to test the interface.

-Uninstall any installed verison of VAGCOM or VCDS on your PC.

- Disconnecedt all connected USB device.
- Connect USB cable of interface.
- Execute "FTDI_Tools\vidpidfix.exe".
- Select "SERIAL NUMBER".
- Click "Search" button .

Search	⊙ Description ⊙ Serial Number ○ De
Descriptio	on and Serial Numbers are Case Sensitive
Open	Status DLP-USB1 Closed.
1 device(:	s) attached:

- Click "Open" .
- Click "Write default EE data".

- Disonnect USB interface and reconnect it , you will be asked for driver , install driver in "FTDI_Tools\VCR_CDM 2.00.00" directory .

- execute "\FTDI_Tools\Mprog\MProg 3.5 Release\Mprog.exe".
- Select "Device->Scan".
- Select "File->Open", select "VCDS_805_dumps\Ross_Tech.ept".
- Select "Device->program".
- Connect LPT cable.

Execute "\PonyProg2000\PonyProg2000.exe".Select "Setup->Interface setup...". Configure it as shown on this picture.


I/O port setup	
I/O port setup	
O Serial	Parallel
SI Prog API	Avr ISP 1/0
C COM1 C COM3 C COM2 C COM4	LPT1 C LPT3 LPT2
	lines wert D-IN wert D-OUT
Cancel OK Prot	be

- Now power up the interface with 12 v
 - Select "Setup->Calibration", Click "Yes".
 - Select "Command->Erase".
 - Select "Command->Security and configuration Bits".
 - Set security bits as shown on this picture :

Configuration and Security bits
□ 7 □ 6 🔽 BootLock12 🖾 BootLock11 □ BootLock02 □ BootLock01 🔽 Lock2 🖾 Lock1
🗖 OCDEN 🗖 JTAGEN 🗖 SPIEN 🗖 WDTON 🗖 EESAVE 🗖 BOOTSZ1 🗖 BOOTSZ0 🗖 BOOTRST
🗆 CKDIV8 🗖 CKOUT 🔽 SUT1 🗖 SUT0 🗖 CKSEL3 🗖 CKSEL2 🔽 CKSEL1 🗖 CKSEL0
Checked items means programmed (bit = 0)
Refer to device datasheet, please
Cancel OK Write Read

- Click "Write".
 - Select "File->Open Device File...".and select this file
 - "\VCDS_805_dumps\VCDS_805_Atmega_162.bin".
 - Select "Command->Write All".
 - Disconnect LPT cable.
 - Your Interface is now ready to work.
 - Install "\VCDS_805_soft\VCDS-Release-8050-Installer.exe".

- Copy "\VCDS_805_soft\hosts" to "YOUR WINDOWS DIRECORY\system32\drivers\etc\" to prevent detection of blacklisted serial.

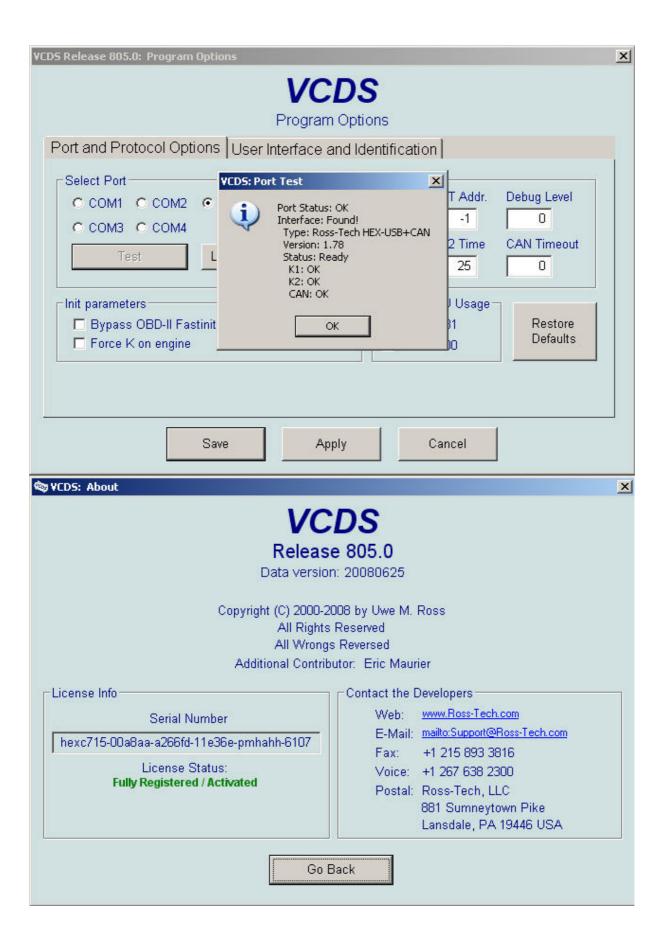

9 VCD5 Release 805.0: 15-Airbags, Fault Codes			
VCDS Fault Codes			
Controller Info VAG Number: 1C0 909 605 A Component: 27 AIRBAG VW51 01 02			
Fault Codes 10 Faults Found: 00595 - Crash Data Stored 35-00 01214 - Crash Data for Belt Tensioner Stored 35-00 00588 - Airbag Igniter, Driver Side (N95) 32-10 - Resistance too High - Intermittent 00589 - Airbag Igniter 1; Passenger Side (N131) 29-10 - Short to Ground - Intermittent 00654 - Seat Belt Tensioner Igniter; Driver Side (N153) 32-10 - Resistance too High - Intermittent 00655 - Seat Belt Tensioner Igniter; Passenger Side (N154)			
Print Codes Copy Codes Save Codes Clear Codes - 05 Done, Go Bac	K		