
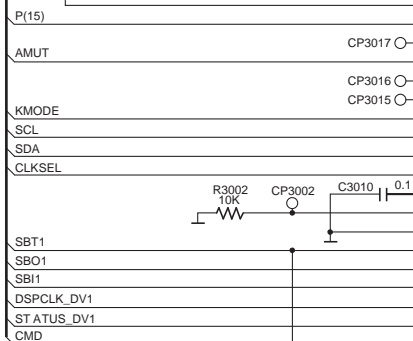




(FORE) EXADR(20)
 (FORE) EXADR(19)
 (FORE) EXADR(18)
 (FORE) EXADR(17)
 (FORE) EXADR(16)
 (FORE) EXADT(15)
 (FORE) EXADT(14)
 (FORE) EXADT(13)
 (FORE) EXADT(12)
 (FORE) EXADT(11)
 (FORE) EXADT(10)
 (FORE) EXADT(9)
 (FORE) EXADT(8)
 (FORE) EXADT(7)
 (FORE) EXADT(6)
 (FORE) EXADT(5)
 (FORE) EXADT(4)
 (FORE) EXADT(3)
 (FORE) EXADT(2)
 (FORE) EXADT(1)
 (FORE) EXADT(0)
 (FORE) NEXWE

(FORE) P(15)
 (AD) AMUT
 (FORE) KMODE
 (FORE) SCL
 (FORE) SDA
 (AD) CLKSEL
 (AD) SBT1
 (AD) SBO1
 (AD) SBI1
 (AD) DSPCLK_DV1
 (AD) STATUS_DV1
 (AD) CMD

(FORE) NEXCE
 (FORE) NEXO

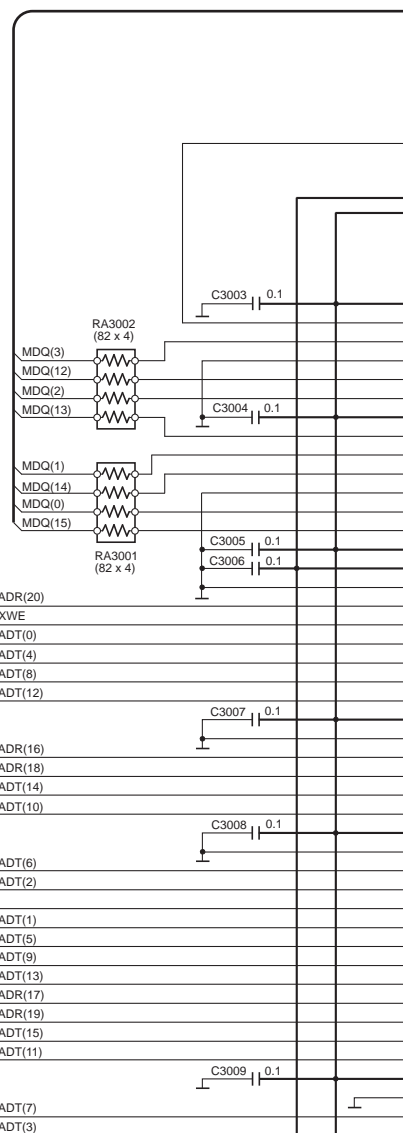


IC6201
C0EBE0000070
RESET IC

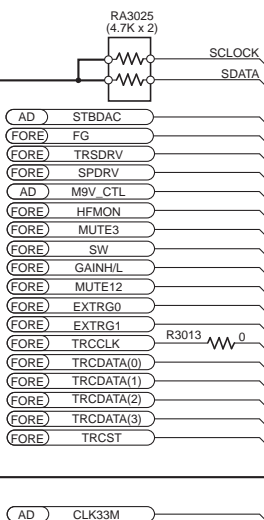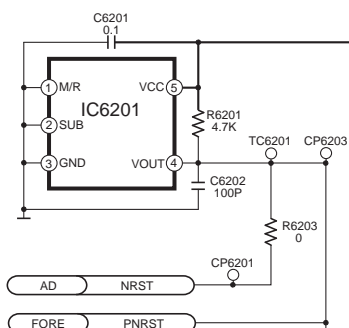

B

———— : +B SIGNAL LINE

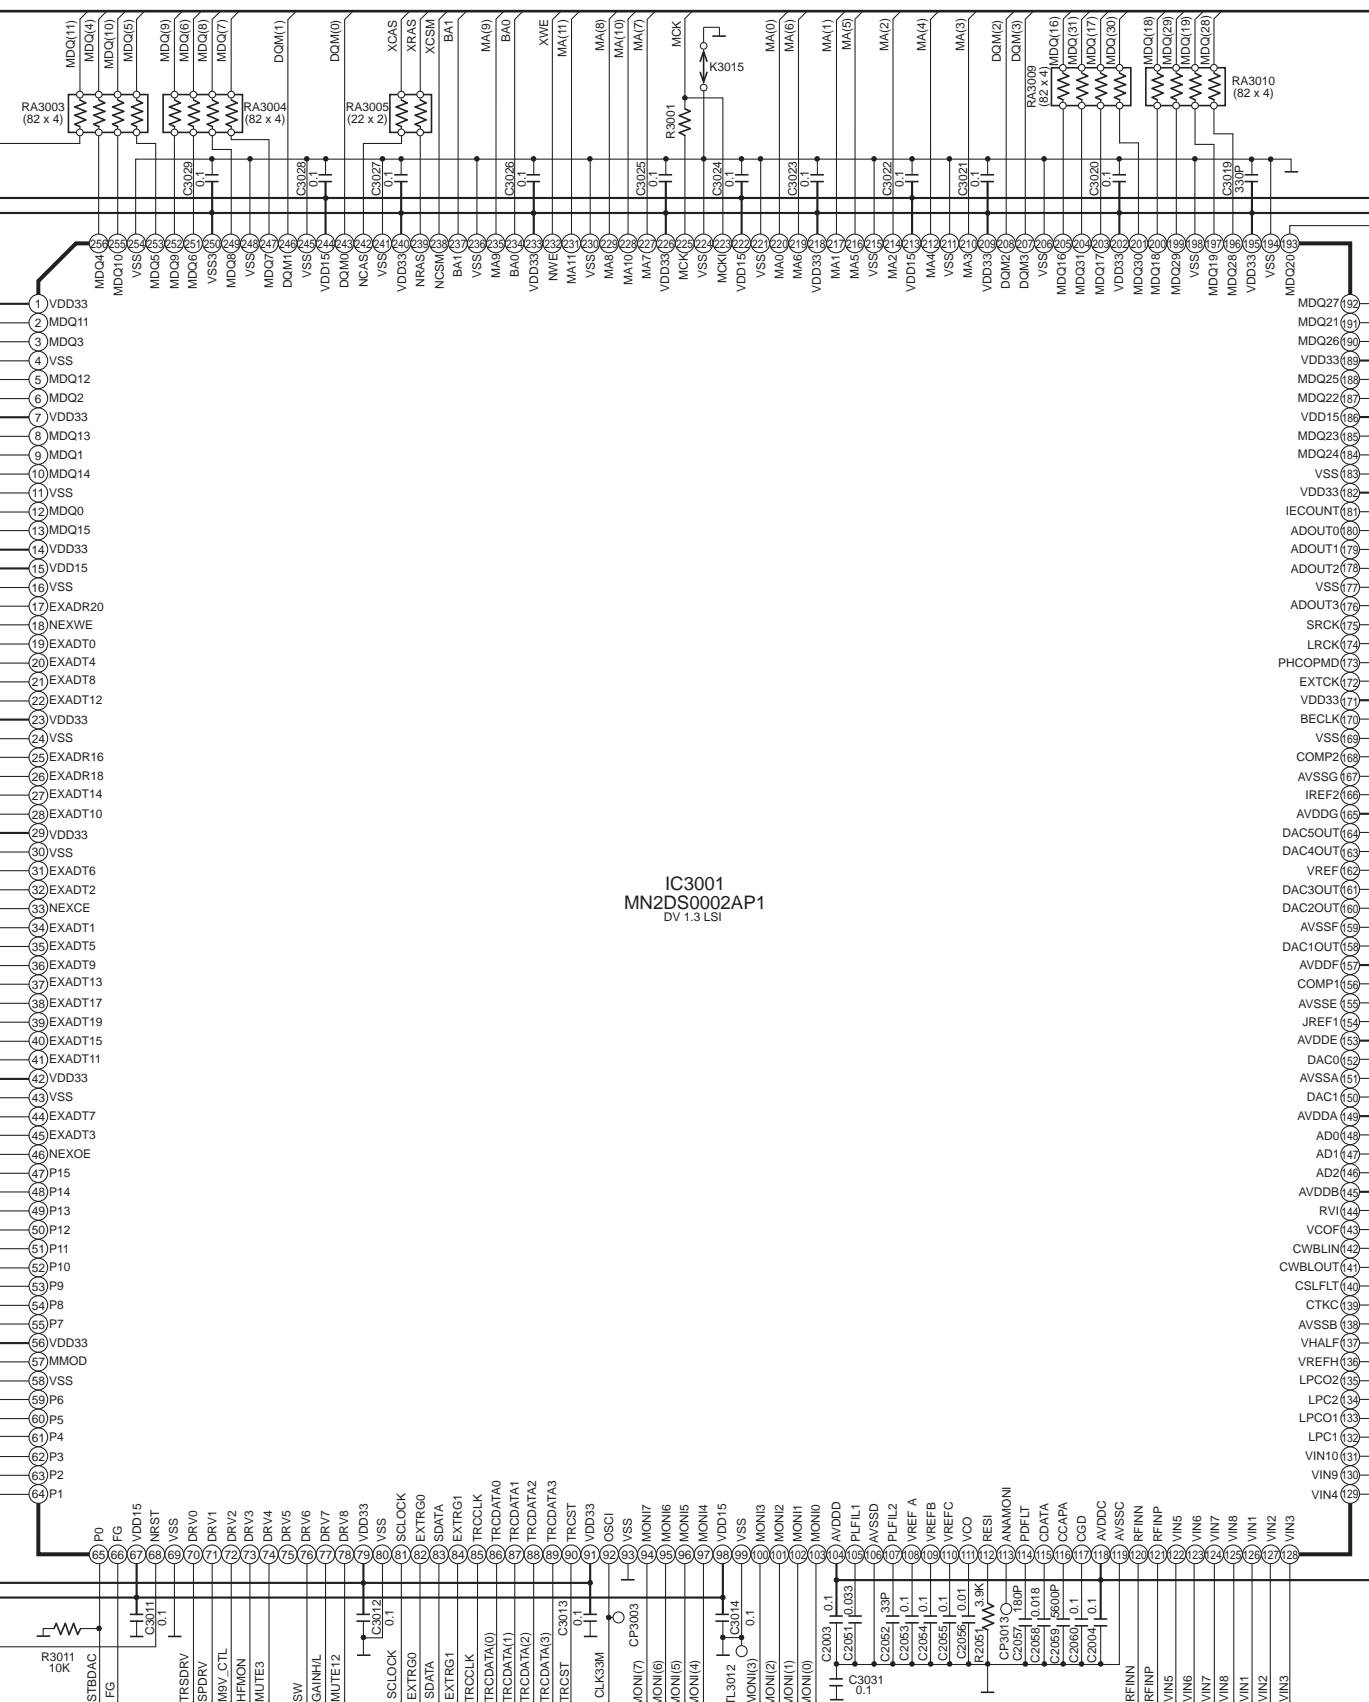

B

DVD MODULE 2 (DV1) CIRCUIT

 : CD-DA SIGNAL LINE

 : DVD (AUDIO) SIGNAL LINE

• : +B SIGNAL LINE

 : DVD (VIDEO) SIGNAL LINE

