

P Red Lamp

Temperature Alarm; when an abnormal temperature is designated within the freezer compartment, red warning lamp lights on

Q Green Lamp

When this lamp is lights on, it means that the device is connected to the electrical feeding.

R Yellow Lamp

This lamp is lights on when fast freezing button “T” is pressed.

S Temperature Adjustment Knob of the Freezer Compartment


This knob is used to adjust the temperature of the freezer compartment and to select some functions.

- The refrigerator is off. If the power cord remains connected to the plug, the green lamp “Q” (on) remains lighted.



HOLIDAY FUNCTION

Mould and bad odours forming inside your unused refrigerator when you go on holiday, need no longer be a problem. Just enable the Holiday function. By turning the freezer compartment temperature adjustment knob on to the symbol, the freezer compartment will continue to operate at a temperature of -18°C. At the same time by turning the fridge compartment temperature adjustment knob onto the same symbol, the fridge compartment will operate at a temperature of ca. +11°C. (You can store your make-up and beauty products in it, for example) .

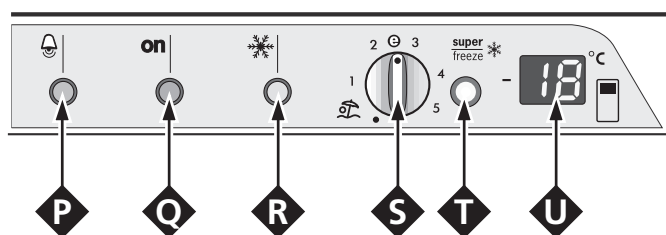

E ECO FUNCTION

Optimum temperature level for lower consumption: Turn also the knob in the fridge compartment on to the ECO function.

T Fast Freezing Button

Pressing the button enables the freezing of fresh foods (The yellow lamp “R” lights on)

U Display Freezer

Displays the temperature set in the freezer compartment and the two types of the alarms A1 and A2 of the critical temperature.