

D) ELENCO DEI CODICI DI ERRORE ATTUALMENTE DISPONIBILI:

ERROR CODE	Times the LED FLASHES	Seconds the LED stays OFF	MOST PROBABLE REASON FOR THE ISSUING OF ERROR CODE:
ERROR 01	1	5	Door Safety Device/Drum's Braking device defective and/or Wiring.
ERROR 02	2	5	The Water Fill Phase was not completed within the designed limit time. Defective Solenoid Valve, Pressostat, Water Fill Hose, Low Water Pressure in the network and/or Wiring.
ERROR 03	3	5	The Water Drain Phase was not completed within the designed limit time. Clogged Filter, Drain Pump, Drain Hose, Wall Discharge and/or Wiring.
ERROR 04	4	5	Several (3) interventions by the Anti-flood Safety Contact of Pressostat. Solenoid Valve blocked opened, defective Pressostat and/or Wiring.
ERROR 05	5	5	NTC Temperature Reading Probe opened or shorted and/or Wiring.
ERROR 06	6	5	Eeprom – Defective "Cuore" Control Module and/or Wiring.
ERROR 07	7	5	Jammed Motor's Rotor and/or Wiring.
ERROR 08	8	5	Defective Tachometric Dynamo (opened or shorted) and/or Wiring.
ERROR 09	9	5	Defective "Cuore" Control Module (damaged Motor's TRIAC) and/or Wiring.
ERROR 10	10	5	Missing dialogue between "Cuore" Control Module and Display board and/or Wiring.
ERROR 12	12	5	Missing dialogue between "Cuore" Control Module and Display board and/or Wiring.
ERROR 14	14	5	Missing Water Heating: defective NTC Probe and/or defective Water Heating Element and/or Wiring.
ERROR 15	15	5	Defective "Cuore" Control Module – Not Programmed "Cuore" Control Module.
ERROR 16	16	5	Water Heating Element is short circuited or defective electrical insulation.
ERROR 17	17	5	Wrong signal from Tachometric Dynamo.
ERROR 18	18	5	Defective "Cuore" Control Module and/or Wiring – Wrong Network Frequency.

Best regards.

GIAS Corporate