





SIGNAL LINES

 : MAIN SIGNAL LINE
 : FM/AM SIGNAL LINE

 : DVD (AUDIO) SIGNAL LINE
 : DVD VIDEO SIGNAL LINE

 : TV SIGNAL LINE
 : VIDEO SIGNAL LINE

() Indicates Pin No. of Right Channel

Note : Signal Lines are applicable to the Left Channel only.

