

Remote control

Buttons not explained on this page are used only to operate other equipment. Refer to the separate Remote Control Operation Guide for details.

[, RECEIVER]

Standby/on button.

[1, 2, 3, 4, 5, 6, 7, 8, 9, 0]

To enter radio frequencies and channels.

[, ENTER]

To enter two digit channels.

[DISC, DIRECT TUNING]

To enable selection of radio stations by frequency.

[, , , , ENTER, RETURN]

To operate the on screen menus.

[DIMMER]

For dimming the unit's display and turning off the panel light.

[INPUT MODE]

For selecting AUTO, ANALOG or DIGITAL.

[SLEEP]

To start the sleep timer.

[STEREO/2CH MIX]

For selecting STEREO or 2CH MIX mode.

[DOLBY PRO LOGIC II]


For selecting a Dolby Pro Logic II mode: MOVIE, MUSIC or PANORAMA.

[NEO:6]

For selecting a NEO:6 mode: CINEMA or MUSIC.

[SFC]

For selecting SFC modes.

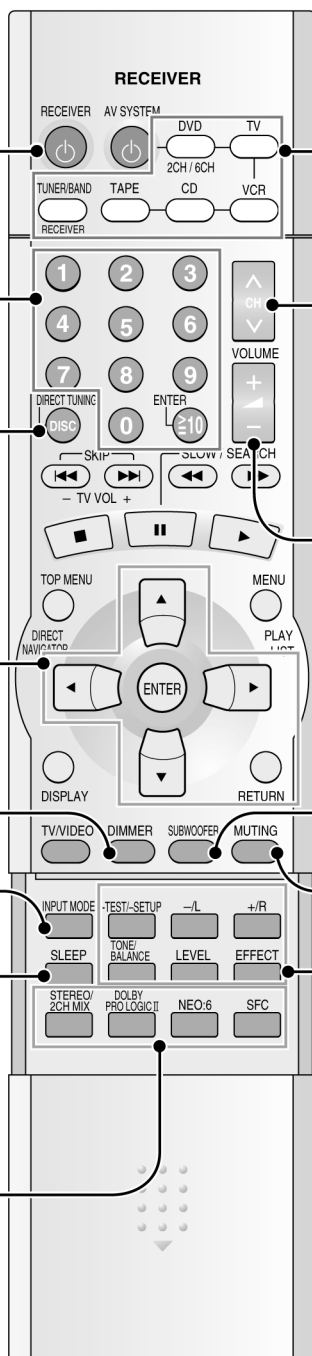

[DVD 2CH/6CH, TV, TUNER/BAND RECEIVER, TAPE, CD, VCR]

[DVD 2CH/6CH, TV,

Input mode and remote control mode buttons.

DVD 2CH/6CH: For switching between 6-channel and 2-channel DVD input.

These buttons light when you press other buttons to indicate the current remote control mode.

[, CH,

For selecting preset radio channels.

[+, -, VOLUME]

To adjust the volume.

[SUBWOOFER]

For selecting subwoofer level.

Adjust the level in 5 steps: SW MIN, SW 5, SW 10, SW 15, and SW MAX.

Select SW --- to stop output.

[MUTING]

To mute the volume.

[-TEST/-SETUP]

To start the speaker test signal or enter the setup menu.

[TONE/BALANCE]

To adjust the bass, treble and front speaker balance.

[LEVEL]

Use when adjusting speaker level.

[EFFECT]

Use when adjusting Dolby Pro Logic II, NEO:6 or SFC effects.

[-L, +R]

First select SLEEP, EFFECT, LEVEL, TONE or BALANCE, then press [-L] or [+R] to adjust.

For your reference

• When DVD 6CH input is on

Speaker settings are ineffective. Change the settings on the DVD player if necessary.

• When using the subwoofer

You cannot adjust subwoofer level if DVD 6CH INPUT is selected.

Sound can be distorted if you raise the volume while subwoofer level is high. Reduce subwoofer level if this occurs.

• When muting is on

Muting is also canceled when the unit is turned off.