



NIXIE CLOCK SETTINGS

Tube number	1	2	3	4	5	6
Function	Displayed Number	Displayed Number	Displayed Number	Displayed Number	Displayed Number	Displayed Number
LED Settings	1 (Settings number)	0 - LEDs OFF	0 - LED effects OFF	0...9 - Manual color change	-----	-----
		1 - LED - Low brightness	1 - Automatic color change			
		2 - LED - High brightness	2 - Seconds in Binary format			
Alarm	2 (Settings number)	0 - Alarm OFF	Hour	Hour	Minute	Minute
		1...9 - Alarm Time ON (x10 seconds)				
Time and Date	3 (Settings number)	0 - Date - display OFF	Hour	Hour	Minute	Minute
		1...9 - Date display ON (every x10 seconds)				
		Day	Day	Month	Month	Year
Temperature	4 (Settings number)	0 - Temp. display OFF	Low Temperature value	Low Temperature value	High Temperature value	High Temperature value
		1...9 - Temp. display ON				
		(every x10 seconds)				
GPS	5 (Settings number)	0 - GPS data - display OFF	0 - Coordinates - display OFF	0 - Altitude - display OFF	0 - Satellites number and Speed display OFF (km/h) 1 - Sat No, Speed - disp. ON	0 - Send GPS data to PC - OFF
		1 - GPS data - display ON	1 - Coordinates (Decimal) - ON	1 - Altitude - display ON		1 - Send GPS data to PC - ON
		2 - Coordinates (Deg/Min/Sec) - ON				(NMEA 0183 protocol)
Time Zone	6 (Settings number)	0 - GMT - Hour	Hour	Hour	-----	-----
		1 - GMT + Hour				