





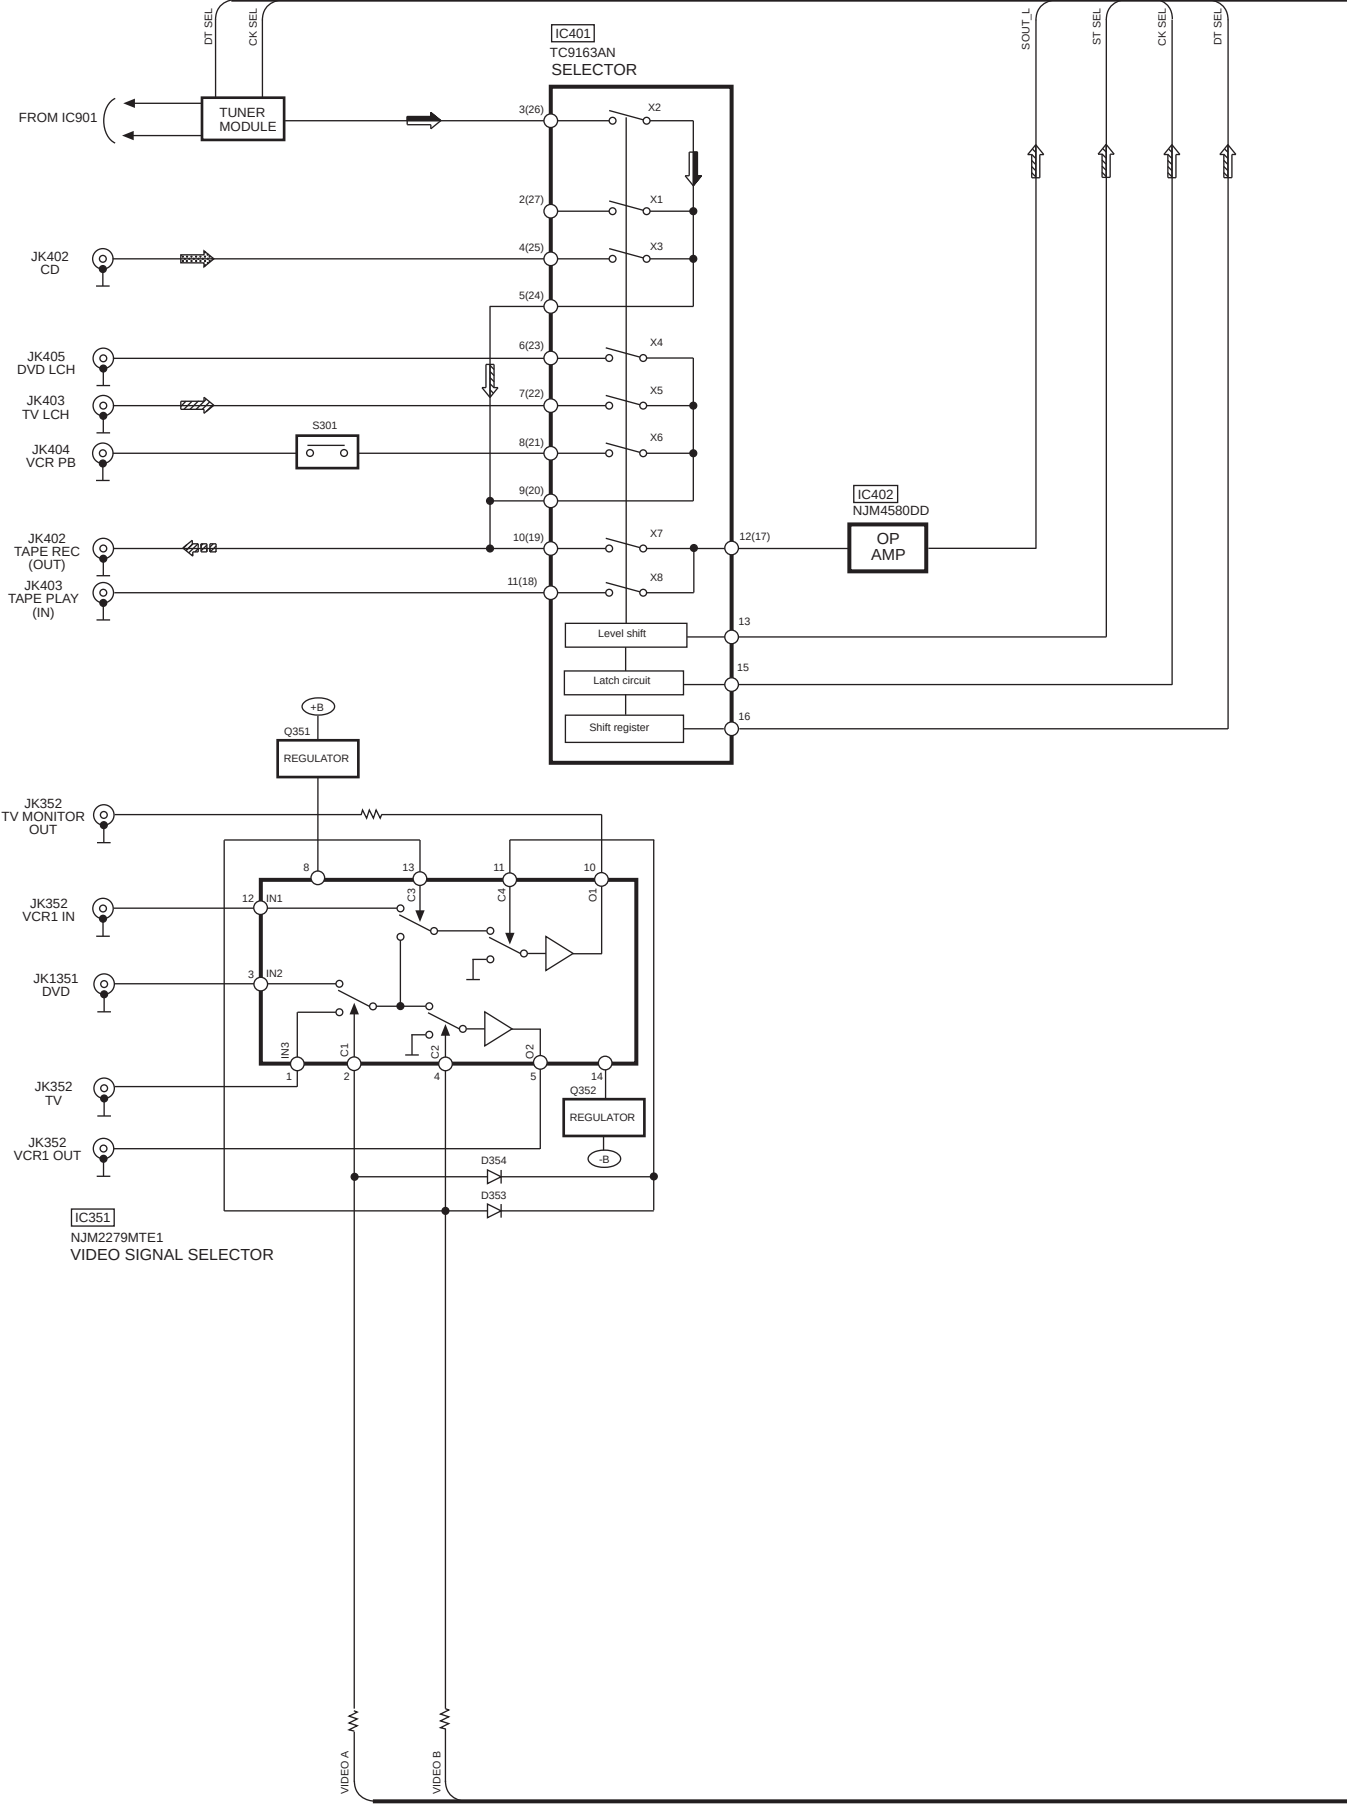


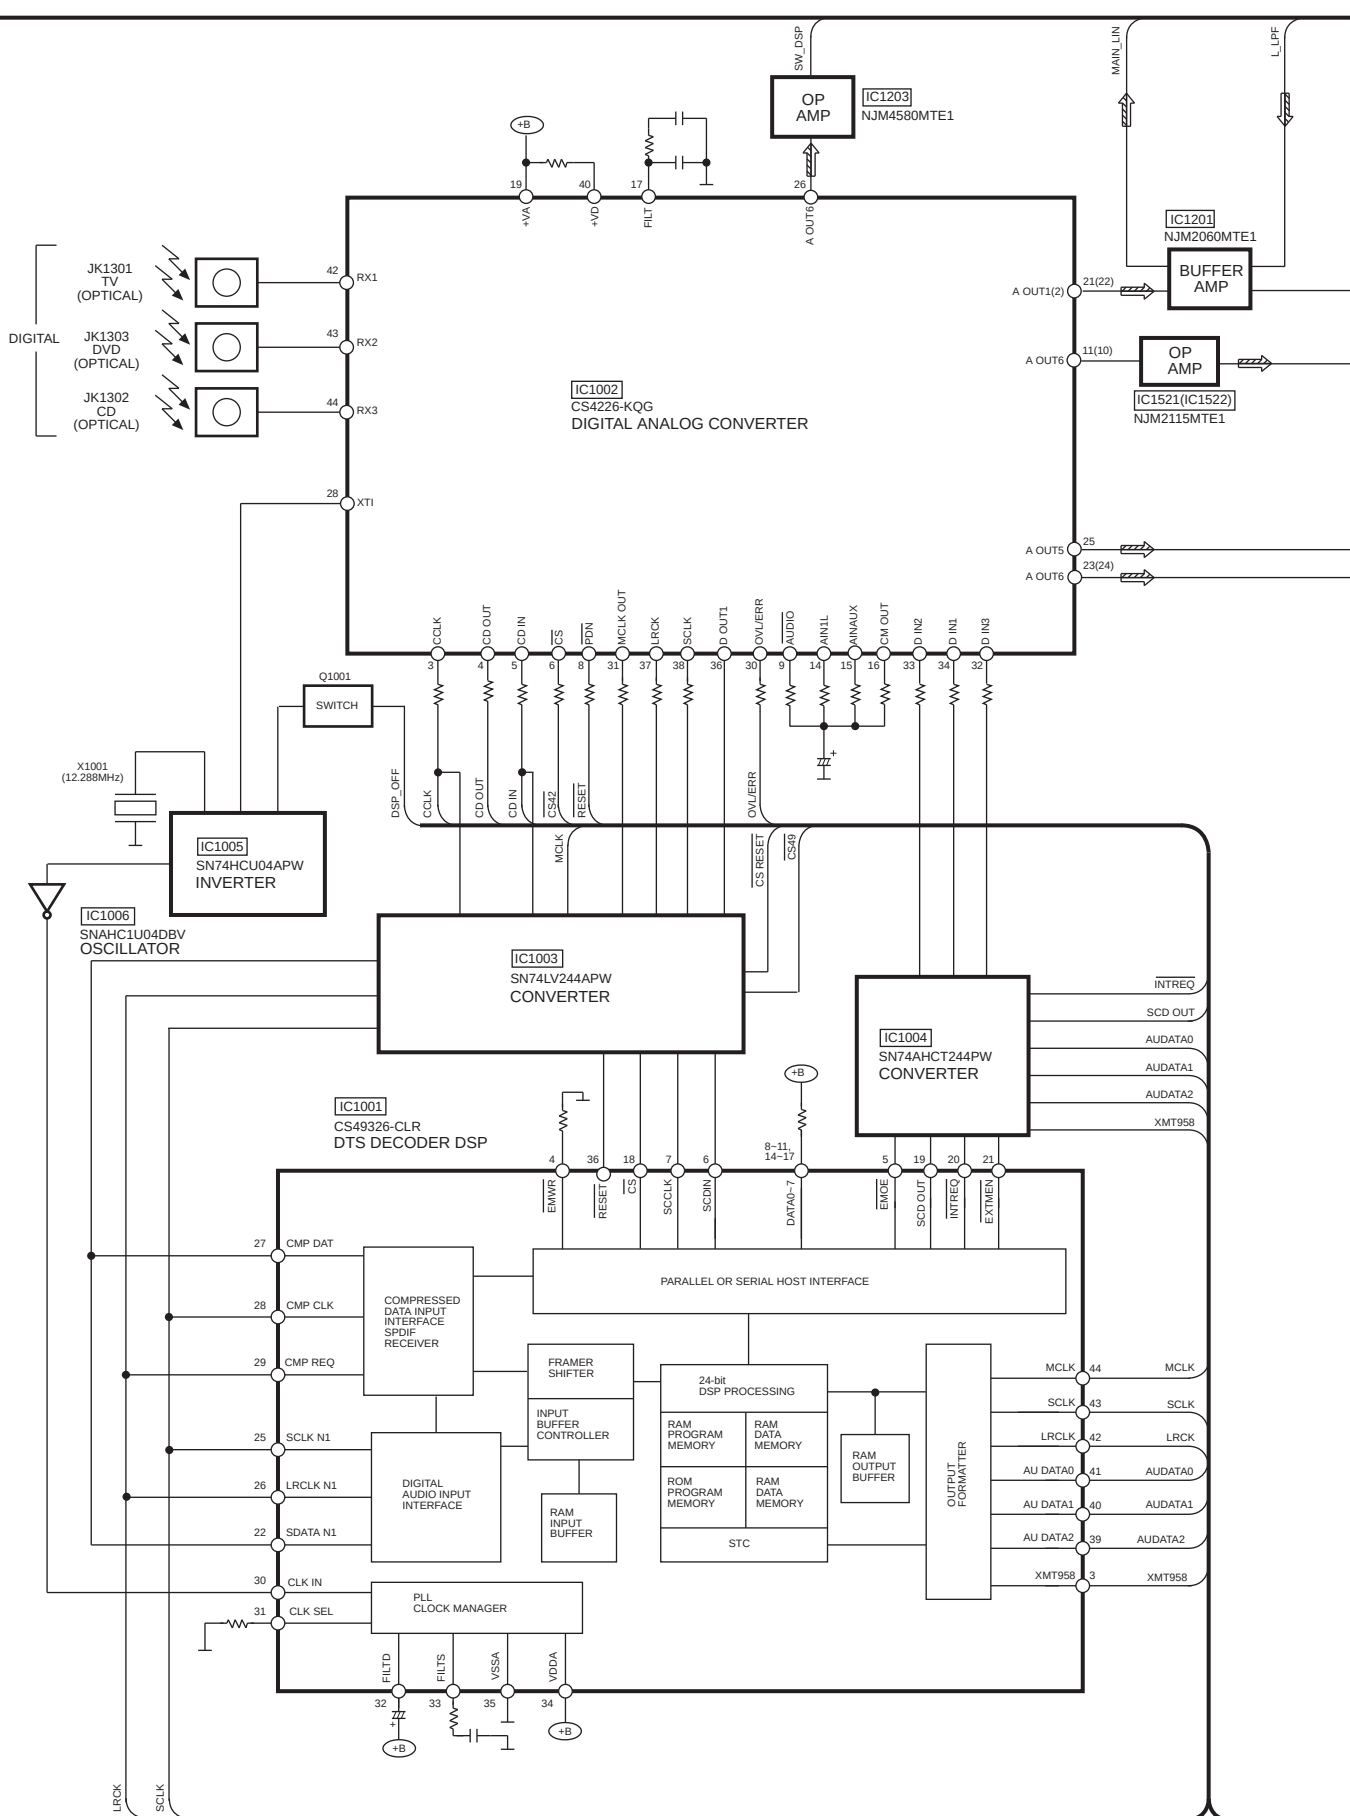


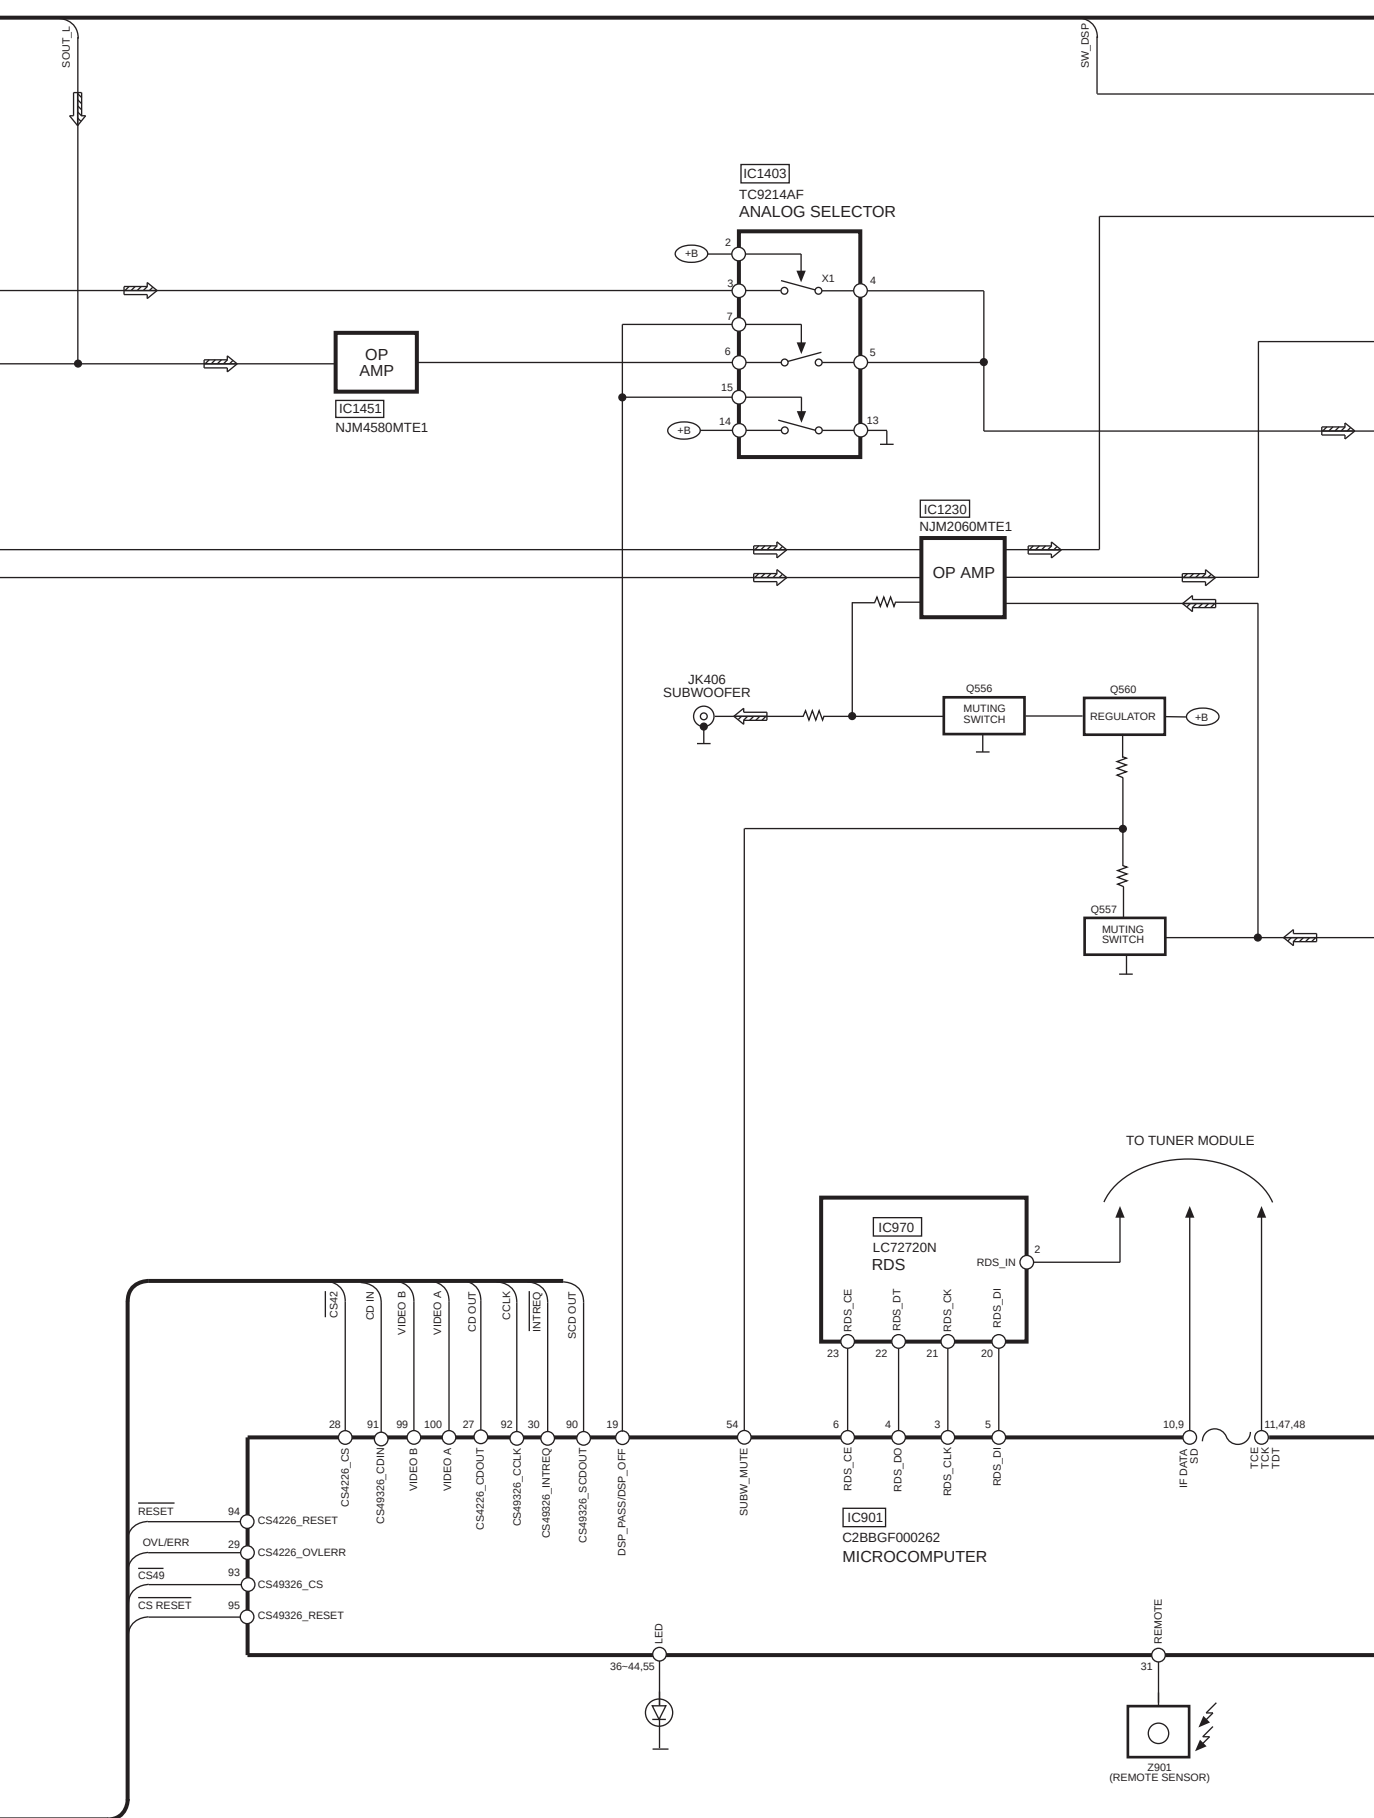

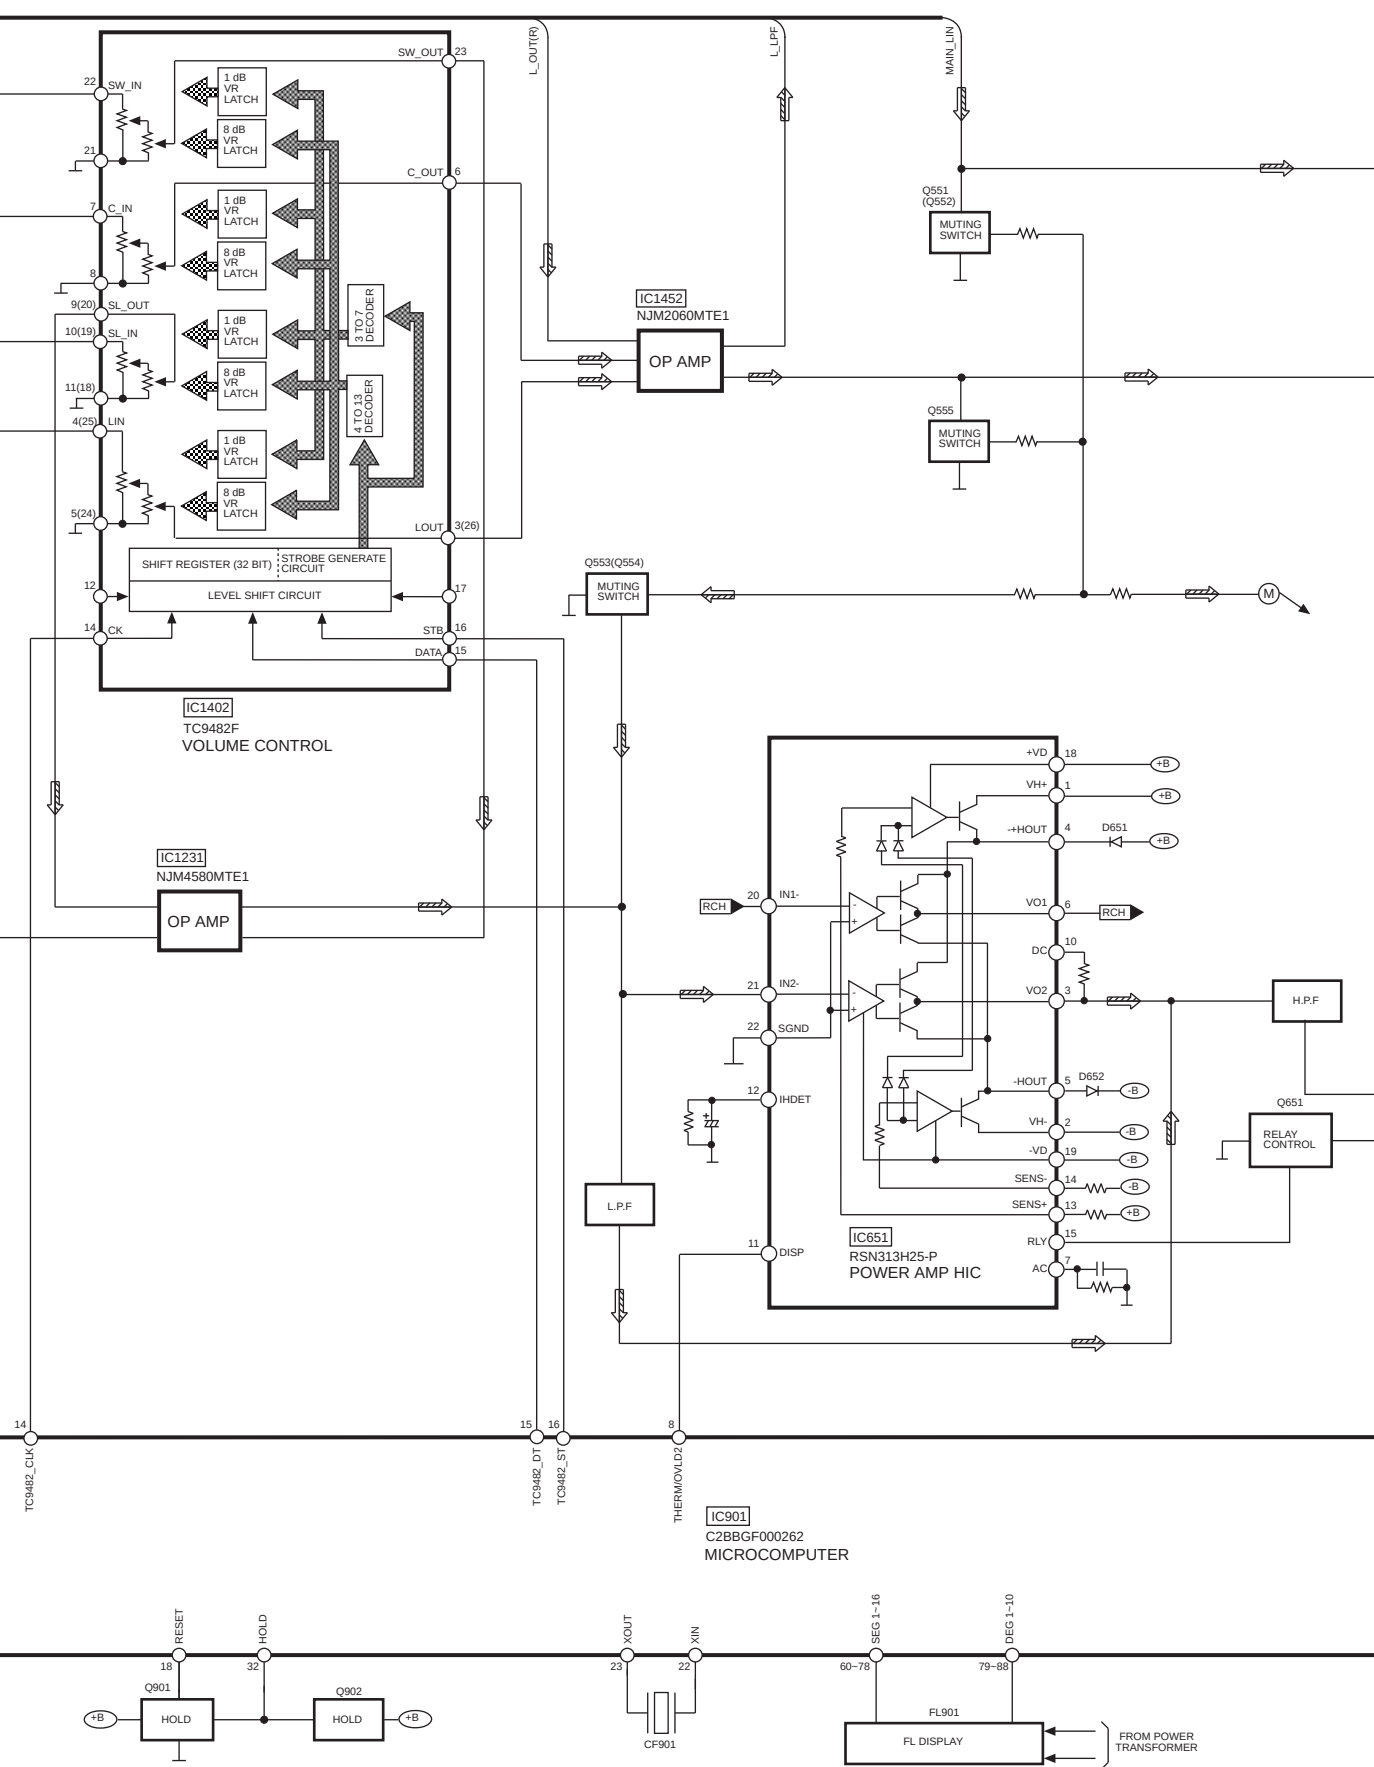

IC601
RSN310R36A-P
POWER AMP HIC

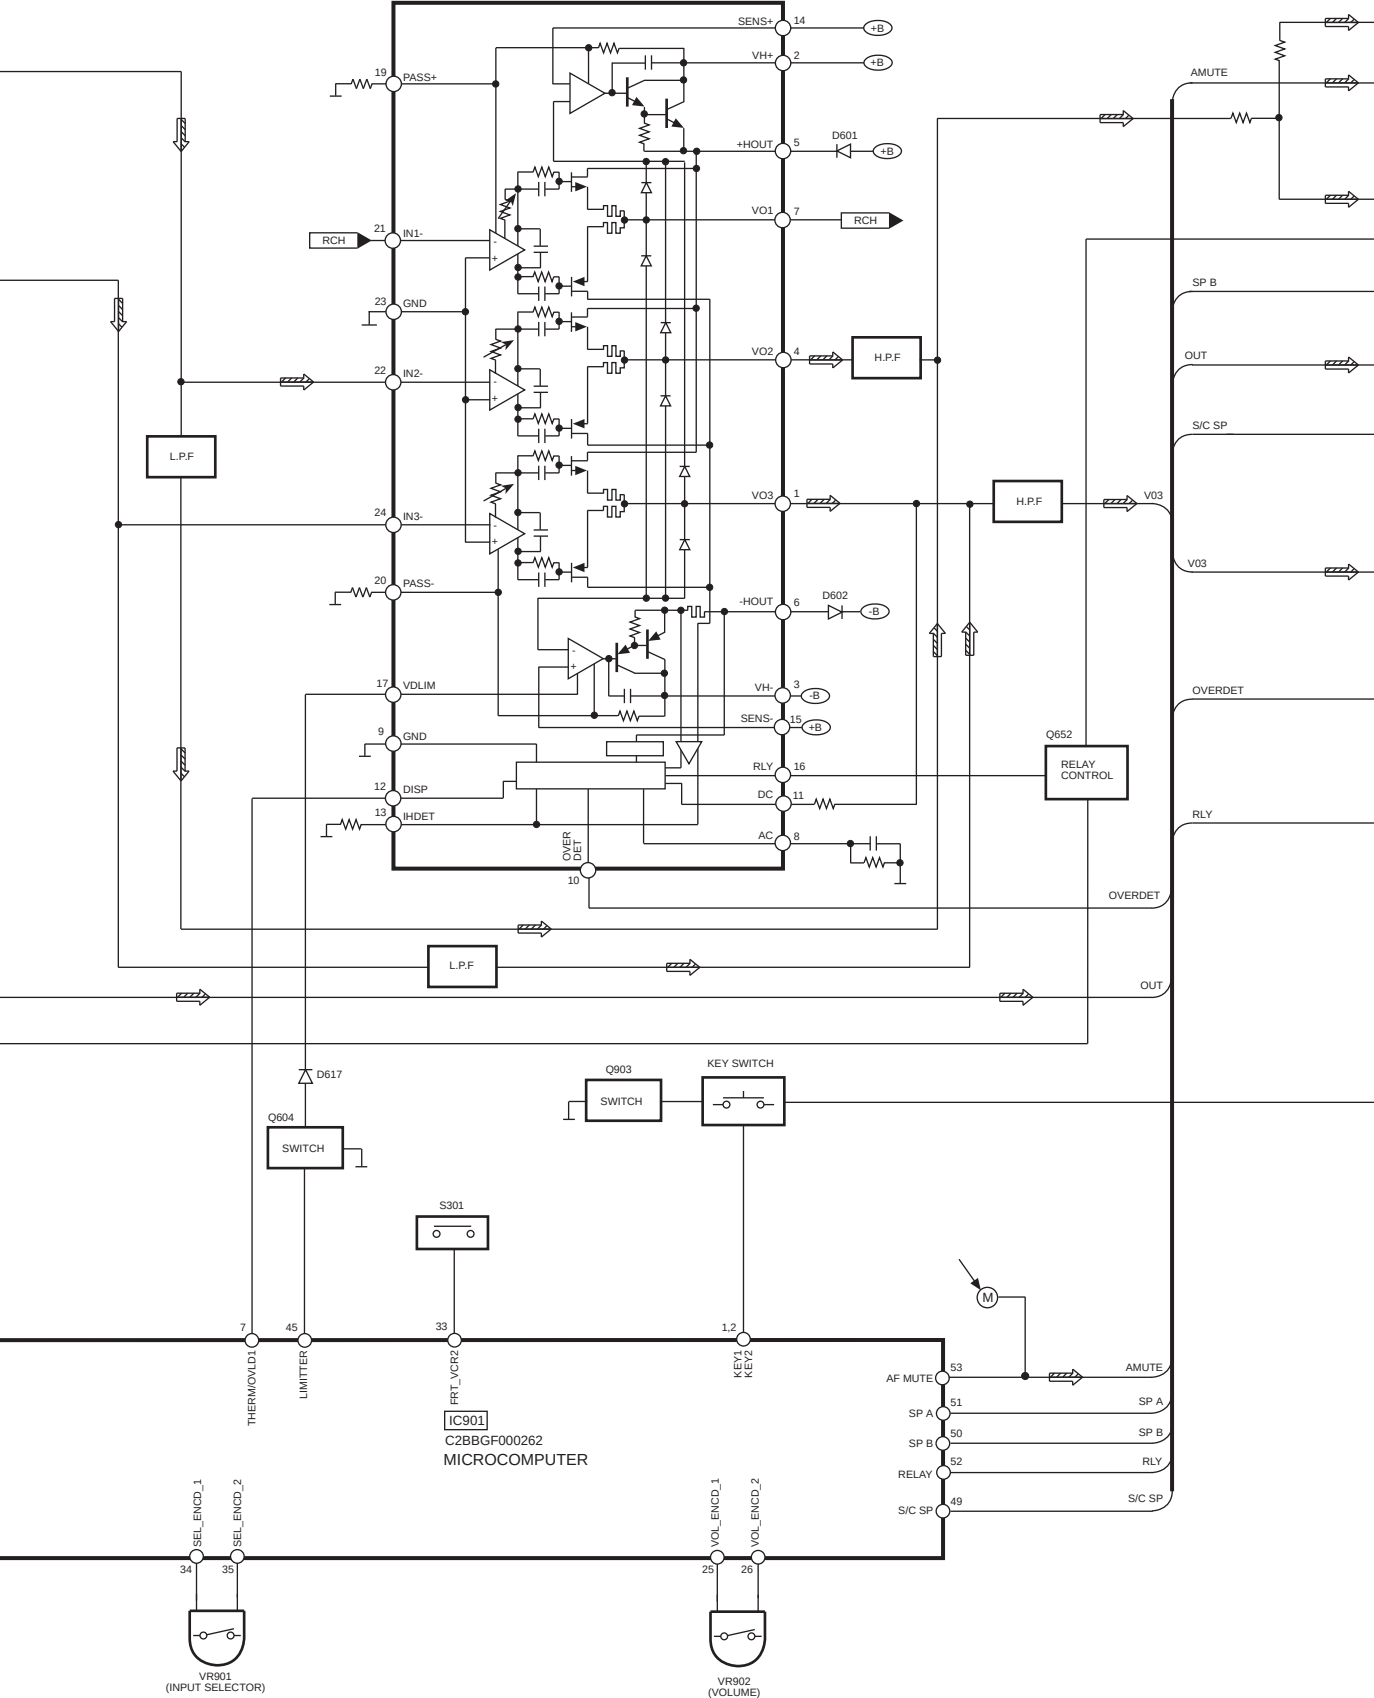

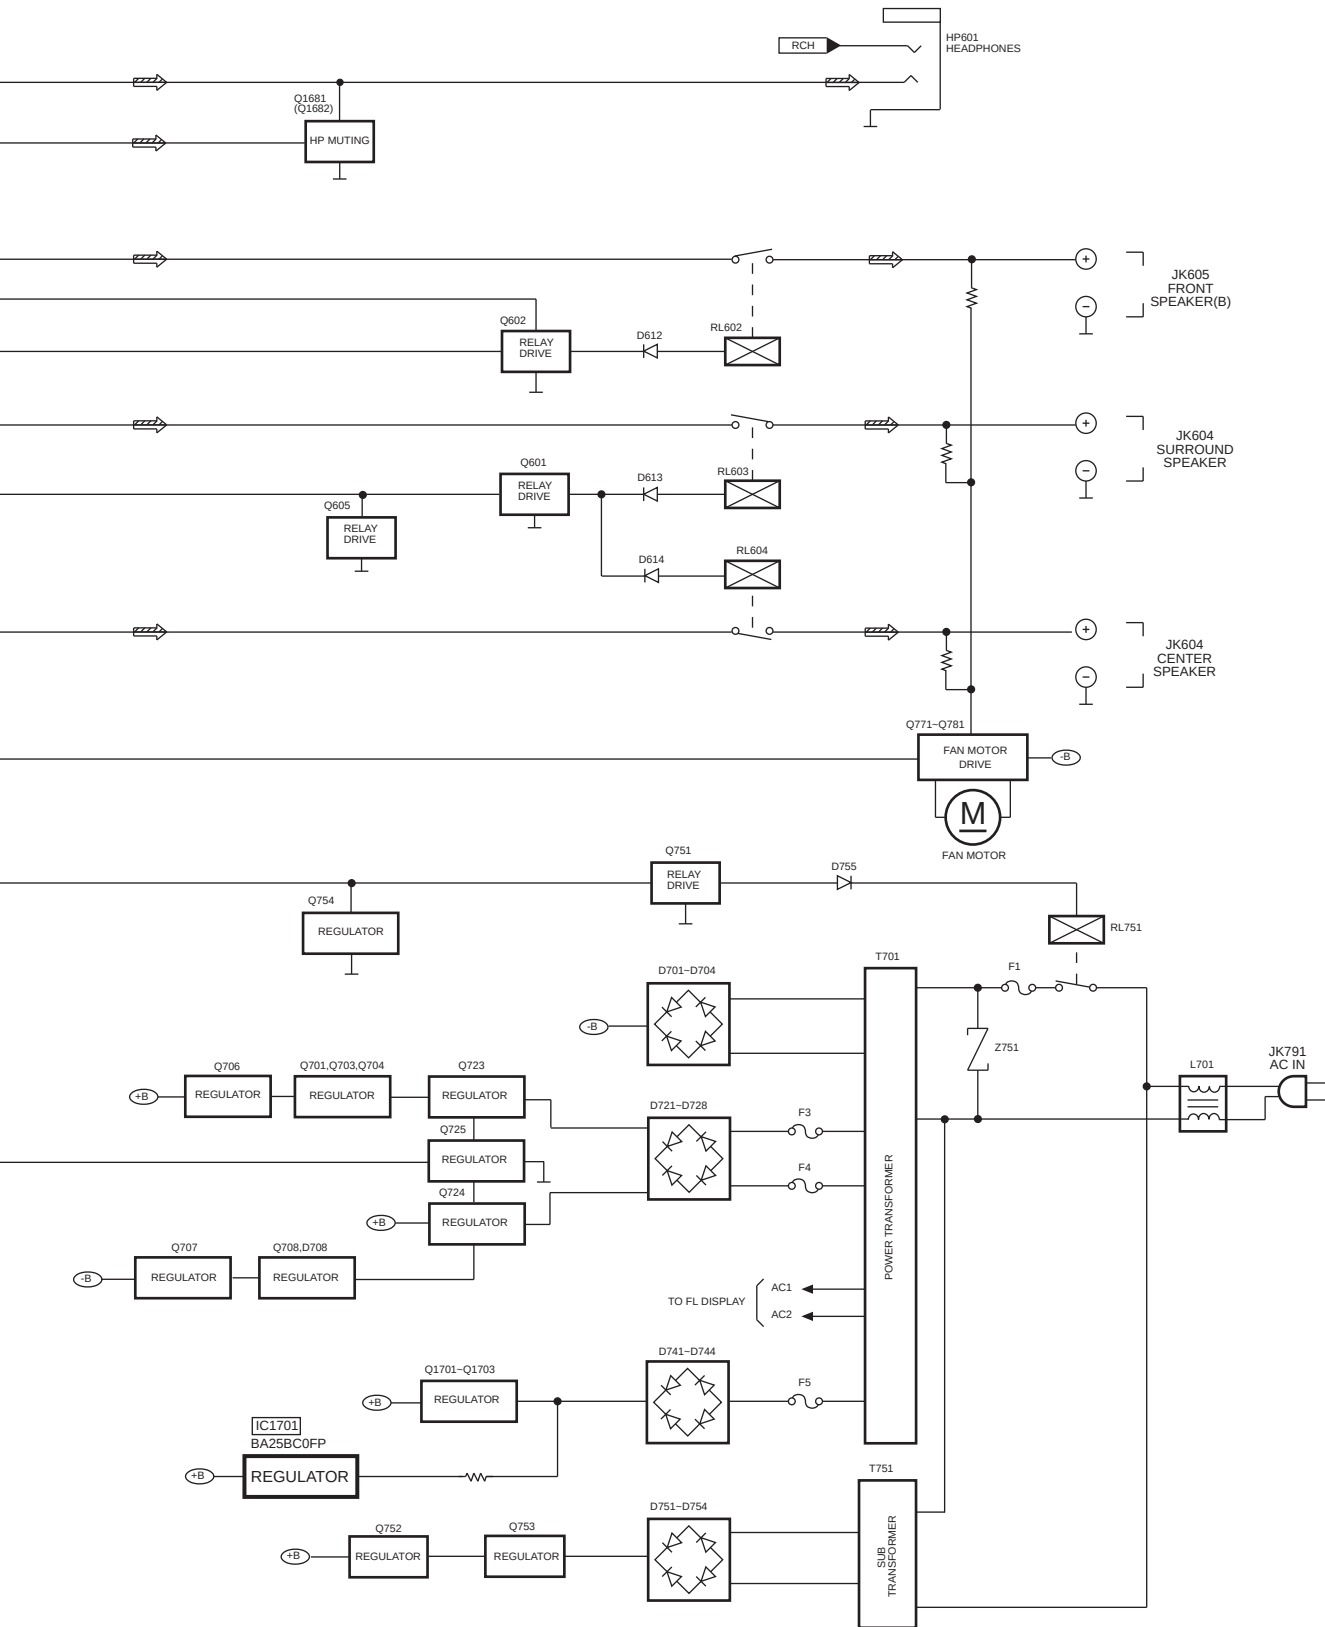

SIGNAL LINES

	MAIN SIGNAL LINE		RECORD SIGNAL LINE
	CD SIGNAL LINE		PLAYBACK SIGNAL LINE
() indicates Pin No. of right channel.			