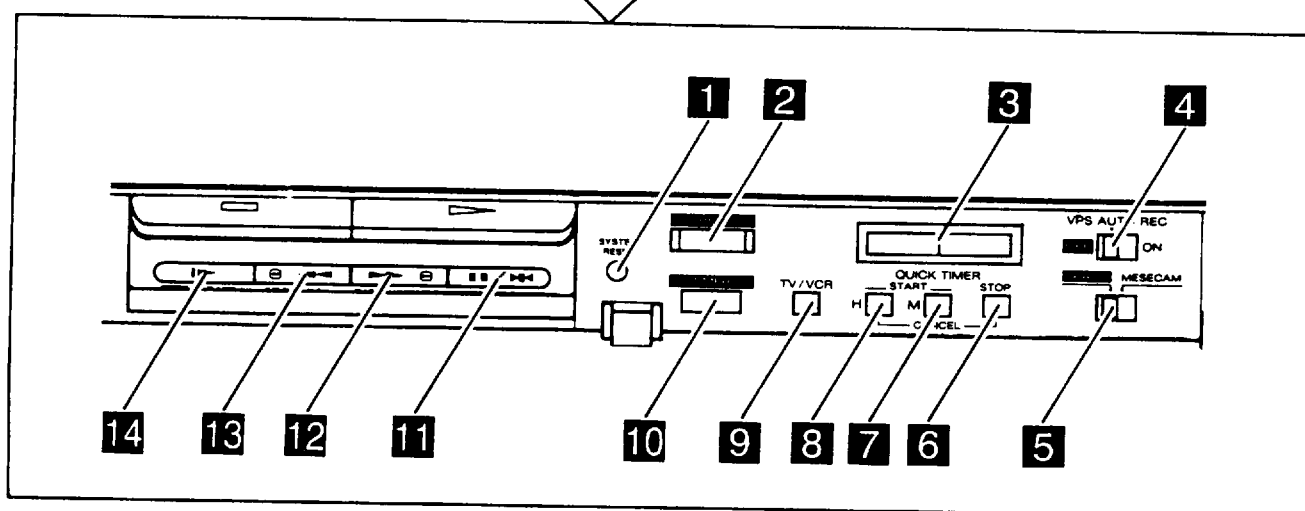 
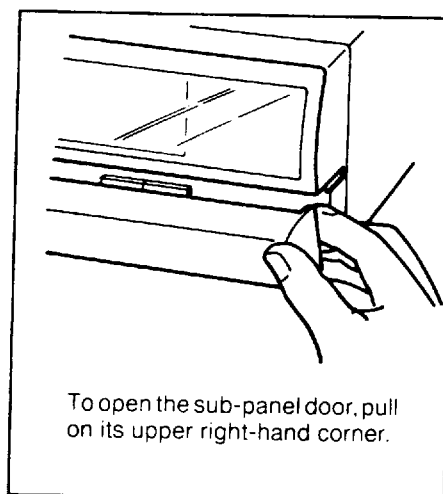 
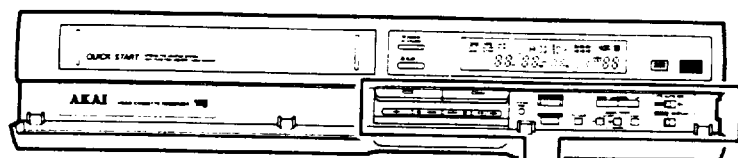 
 

 



## 1-4. SUB PANEL(VS-462EOH ONLY)



- 1 SYSTEM RESET button**  
To reset the VCR if malfunction has occurred. Clock and programme data will be cancelled when the SYSTEM RESET button is pressed.
- 2 REC (Record) button**  
To start recording.
- 3 CHANNEL buttons**  
To select channels.
- 4 VPS AUTO REC switch**  
To set the VPS video programme system on or off. (This feature is optional and requires a VPS adapter available from your video dealer.)
- 5 Video mode switch**  
To select the type of signal to be played back or recorded. PAL: Set to this position for PAL color system playback or recording. (This switch should normally be set to this position). MESECAM: Set to this position for MESECAM color system playback or recording. (MESECAM: Middle East SECAM system B/G.)
- 6 QUICK TIMER STOP button**  
To set the stop time for quick timer recording. Also used to cancel programmes preset for quick timer recording.
- 7 QUICK TIMER M (Minute) button**  
To set the start time minutes for quick timer recording.
- 8 QUICK TIMER H (Hour) button**  
To set the start time hour for quick timer recording. Also used to cancel programmes preset for quick timer recording.
- 9 TV/VCR button**  
To watch a programme on a different TV channel than the one you are recording.
- 10 TIMER button**  
To set or cancel the timer recording mode.
- 11  Pause/still button**  
To set the VCR to the recording pause mode from the recording or stop mode, or to set it to the still mode from the playback mode.
- 12  Fast forward button**  
To fast forward the video tape. Also to start quick finder forward during playback.
- 13  Rewind button**  
To rewind the video tape. Also to start quick finder reverse during playback.
- 14  Slow button**  
To start slow motion playback.