



Main Borad

1. Release 6 screws.(DVI and HDMI are not available for VH222S)

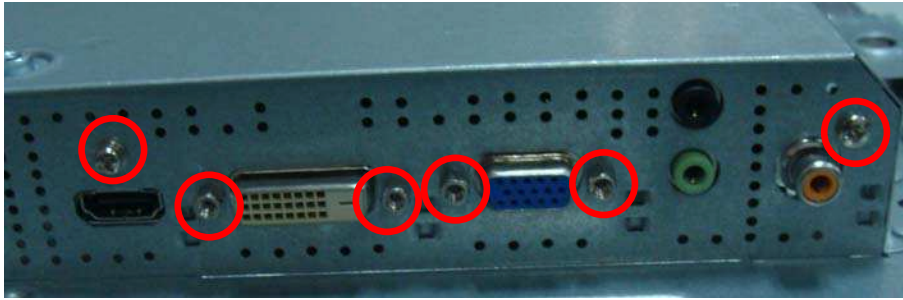

2. Release 3 screws on MAIN BOARD.

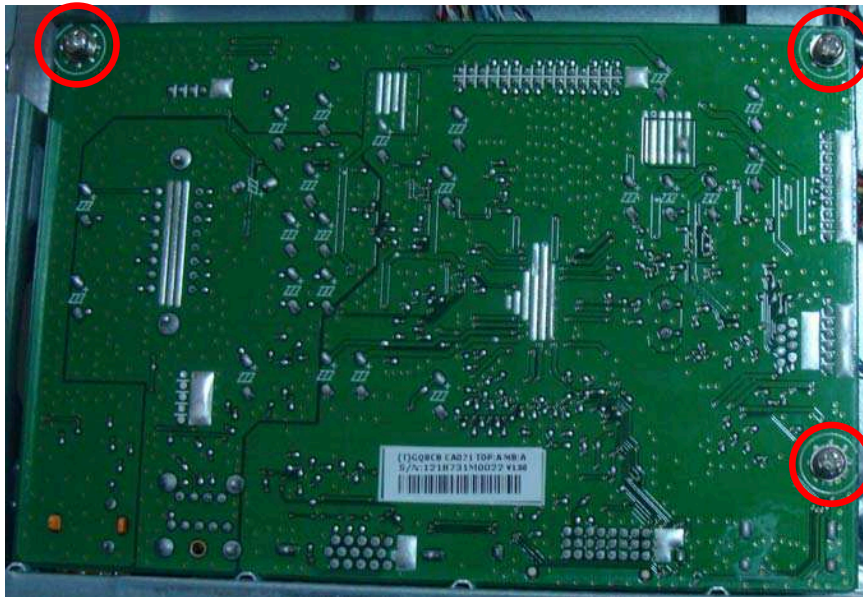

3. Turn over the MAIN BOARD and disconnect AUDIO BOARD CABLE, KEY BOARD CABLE, and MAIN BD_POWER BD CABLE.

