

7.3 Disassembly Procedure

Information in this section is to perform the disassembly procedure of the LCD monitor. Depending on the failures, replace the defective parts accordingly.

ASUS VH222S LCD monitor consists of various subsystems. This section describes the procedures for LCD monitor disassembly. In addition, the detailed disassembly procedures of individual subsystem will be provided for your service needs.

The disassembly procedure consists of the following steps:


3.1 Stand Subsystem

3.2 Main Subsystem

3.3 Bezel Subsystem

7.3.1 Stand Subsystem

1. Unlock the latches under BASE to dismount.

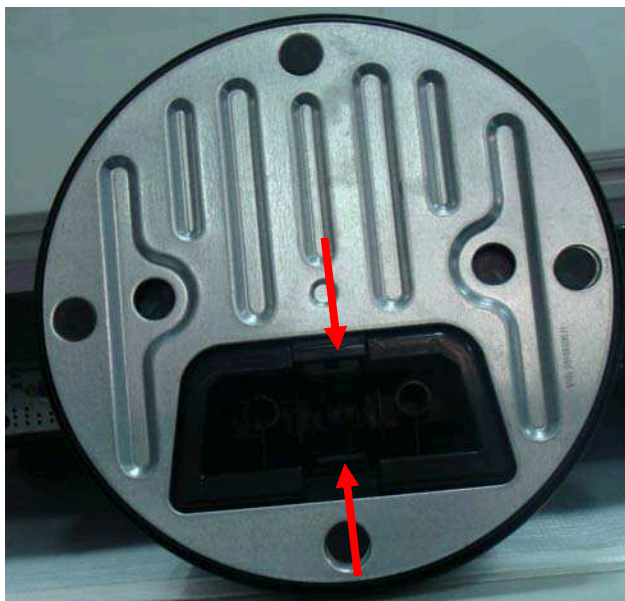

2. Use C/D disassembly tool to unlock STAND COVER.

