

7.3.2 Main Subsystem

Back Cover

Use disassembly tool to open 6 latches at the bottom of BACK COVER as below, and open the other latches along the edge of the BACK COVER, then lift and remove BACK COVER.



Key Board

1. Unlock left and right latches to dismount KEY BOARD.



2. Disconnect KEY BOARD CABLE.



Main Shielding

1. Disconnect LAMP WIRES.

