

Service Manual

2. Release 2 screws and pull down the MAIN SHIELDIGN.

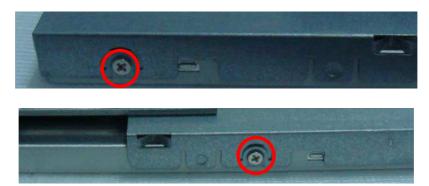

3. Press to release left and right latches of LVDS CABLE, and then disconnect it.

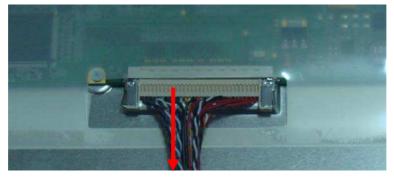

4. Remove the MAIN SHIELDING away from the LCD PANEL.

