



Assistenza Tecnica

After Sales Service

Service Apres Vente

Kundendienst

 
Servicio Post-Venta

 
CANDY

 
DISHWASHER

 
32000126 CDF615A 85S

 
Service Manual

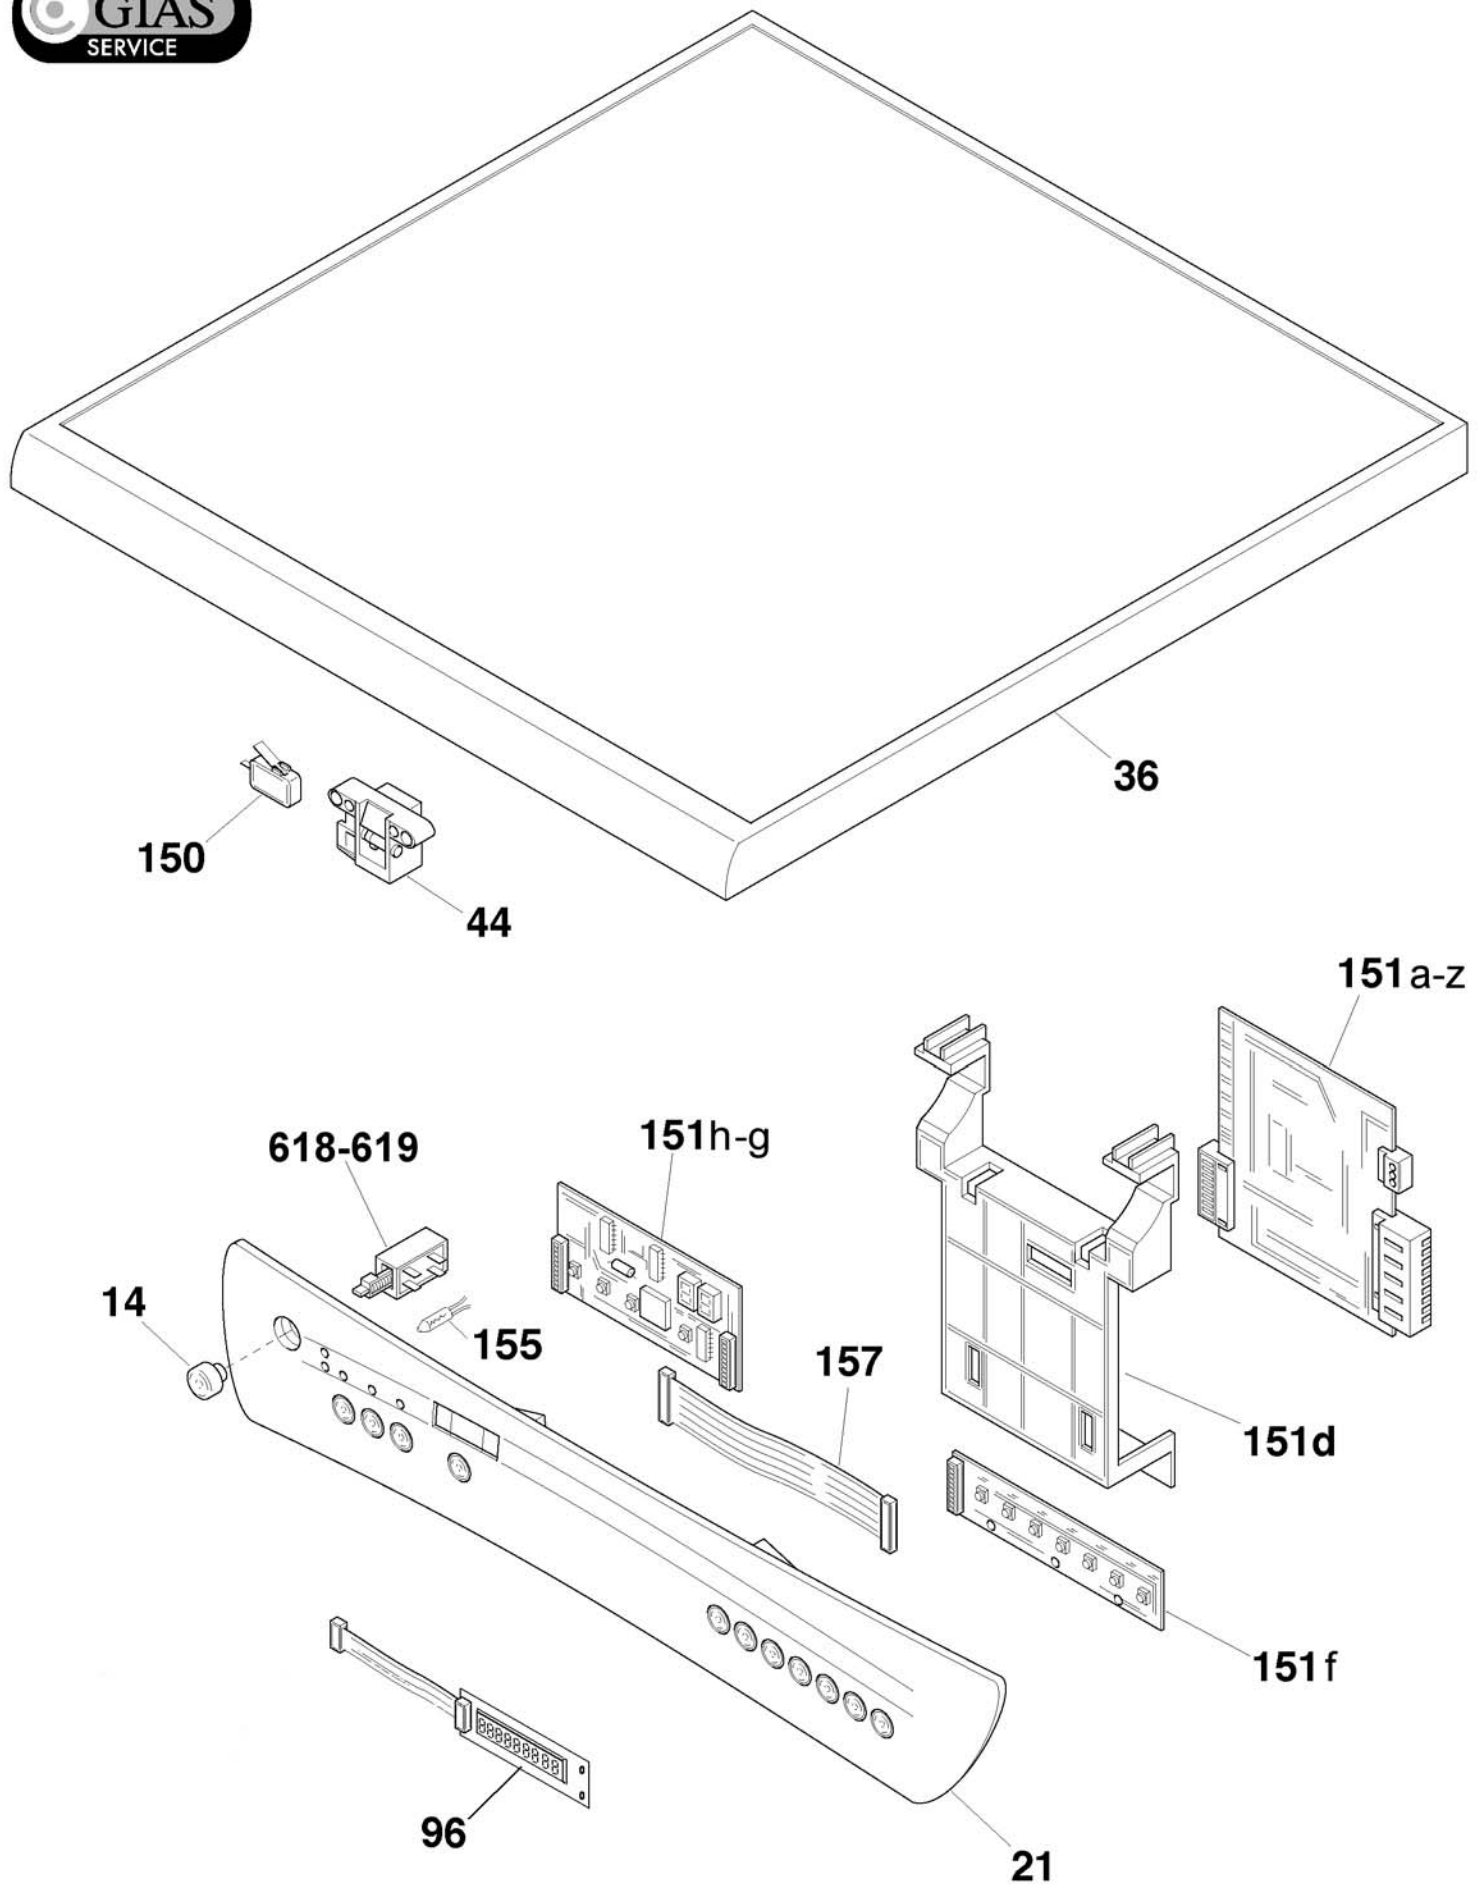 


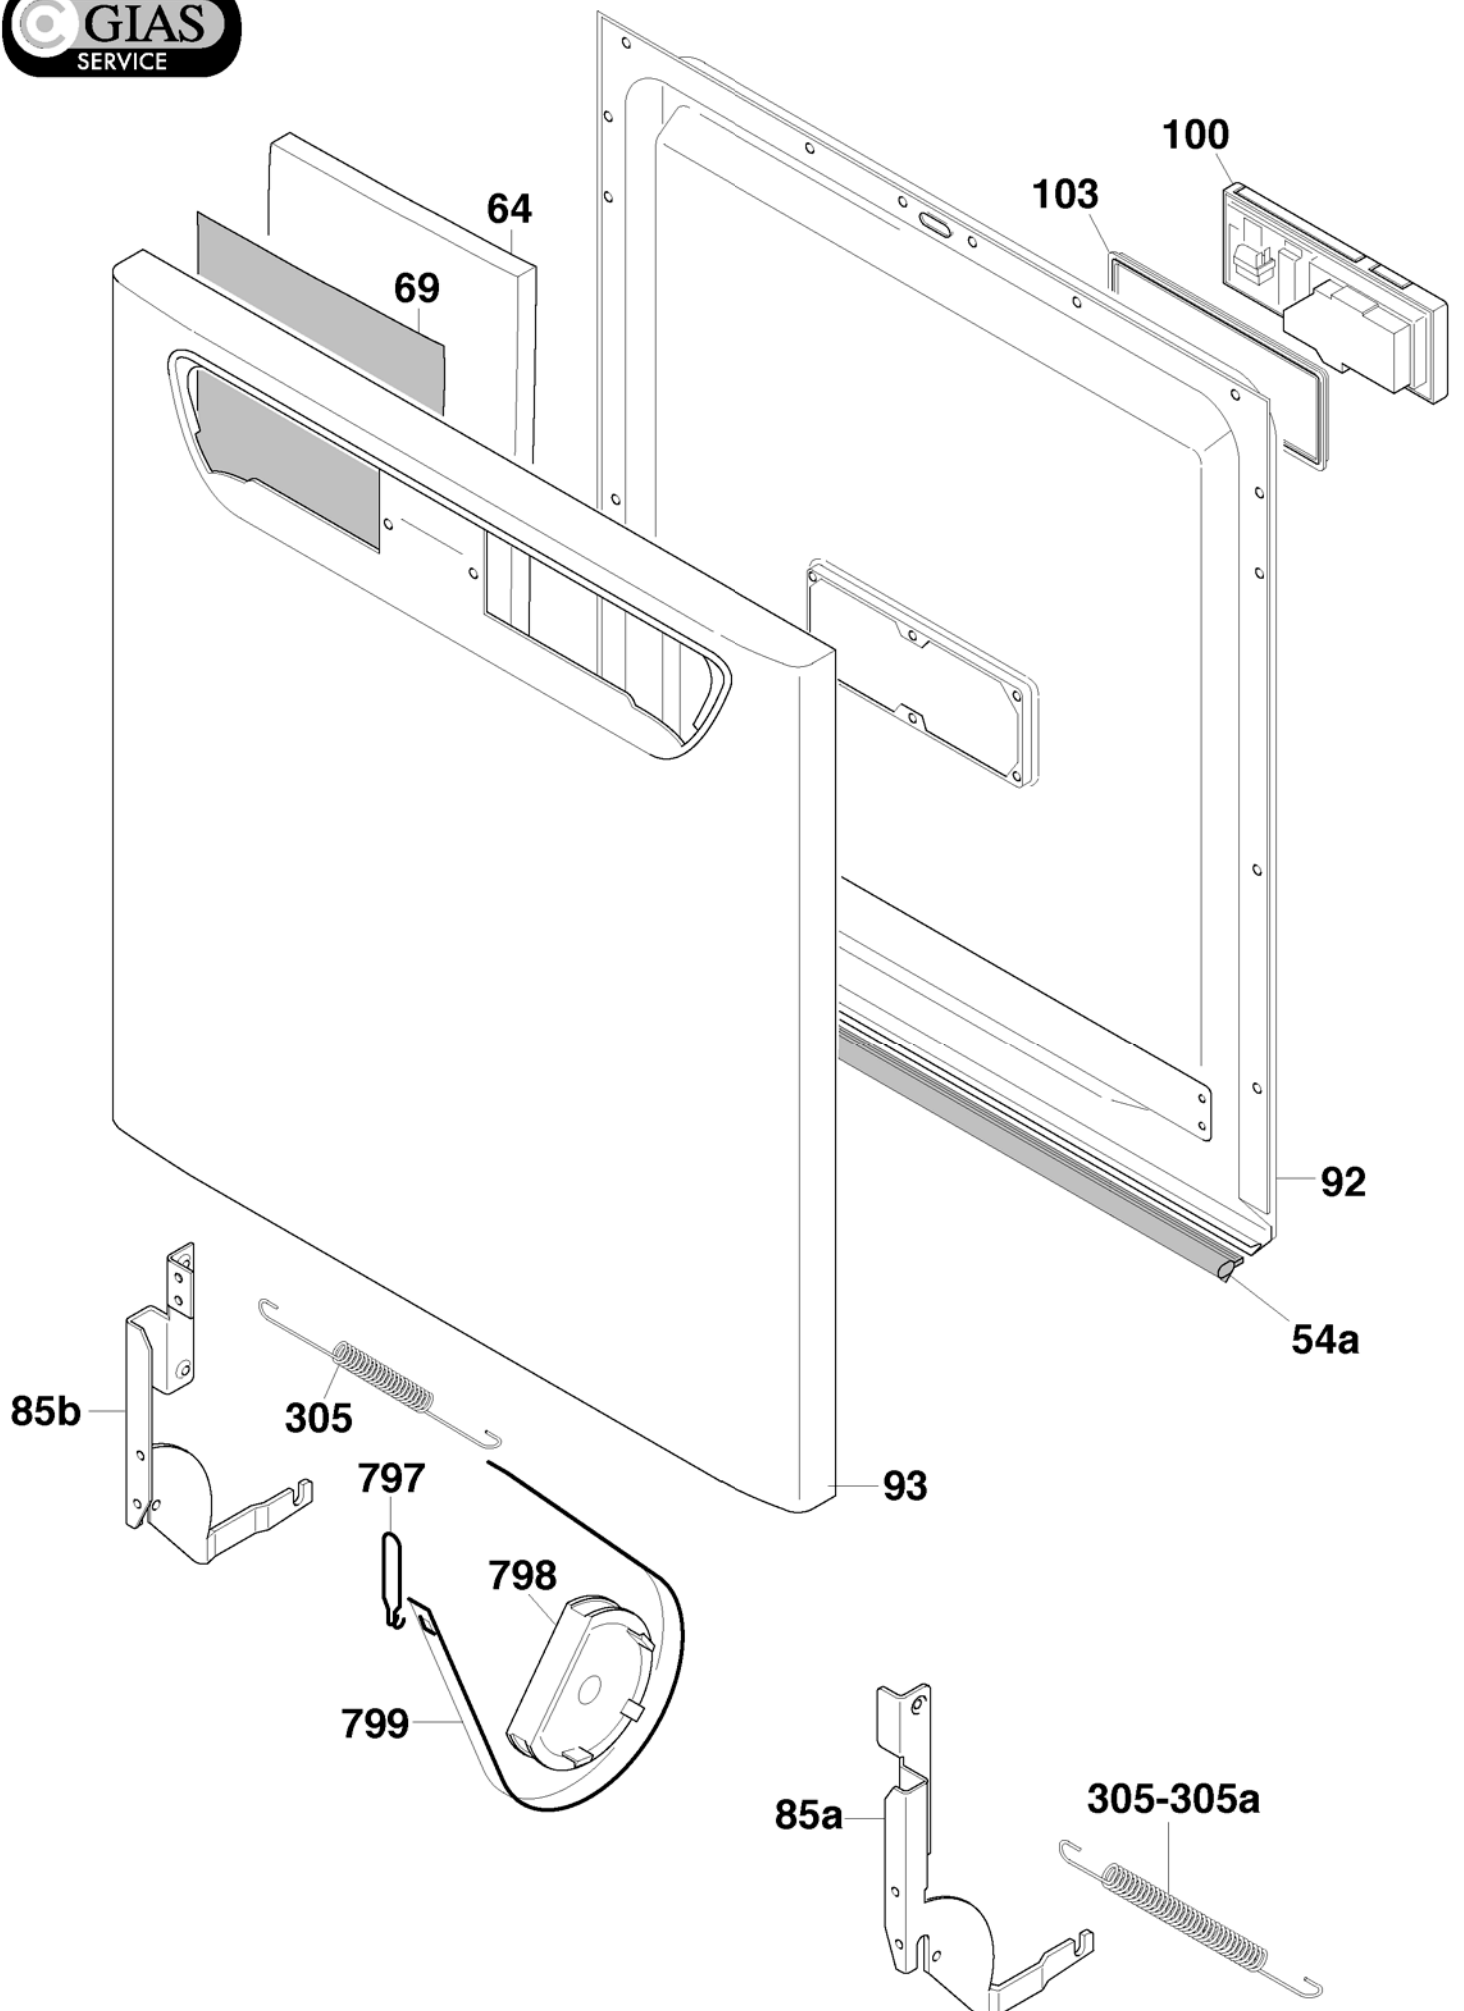

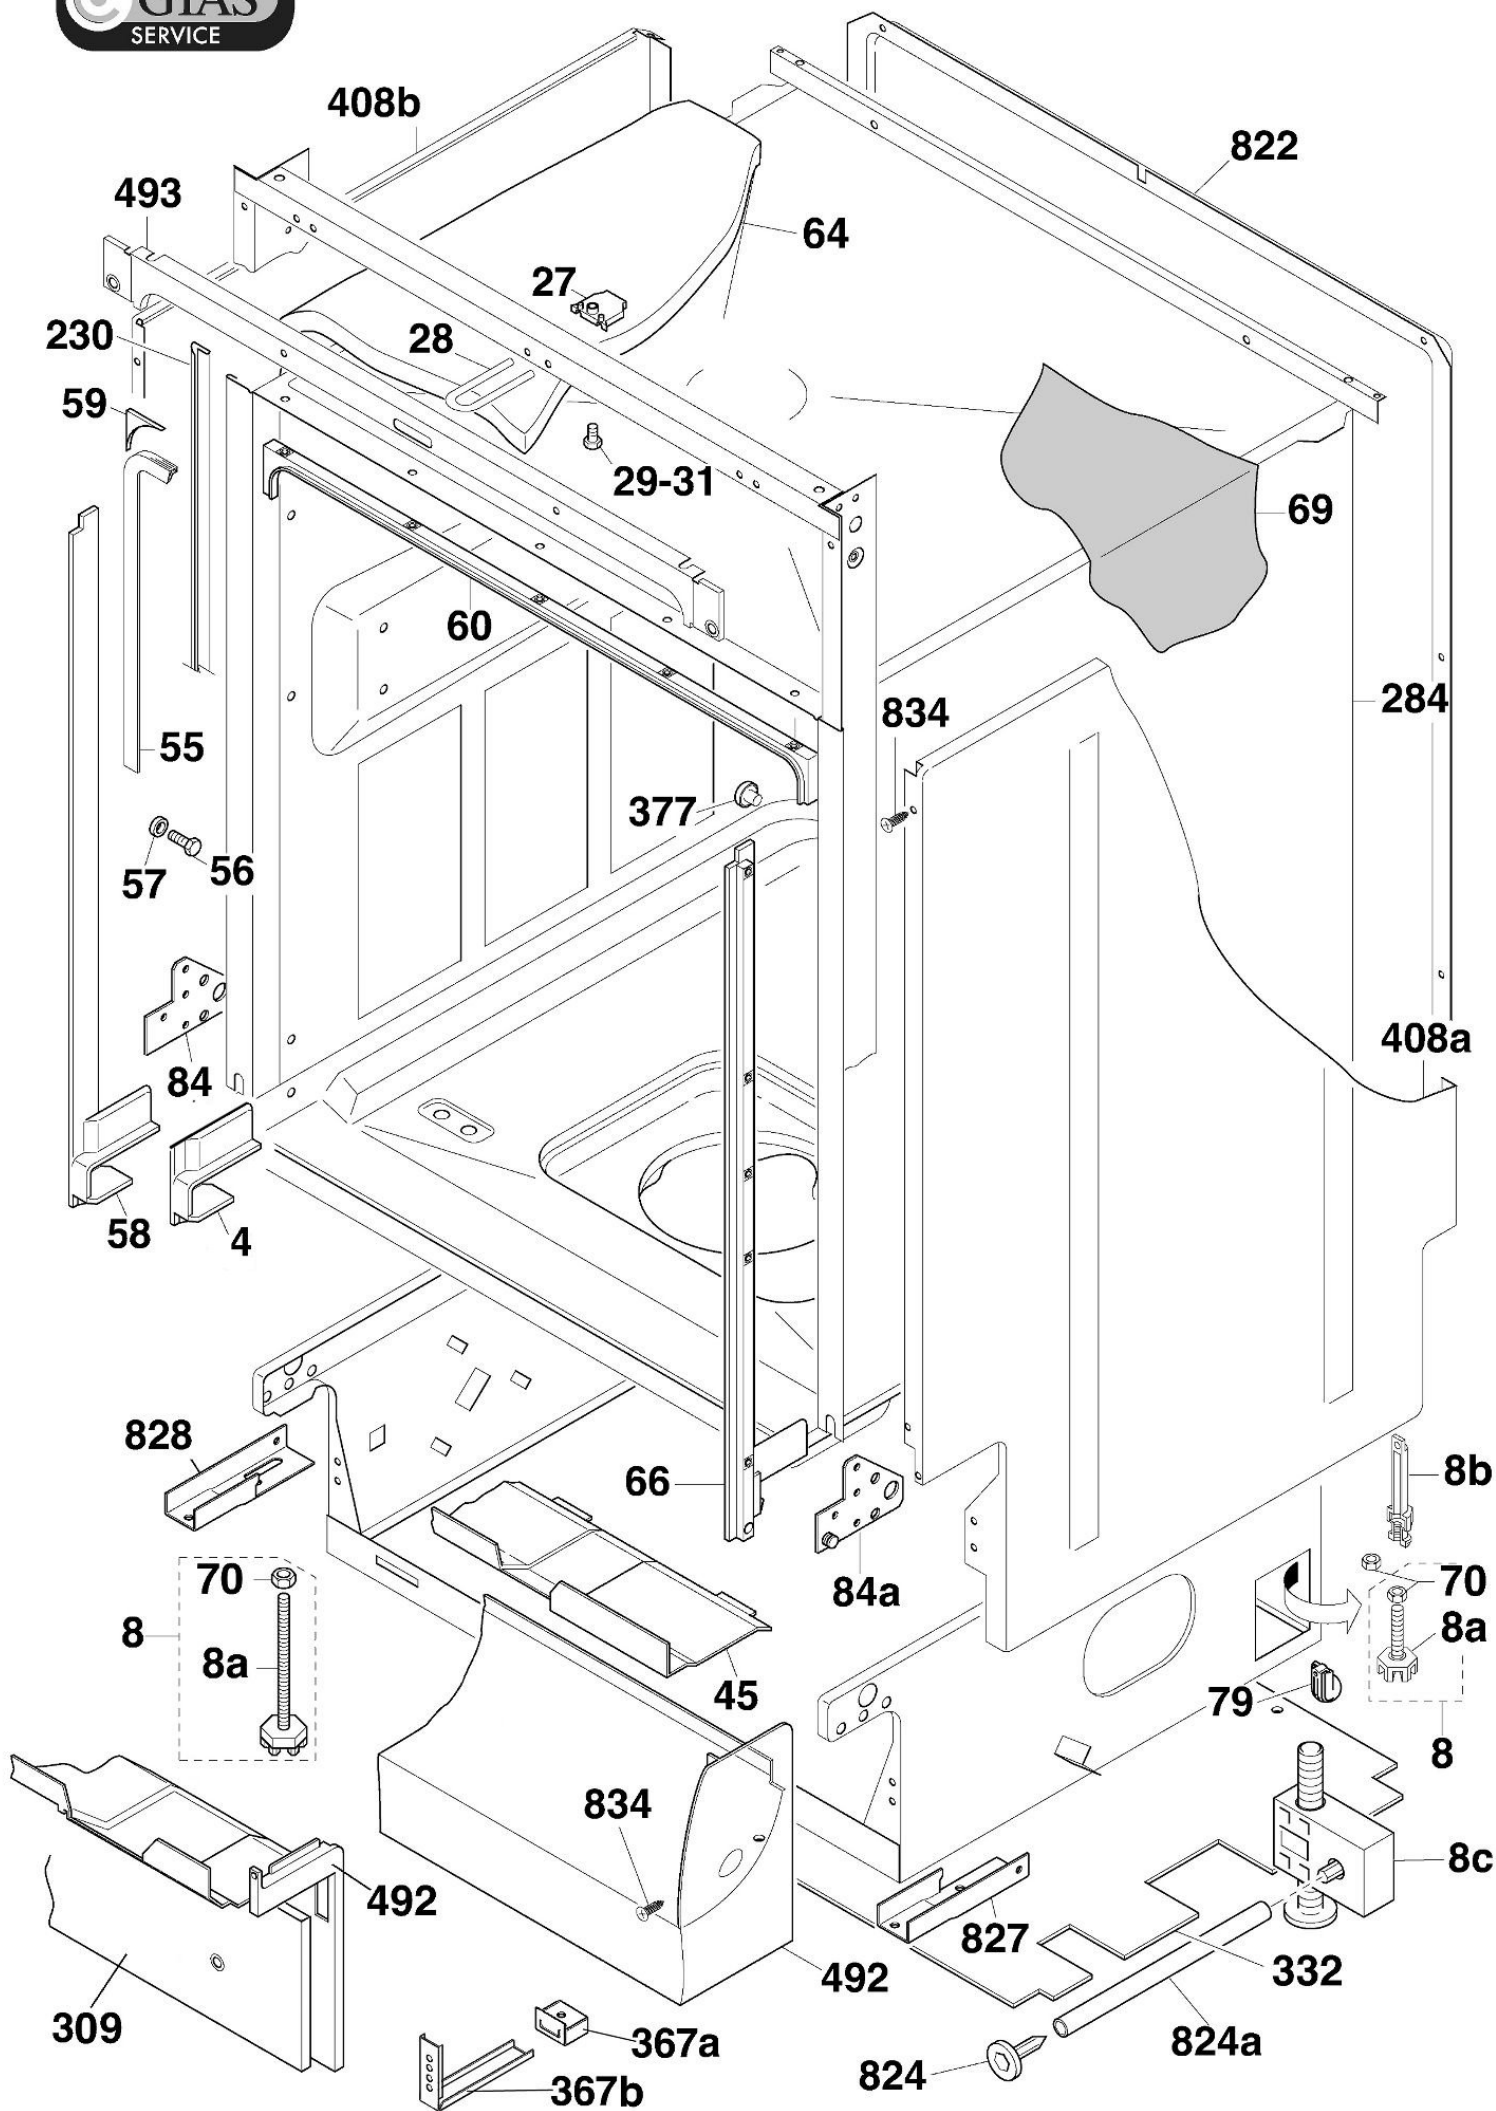

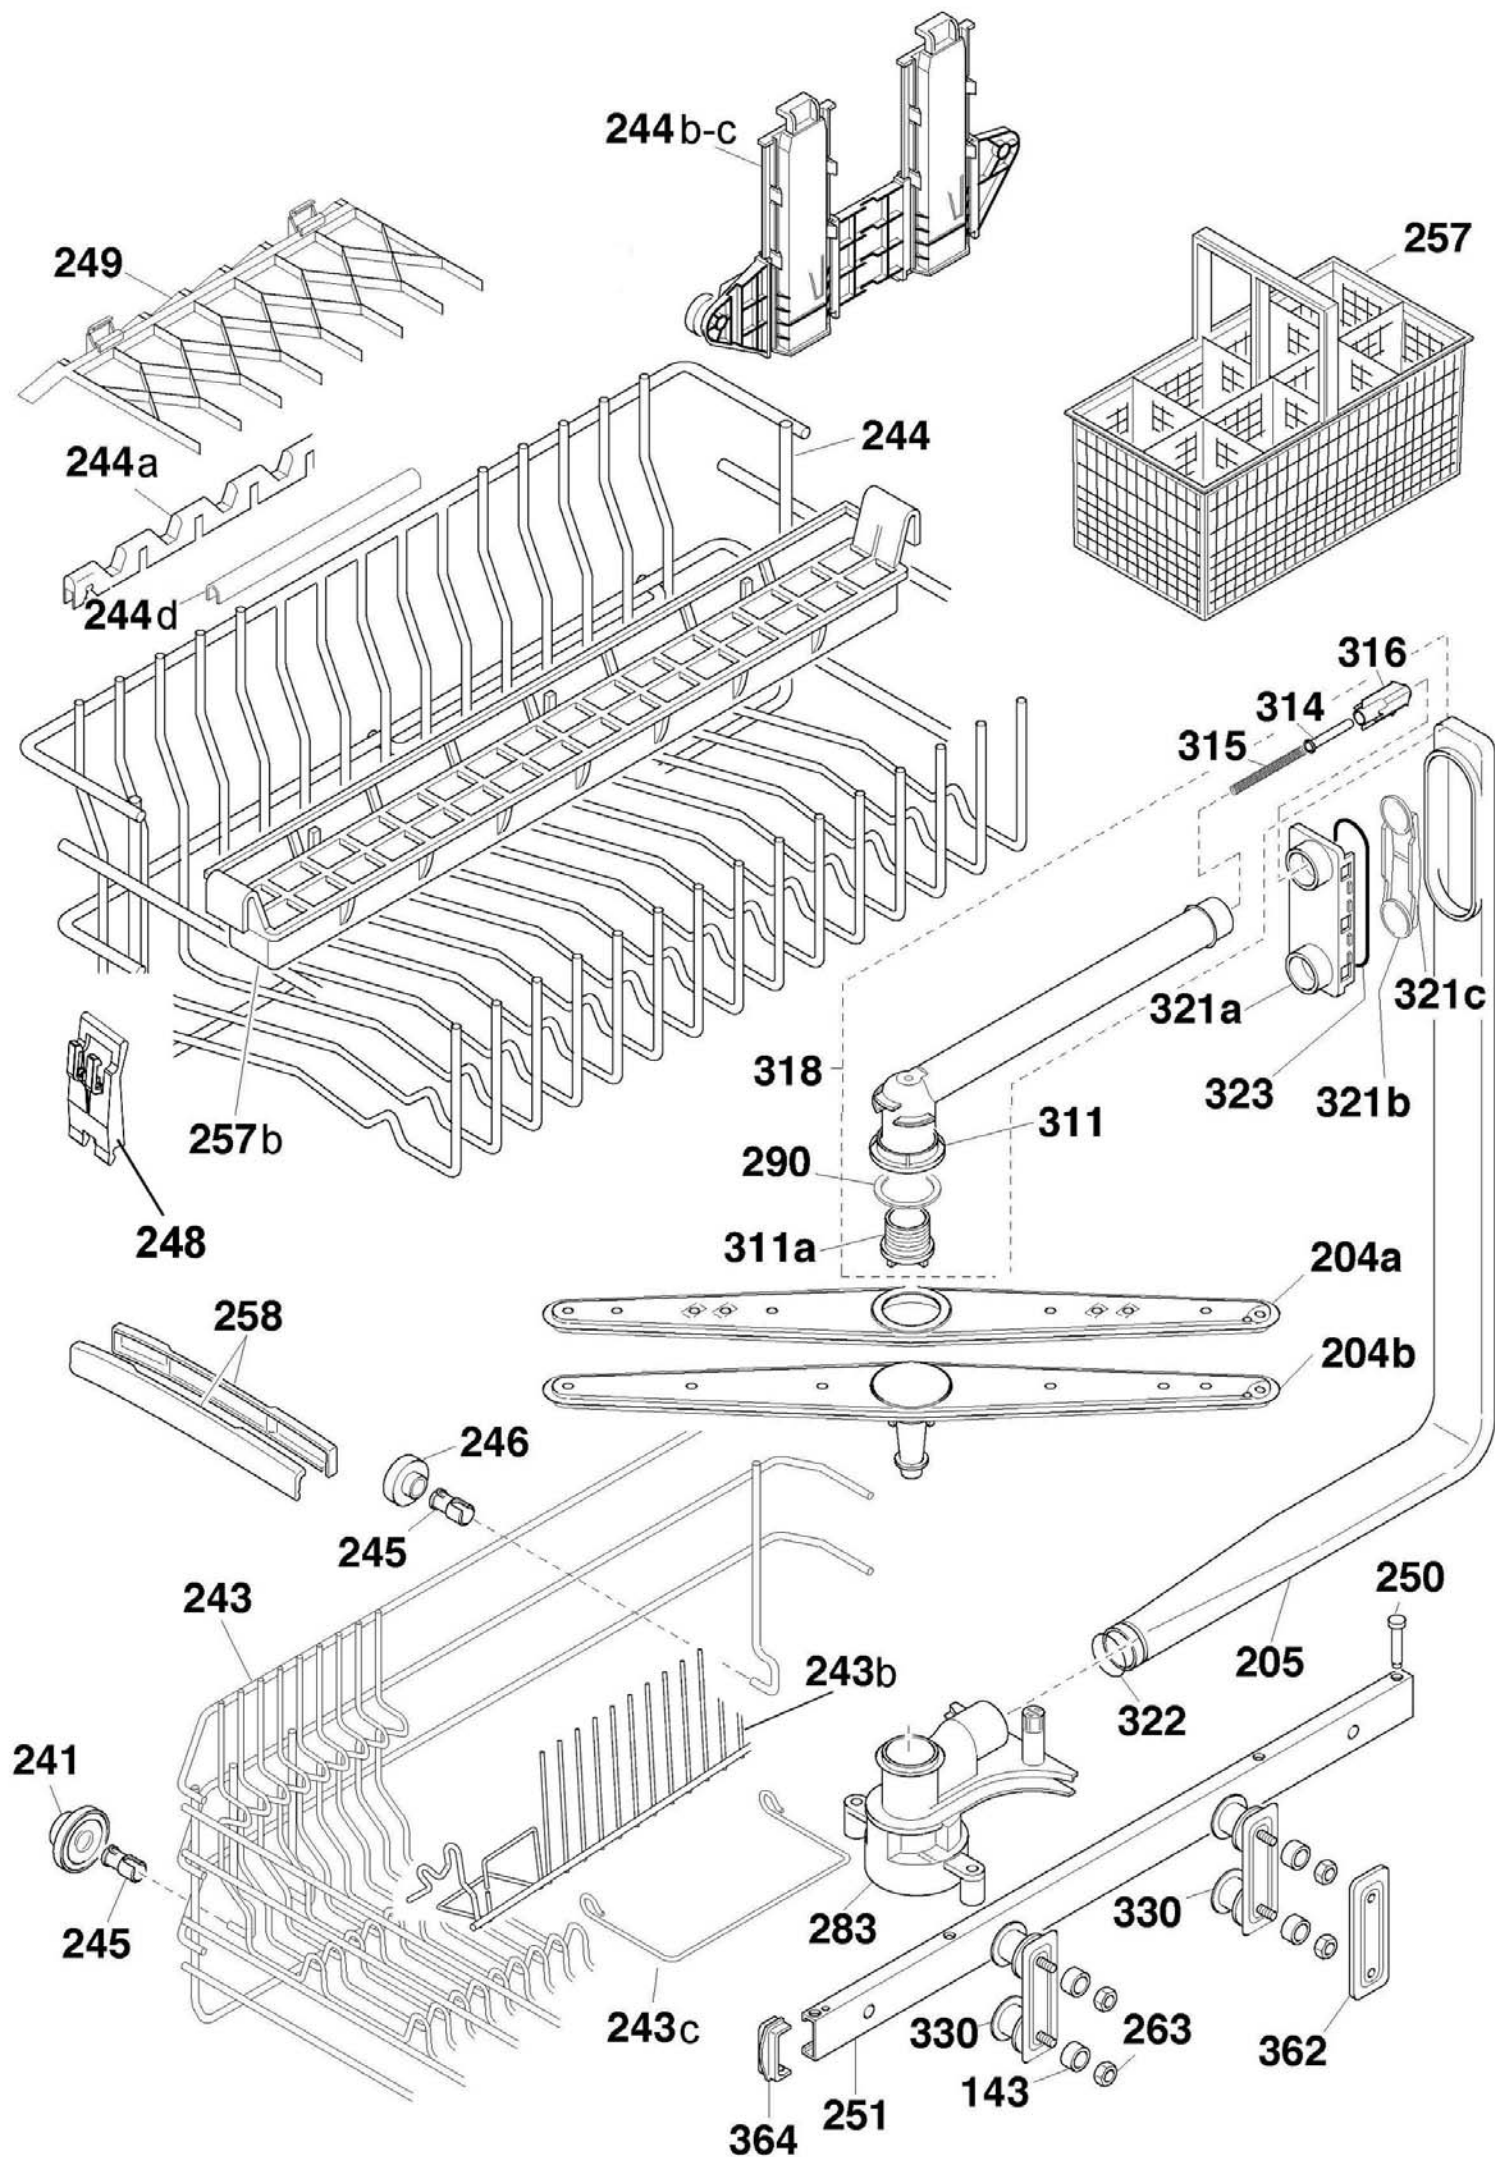

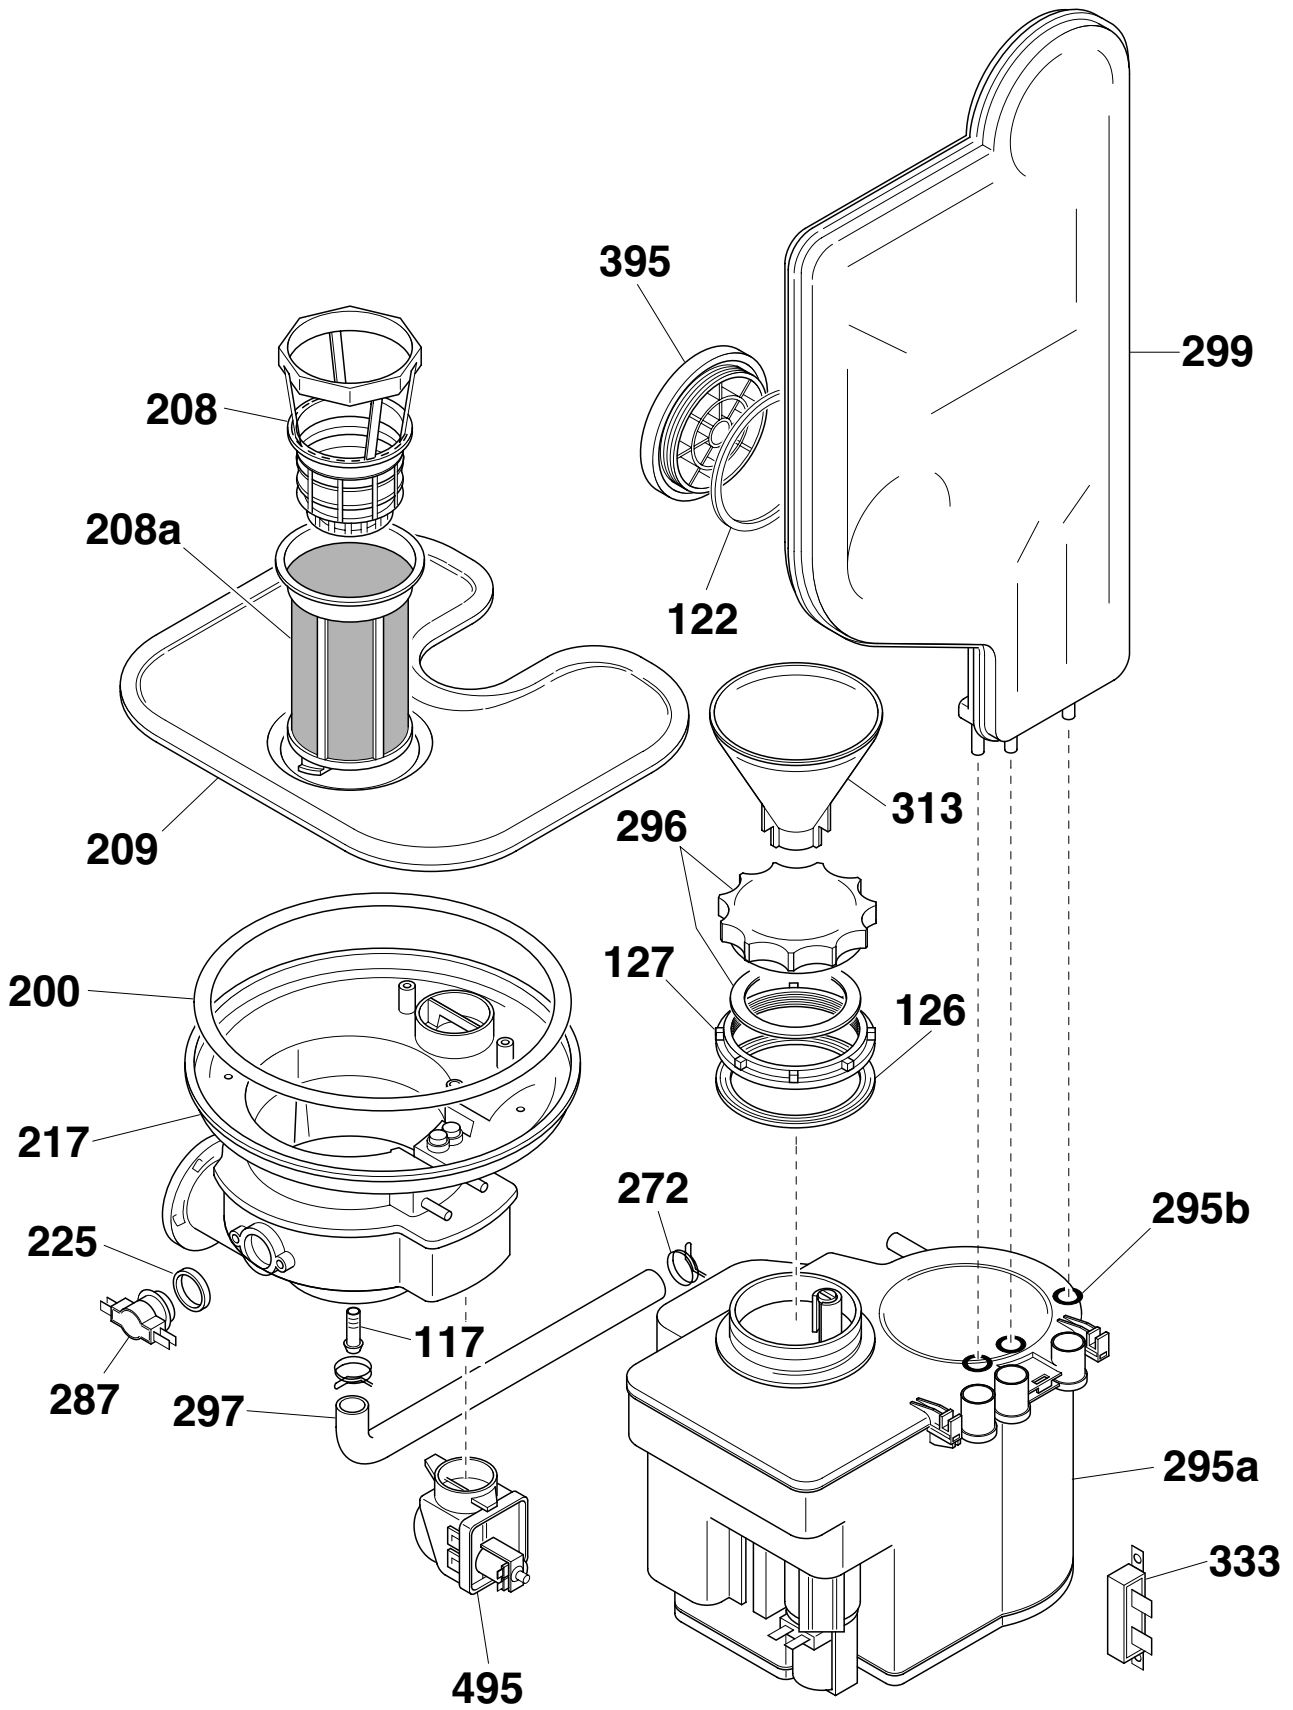

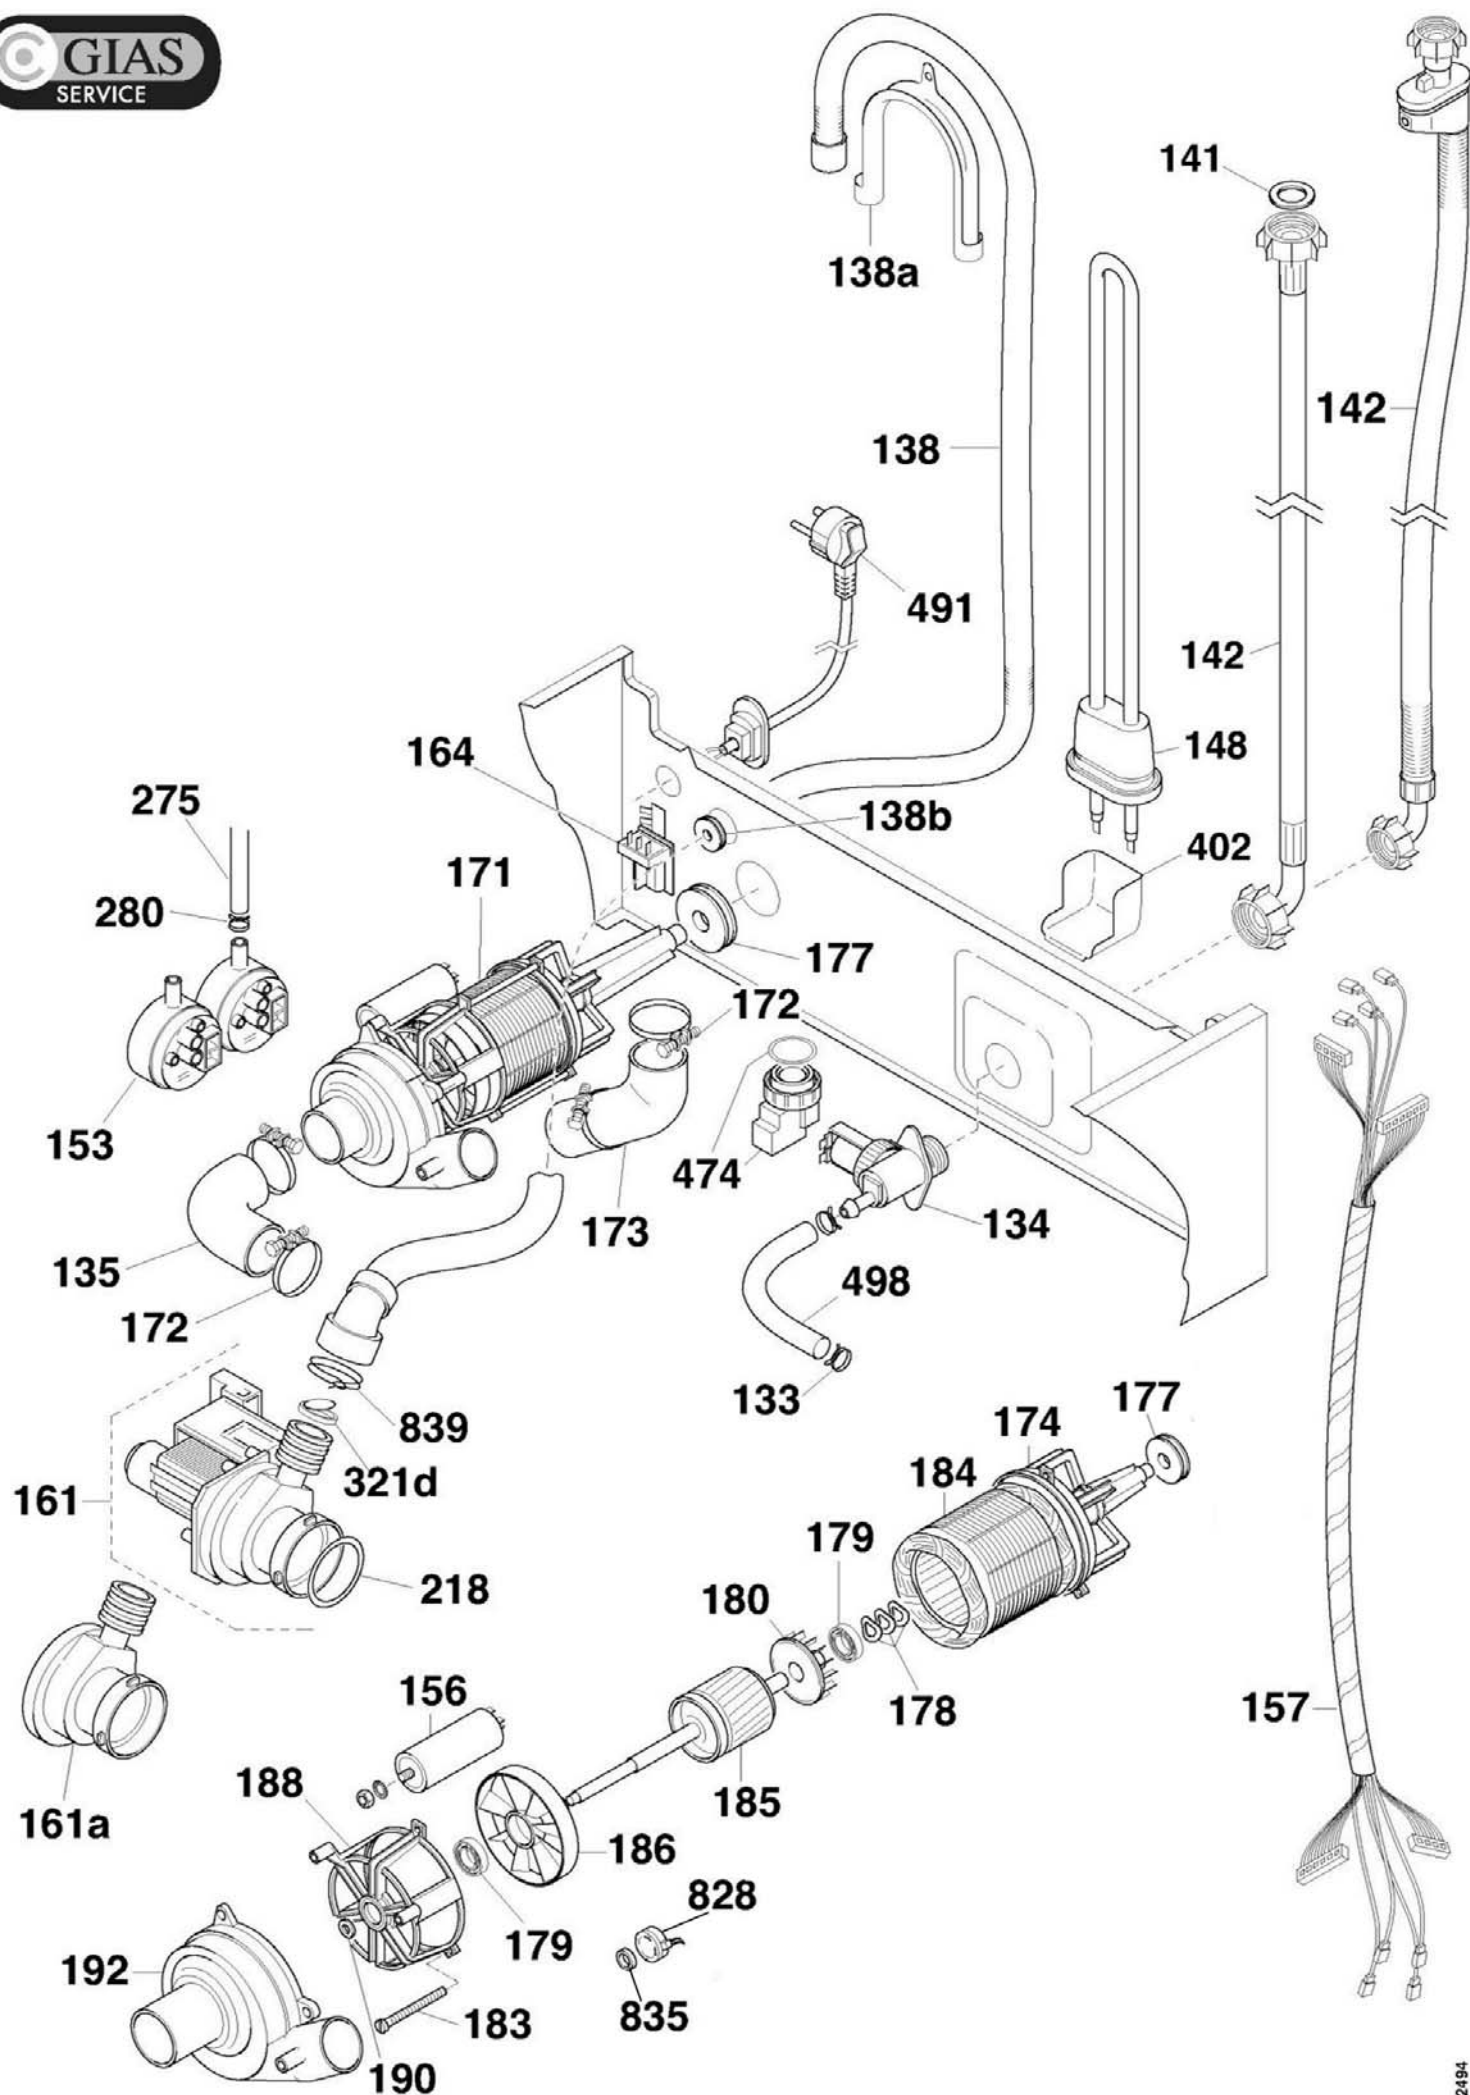



32000126 CDF615A 85S 0422 (27/05/2004)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
8a	Foot	41001349	0514 (27/03/2005)	0514 (27/03/2005)
14	Button	41010288		
21	Control panel assy	41012131		
27	Closure regulator	91800770		
28	Catch	92731090		
28	Catch	41014449		
29	Screw	41005335		
36	Work table	41010308		
44	Door lock	41008620		
45	Lower protection	91600125		
54a	Innerdoor lower gasket	91620003		
55	Front gasket	41010838		
56	Special screw	92419530		
58	L/H gasket holder	91617514		
59	Cornet f.gasket	92605757		
60	Upper gasket holder	91617530		
66	R/H gasket holder	91617522		
69	Insulating panel	91600504		
79	Rear foot	92685734		
84	L/H hinge holder	41007154		
84a	R/H hinge holder	41007153		
85a	R/H hinge	41007189		
85b	L/H hinge	41007190		
92	Innerdoor	41010279		
93	Door	41009658		
100	Electrodistributor	41010202		
103	Gasket	49004681		
117	Nozzle	92694801		
122	Gasket	91620012		
126	Seal gasket	91620014		
127	Metal ring	91600586		



32000126 CDF615A 85S 0422 (27/05/2004)

		Ricambio Part No. Piec E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
133	Clip	92470012		
134	Electrovalve	41009561		
135a	Hose	91620008		
138	Drain hose	91670102		
138a	Drain house elbow	92689587		
138b	Hoseb clamp	91600328		
141	Seal gasket	92485226		
142b	Safety fill hose	92968155		
148a	Outer heater assy	41006831		
150	Door micro switch	41009693		
151a	Electronic module	41008097	0602 (10/01/2006)	0602 (10/01/2006)
151a	Electronic module	41016113		
151d	Electronic board support	41011395		
151f	Programs electronic module	41010331		
151g	Start delay electronic module	41010332		
153	Level switch	41009660	0523 (01/06/2005)	0523 (01/06/2005)
153	Level switch	41016499		
155	Pilot lamp	91209510		
156	Capacitor	92219435		
157	Wiring harness	41011531		
157e	6 Way connecton	41011226		
157k	8 Way connecton	41011227		
161	Drain pump	91200173		
161a	Drain pump scroll	91600290		
164	Anti jamming filter radio	91200489		
171	Motor pump	41010872		
172	Clip	91408000		
173	Hose	91620007		
174	Motor end	92736032		
177	Motor Schoch absorber	92131762		
178	Washer	92439835		
179	Bearing	92440148		



32000126 CDF615A 85S 0422 (27/05/2004)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
180	Fan	92141449		
183	Motor securing bolt	92401397		
184	Stator	41010876		
185	Rotor	91750371		
186	Fan	92141431		
188	Motor end	92736040		
190	Washer	91406200		
192	Pump assembly	41001311		
200	Drawer gasket	91406300		
204a	Upper spray arm	41009782		
204b	Lower spray arm	41009781		
205	Spray arms tube	41006828		
208	Filter	41005927		
208a	Microfilter	91670082		
209	Filter plate	91800738		
217	Filter bacin.	91670113		
218	OR seal gasket	91406302		
225a	Thermostat Gasket	92445626		
241	Lower basket wheel	91601039		
243	Lower basket	41009338		0528 (05/07/2005)
243	Lower basket	41016662	0528 (05/07/2005)	
243c	Inclinable small plates holder	41011331		0528 (05/07/2005)
243c	Inclinable small plates holder	41015096	0528 (05/07/2005)	
244	Upper basket	41011413		
244a	Plates holder	41008446		
244b	Basket regulation assy L/H	41011423		
244c	Basket regulation assy R/H	41011424		
244d	Grip	41011412		
245	Basket wheel pin	92608637		
246	Basket wheel upper.	92655596		
249a	R/H front-L/H rear cups basket	41000749		
249b	L/H front-R/H rear cups basket	41000750		



32000126 CDF615A 85S 0422 (27/05/2004)

		Ricambio Part No. Piec E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
250	Wheel stopper	91619627		
251	Runner	91800137		
257	Cutlery basket	41011414		
257b	Cutlery holder	41011411		
258a	Basket rear handle	41011419		
258b	Basket front handle	41011418		
272	Clip	92470244		
275	Level hose	49003248		
280	Clip	92470202		
283a	Hub	41009859		
284	Tub assy	41006826		
287m	NTC probe	92743616		
290	Bearing for spray arm	91405300	0525 (15/06/2005)	
295a	Water softener	91200534		
295b	Water softener OR seal gasket	91941698		
296	Water softener stopper	91670172		
297	Hose	91620010		
299	Water softener capacitor	41010398		
305	Spring	92483809		
311	Sleeve	91602981	0525 (15/06/2005)	
311a	Sleeve	41010216	0525 (15/06/2005)	
313	Funnel	91601457		
314	Slider	91600272		
315	Spring	92484021		
316	Center square	91600271		
318	Upper ramp tube	41009353		
321a	Deviator	41009202		
321b	Deviator valve	91600267		
321c	Deviator valve holder	41009257		
321d	Non return valve	91941700		
322	Seal	91406301		



32000126 CDF615A 85S 0422 (27/05/2004)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
323	Seal	41009258		
330	Subseq.runner ass.support	91670988		
333a	Water softener reed (T.P.)	49006926		
333c	Water softener reed (Bitron)	91941699		
362	Wheel support reinforc.	91602344		
364	Upper basket stopper	91601047		
377	Center square	91621961		
395	Air break ring nut	91600575		
402	Harness protection	41006833		
408a	R/H later.panel	41007175		
408b	L/H later.panel	41007176		
474	Safety switch	41009092		
474a	Gasket safety switch	41009096		
491	Main cable	91200194		
492	Socle	41010310		
493	Upper cover	91800072		
498	Hose	41009563		
618c	Unipolar NA+P.A. switch	90489683		
797	Hook	92734912		
798	Clutch body	91601427		
799	Clutching band	92895838		
827	Right foot door brachet	41001350		
828	Left foot door bracket	41001351		
834	Screw	92418151		
839	Clip	92470277		
999	Wiring diagram	41009655		

32000126 CDF615A 85S 0422 (27/05/2004) - Modifications History -

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Description			
28 28	CATCT			
	Catch Catch	92731090 41014449	0514 (27/03/2005)	0514 (27/03/2005)
153 153	LEVEL SWITCH			
	Level switch Level switch	41009660 41016499	0523 (01/06/2005)	0523 (01/06/2005)
290 311	UPPER RAMP TUBE			
	Bearing for spray arm	91405300	0525 (15/06/2005)	
311a 311a	Sleeve	91602981	0525 (15/06/2005)	
	Sleeve	41010216	0525 (15/06/2005)	
243 243	LOWER BASKET			
	Lower basket Lower basket	41009338 41016662	0528 (05/07/2005)	0528 (05/07/2005)
243c 243c	Inclinable small plates holder	41011331	0528 (05/07/2005)	0528 (05/07/2005)
	Inclinable small plates holder	41015096	0528 (05/07/2005)	0528 (05/07/2005)
151a 151a	ELECTRONIC MODULE			
	Electronic module Electronic module	41008097 41016113	0602 (10/01/2006)	0602 (10/01/2006)