

<b>CarAlarm      MetaService</b>		
TYPE OF CAR AND YEAR OF MANUFACTURE <b>FORD GALAXY 2001</b>	SHEET N° <b>12.25</b>	

## LOCATION OF THE CAR ALARM CENTRAL UNIT

Compact central units and sirens: Versions with petrol engines: place under bonnet on driver's side between shock absorber and battery. Versions with diesel engine: place behind right front headlamp.  
Modular central units and accessories: place under dashboard on driver's side.

## CAR ALARM SUPPLY

Positive: connect to 20A fuse n° 30 in fuse box.  
Negative: connect to point located to the left of fuse box.

## ENGINE IMMOBILISATION

The vehicle is supplied with an original transponder engine immobiliser that arms automatically by removing the ignition key from the ignition switch.

## POISITIVE IGNITION KEY (+15)

Connect to 10A fuse n° 2 in fuse box

## CENTRAL DOORS LOCKING (Connection of remote controlled alarm central unit)

Positive type controls.(2)

Connect to **Grey** wire (position n° 25) for closing and **Green/Red** wire (position n° 17) for opening in the Green connector marked P6 located to the right of the central locking control unit underneath the steering column above the fuse box.

## ENABLING PASSIVE ARMING (Connection of alarm central unit armed by the original remote control of the car)

Follow method of connections as illustrated in installation **ANNEXE 12.25.1**

## TURNING INDICATORS

Connect to **Black/White** wire (position n° 5) and **Black/Green** wire (position n° 6) in the **Black** 8 pin connector in the central locking control unit underneath the steering column above the fuse box.

## DOORS PROTECTION

Connect to Brown/Yellow wire (position n° 6) for rear doors and front right door, connect to the Brown/Yellow wire (position n° 7) for the front left door. These wires are located in the connector marked P4 in the central locking control unit underneath the steering column above the fuse box.

## BONNET/BOOT PROTECTION

Bonnet: install the switch supplied with the kit. (1)

Boot: connect to the Brown/Red wire (position n° 26) in the connector marked P4 in the central locking control unit underneath the steering column above the fuse box.

## ELECTRIC WINDOWS

The windows are closed using the comfort command by lengthening the timing for the closure of the alarm to 25 sec.  
The M162 module must be used for alarm model M750/1.

<b>CarAlarm      MetaService</b>		
TYPE OF CAR AND YEAR OF MANUFACTURE <b>FORD GALAXY 2001</b>	SHEET N° <b>12.25.1</b>	

## METHOD OF INSTALLATION FOR M750/8 Electronic key

**SET UP: negative\***

Function	Colour of M750 wire	Colour of Vehicle wire	Colour of Vehicle wire
Arming command	Red/black	Green/blue	Pos. n°8 Black 18 pin connector marked XS2 located in the lower part of the BSG central unit located under the dashboard on driver's side.
Disarming command	Red /white	Black / red	Pos. n°11
Inhibition of arming	Blue/yellow	Grey	Pos.n°25 Located in the connector marked P6 in the central locking control unit underneath the steering column above the fuse box.
Inhibition of disarming	Red / yellow	Green/ red	Pos.n°17

**\*WARNING:**      after completing set up, the alarm central unit must be disenabled and then re-enabled using the electronic emergency key

## WIRING DIAGRAM

