# SECTION 3 TEST MODE

#### SOFTWARE VERSION DISPLAY MODE

- \* The software version is displayed.
- \* Procedure:

While depressing the ENTER and the SOUND FIELD A.DEC buttons simultaneously, press the power 1/0 button to turn on the main power. The model name, destination and the software version are displayed.

#### FLUORESCENT INDICATOR TUBE TEST MODE

- \* All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.
- \* Procedure:

 
While depressing the  $\boxed{\text{MD/TAPE}}$  and the  $\boxed{\text{SHIFT}}$  buttons simultaneously, press the power  $\boxed{I/U}$  button to turn on the main power.

1. All segments turn on.

SW SLEEP SP.OFF		EREO MONO RDS TA NEWS INFO	MEMORY MUTING
L C R (((LFE))) SL S SR		dB kHz mft. MHz	


[MULTI CHANNEL DECODING], [Digital Cinema Sound], SOUND FIELD [A.DEC], [MODE], [2CH] and [SET UP] LED turn on.

2. Press the VIDEO 1 button, confirm display



SOUND FIELD A.DEC, MODE, SOUND CONTROL LEVEL, SET UP and Digital Cinema Sound LED turn on.

 3. Press the VIDEO 1 button, confirm display



[MULTI CHANNEL DECODING], SOUND FIELD [2CH], SOUND CONTROL [SURR] and [NAME] LED turn on.

- 4. Press the VIDEO 1 button, All segments turn off.
- Every pressing of the VIDEO 1 button turns on each segment and LED one after another in the same order.
   (Not only the VIDEO 1 button, but also the other buttons such as VIDEO 2), DVD/LD, MD/TAPE, CD, TUNER can be used.)

#### **FACTORY PRESET MODE**

- \* All preset contents are reset to the default setting.
- \* Procedure:

While depressing the VIDEO 1 and the SOUND FIELD 2CH buttons simultaneously, press the power 1/0 button to turn on the main power. The message FACTORY appears and switch off the set.

While depressing the VIDEO 1 and the SOUND FIELD 2CH buttons simultaneously, press the power 1/b button again. The message FACTORY appears and the preset contents are reset to the default values.

### **SOUND FIELD CLEAR MODE**

- \* The preset sound field is cleared when this mode is activated.

  Use this mode before returning the product to clients upon completion of repair.
- \* Procedure:

While depressing the SOUND FIELD MODE button, press the power 1/0 button to turn on the main power. The message S. F. CLR appears and initialization is performed.

## AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE

- \* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
- \* Procedure:

Set the TUNER to AM. Turn off the main power. While depressing the TUNING+ button or the PRESET TUNING- button, press the power 1/\(\bigcup \) button to turn on the main power. Either the message 9 k STEP or 10 k STEP appears. Select the desired step.

\* For Canadian model only

#### **KEY CHECK MODE**

- \* Button check
- \* Procedure:

While depressing the  $\boxed{\text{VIDEO 1}}$  and the  $\boxed{\text{SHIFT}}$  buttons simultaneously, press the power  $\boxed{\text{I/} \bigcirc}$  button to turn on the main power. "REST 39" appears.

Every pressing of any button other than the  $\boxed{I/\circlearrowleft}$ ,  $\boxed{\mathsf{TREBLE+},-}$  and the  $\boxed{\mathsf{BASS+},-}$  counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed "REST 04" appears.

When MASTER VOLUME is rotated in clockwise direction, "VOL MIN", "VOL 1" to "VOL 73", "VOL MAX" appear.