



---

# **ECOSYS P2035d**

# **ECOSYS P2135d**

## **SERVICE MANUAL**

Published in November 2013  
842PH111  
2PHSM061  
Rev.1

## **CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

It may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for proper disposal.

## **ATTENTION**

IL Y A UN RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN MODÈLE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES UTILISÉES SELON LES INSTRUCTIONS DONNÉES.

Il peut être illégal de jeter les batteries dans des eaux d'égout municipales. Vérifiez avec les fonctionnaires municipaux de votre région pour les détails concernant des déchets solides et une mise au rebut appropriée.

### **Notation of products in the manual**

For the purpose of this service manual, products are identified by print speed at A4 and black and white modes.

ECOSYS P2035d : Low model

ECOSYS P2135d : High model

**Revision history**

Revision	Date	Pages	Revised contents
1	5 Nobember 2013	1-1-1	Change: First print time for high model Change: Warm-up time

This page is intentionally left blank.

---


# Safety precautions


---


This booklet provides safety warnings and precautions for our service personnel to ensure the safety of their customers, their machines as well as themselves during maintenance activities. Service personnel are advised to read this booklet carefully to familiarize themselves with the warnings and precautions described here before engaging in maintenance activities.

## Safety warnings and precautions


Various symbols are used to protect our service personnel and customers from physical danger and to prevent damage to their property. These symbols are described below:

 **DANGER:** High risk of serious bodily injury or death may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

 **WARNING:** Serious bodily injury or death may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

 **CAUTION:** Bodily injury or damage to property may result from insufficient attention to or incorrect compliance with warning messages using this symbol.

### Symbols

The triangle () symbol indicates a warning including danger and caution. The specific point of attention is shown inside the symbol.



General warning.



Warning of risk of electric shock.



Warning of high temperature.


 indicates a prohibited action. The specific prohibition is shown inside the symbol.



General prohibited action.



Disassembly prohibited.

 indicates that action is required. The specific action required is shown inside the symbol.



General action required.



Remove the power plug from the wall outlet.



Always ground the copier.

## 1. Installation Precautions

### WARNING

- Do not use a power supply with a voltage other than that specified. Avoid multiple connections to one outlet: they may cause fire or electric shock. When using an extension cable, always check that it is adequate for the rated current. ....
- Connect the ground wire to a suitable grounding point. Not grounding the copier may cause fire or electric shock. Connecting the earth wire to an object not approved for the purpose may cause explosion or electric shock. Never connect the ground cable to any of the following: gas pipes, lightning rods, ground cables for telephone lines and water pipes or faucets not approved by the proper authorities. ....













### CAUTION:

- Do not place the copier on an infirm or angled surface: the copier may tip over, causing injury. ....
- Do not install the copier in a humid or dusty place. This may cause fire or electric shock. ....
- Do not install the copier near a radiator, heater, other heat source or near flammable material. This may cause fire. ....
- Allow sufficient space around the copier to allow the ventilation grills to keep the machine as cool as possible. Insufficient ventilation may cause heat buildup and poor copying performance. ....
- Always handle the machine by the correct locations when moving it. ....
- Always use anti-toppling and locking devices on copiers so equipped. Failure to do this may cause the copier to move unexpectedly or topple, leading to injury. ....
- Avoid inhaling toner or developer excessively. Protect the eyes. If toner or developer is accidentally ingested, drink a lot of water to dilute it in the stomach and obtain medical attention immediately. If it gets into the eyes, rinse immediately with copious amounts of water and obtain medical attention. ....
- Advise customers that they must always follow the safety warnings and precautions in the copier's instruction handbook. ....







## 2. Precautions for Maintenance












### WARNING

- Always remove the power plug from the wall outlet before starting machine disassembly. .... 
- Always follow the procedures for maintenance described in the service manual and other related brochures. .... 
- Under no circumstances attempt to bypass or disable safety features including safety mechanisms and protective circuits. .... 
- Always use parts having the correct specifications. .... 
- Always use the thermostat or thermal fuse specified in the service manual or other related brochure when replacing them. Using a piece of wire, for example, could lead to fire or other serious accident. .... 
- When the service manual or other serious brochure specifies a distance or gap for installation of a part, always use the correct scale and measure carefully. .... 
- Always check that the copier is correctly connected to an outlet with a ground connection. .... 
- Check that the power cable covering is free of damage. Check that the power plug is dust-free. If it is dirty, clean it to remove the risk of fire or electric shock. .... 
- Never attempt to disassemble the optical unit in machines using lasers. Leaking laser light may damage eyesight. .... 
- Handle the charger sections with care. They are charged to high potentials and may cause electric shock if handled improperly. .... 

### CAUTION



- Wear safe clothing. If wearing loose clothing or accessories such as ties, make sure they are safely secured so they will not be caught in rotating sections. .... 
- Use utmost caution when working on a powered machine. Keep away from chains and belts. .... 
- Handle the fixing section with care to avoid burns as it can be extremely hot. .... 
- Check that the fixing unit thermistor, heat and press rollers are clean. Dirt on them can cause abnormally high temperatures. .... 



- Do not remove the ozone filter, if any, from the copier except for routine replacement. .... 
- Do not pull on the AC power cord or connector wires on high-voltage components when removing them; always hold the plug itself. .... 
- Do not route the power cable where it may be stood on or trapped. If necessary, protect it with a cable cover or other appropriate item. .... 
- Treat the ends of the wire carefully when installing a new charger wire to avoid electric leaks. .... 
- Remove toner completely from electronic components. .... 
- Run wire harnesses carefully so that wires will not be trapped or damaged. .... 
- After maintenance, always check that all the parts, screws, connectors and wires that were removed, have been refitted correctly. Special attention should be paid to any forgotten connector, trapped wire and missing screws. .... 
- Check that all the caution labels that should be present on the machine according to the instruction handbook are clean and not peeling. Replace with new ones if necessary. .... 
- Handle greases and solvents with care by following the instructions below: .... 
  - Use only a small amount of solvent at a time, being careful not to spill. Wipe spills off completely.
  - Ventilate the room well while using grease or solvents.
  - Allow applied solvents to evaporate completely before refitting the covers or turning the power switch on.
  - Always wash hands afterwards.
- Never dispose of toner or toner bottles in fire. Toner may cause sparks when exposed directly to fire in a furnace, etc. .... 
- Should smoke be seen coming from the copier, remove the power plug from the wall outlet immediately. .... 

### 3. Miscellaneous

#### WARNING

- Never attempt to heat the drum or expose it to any organic solvents such as alcohol, other than the specified refiner; it may generate toxic gas. .... 
- Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur. .... 

This page is intentionally left blank.

# CONTENTS

## 1-1 Specifications

1-1-1 Specifications .....	1-1-1
1-1-2 Parts names .....	1-1-3
(1) Overall .....	1-1-3
(2) Operation panel .....	1-1-4
1-1-3 Machine cross section .....	1-1-5

## 1-2 Installation

1-2-1 Installation environment .....	1-2-1
1-2-2 Unpacking .....	1-2-2
(1) Removing the tapes .....	1-2-3
1-2-3 Installing the expanded memory (option) .....	1-2-4
1-2-4 Installing the memory card (option) .....	1-2-5
1-2-5 Installing the network interface card (option) .....	1-2-6

## 1-3 Maintenance Mode

1-3-1 Maintenance mode .....	1-3-1
(1) Executing a service mode .....	1-3-1

## 1-4 Troubleshooting

1-4-1 Paper misfeed detection .....	1-4-1
(1) Paper misfeed indication .....	1-4-1
(2) Paper misfeed detection condition .....	1-4-2
1-4-2 Self-diagnostic function .....	1-4-3
(1) Self-diagnostic function .....	1-4-3
(2) Self diagnostic codes indication .....	1-4-4
(3) Self diagnostic codes .....	1-4-5
1-4-3 Image formation problems .....	1-4-9
(1) Completely blank printout .....	1-4-10
(2) All-black printout .....	1-4-10
(3) Dropouts .....	1-4-11
(4) Black dots .....	1-4-11
(5) Black horizontal streaks .....	1-4-11
(6) Black vertical streaks .....	1-4-12
(7) Unsharpness .....	1-4-12
(8) Gray background .....	1-4-12
(9) Dirt on the top edge or back of the paper .....	1-4-13
(10) Undulated printing at the right edge (scanning start position) .....	1-4-13
1-4-4 Electric problems .....	1-4-14
1-4-5 Mechanical problems .....	1-4-16

## 1-5 Assembly and Disassembly

1-5-1 Precautions for assembly and disassembly .....	1-5-1
(1) Precautions .....	1-5-1
(2) Drum .....	1-5-1
(3) Toner container .....	1-5-1
(4) How to tell a genuine Kyocera toner container .....	1-5-2
1-5-2 Outer covers .....	1-5-3
(1) Detaching and refitting the top cover .....	1-5-3
(2) Detaching and refitting the right and left covers .....	1-5-4
1-5-3 Paper feed section .....	1-5-6
(1) Detaching and refitting the paper feed assembly (paper feed roller and pickup roller) .....	1-5-6
(2) Detaching and refitting the retard roller assembly .....	1-5-8
(3) Detaching and refitting the MP paper feed roller .....	1-5-10
1-5-4 Developing section .....	1-5-11
(1) Detaching and refitting the developing unit .....	1-5-11
1-5-5 Drum section .....	1-5-12
(1) Detaching and refitting the drum unit .....	1-5-12
(2) Detaching and refitting the main charger unit .....	1-5-13

1-5-6	Transfer/separation section .....	1-5-14
(1)	Detaching and refitting the transfer roller .....	1-5-14
1-5-7	Fuser section .....	1-5-16
(1)	Detaching and refitting the fuser unit.....	1-5-16
(2)	Switching the fuser pressure .....	1-5-18
1-5-8	PWBs .....	1-5-19
(1)	Detaching and refitting the control PWB .....	1-5-19
(2)	Detaching and refitting the power source PWB.....	1-5-22
(3)	Detaching and refitting the operation panel PWB .....	1-5-24
(4)	Detaching and refitting the high voltage PWB.....	1-5-25
1-5-9	Others .....	1-5-29
(1)	Detaching and refitting the main motor .....	1-5-29
(2)	Detaching and refitting the laser scanner unit.....	1-5-30
(3)	Detaching and refitting the eraser lamp .....	1-5-32
(4)	Direction of installing the left and right cooling fan motors .....	1-5-33
 <b>1-6 Firmware</b>		
1-6-1	Downloading firmware .....	1-6-1
(1)	Downloading the firmware from the memory card.....	1-6-2
 <b>2-1 Mechanical Construction</b>		
2-1-1	Paper feed/conveying section.....	2-1-1
(1)	Cassette paper feed section.....	2-1-1
(2)	MP tray paper feed section .....	2-1-2
(3)	Paper conveying section .....	2-1-3
2-1-2	Drum section.....	2-1-4
(1)	Drum section .....	2-1-4
(2)	Main charger unit.....	2-1-5
2-1-3	Expose section.....	2-1-6
(1)	Laser scanner unit.....	2-1-6
2-1-4	Developing section.....	2-1-8
2-1-5	Transfer/separation section .....	2-1-9
2-1-6	Cleaning section .....	2-1-10
2-1-7	Fuser section .....	2-1-11
2-1-8	Paper exit section .....	2-1-13
2-1-9	Duplex/conveying section .....	2-1-15
 <b>2-2 Electrical Parts Layout</b>		
2-2-1	Electrical parts layout.....	2-2-1
(1)	PWBs .....	2-2-1
(2)	Switches and sensors .....	2-2-2
(3)	Other electrical components.....	2-2-3
 <b>2-3 Operation of the PWBs</b>		
2-3-1	Power source PWB.....	2-3-1
2-3-2	Control PWB .....	2-3-3
 <b>2-4 Appendixes</b>		
2-4-1	Appendixes .....	2-4-1
(1)	Wiring diagraml .....	2-4-1
(2)	Repetitive defects gauge.....	2-4-2
(3)	Self diagnostic codes indication (Animation).....	2-4-3
(4)	Maintenance parts list .....	2-4-5

## 1-1-1 Specifications


Item		Specifications	
		Low model	High model
Type		Desktop	
Printing method		Electrophotography, laser scan	
Paper weight	Cassette	60 to 120 g/m <sup>2</sup> (Duplex: 60 to 105 g/m <sup>2</sup> )	
	MP tray	60 to 220 g/m <sup>2</sup>	
Paper type	Cassette	Plain, Preprinted, Bond, Recycled, Rough, Letterhead, Color (Colour), Pre-punched, High quality, Custom 1 to 8	
	MP tray	Plain, Transparency, Preprinted, Labels, Bond, Recycled, Rough, Vellum, Letterhead, Color (Colour), Prepunched, Envelope, Cardstock, Thick paper, High quality, Custom 1 to 8	
Paper size	Cassette	A4, JIS B5, A5, Folio, Legal, Letter, Oficio II, Statement, Executive, A6, B6, ISO B5, Envelope C5, 16K, Custom (105 × 148 to 216 × 356 mm/4 1/8 × 5 13/16" to 8 1/2 × 14")	
	MP tray	A4, JIS B5, A5, Folio, Legal, Letter, Oficio II, Statement, Executive, A6, B6, ISO B5, Envelope C5, Envelope #10, Envelope #9, Envelope #6-3/4, Envelope Monarch, Envelope DL, Hagaki, Ofuku Hagaki, 16K, Yokei 2, Yokei 4, Custom (70 × 148 to 216 × 356 mm/2 13/16 × 5 13/16" to 8 1/2 × 14")	
Printing speed	Simplex	A4:35 ppm Letter:37 ppm A5:17 ppm	
	Duplex	A4:19 ppm Letter:20 ppm	
First print time (A4, feed from cassette)		6 s or less  (Excluding time for system stabilization immediately after turning on the main power.)	
Warm-up time (22°C/71.6°F, 60% RH)	Power on	15 s or less	
	Sleep mode	10 s or less	
Paper capacity	Cassette	250 sheets (80 g/m <sup>2</sup> , Letter/A4 or smaller)	
	MP tray	50 sheets (80 g/m <sup>2</sup> , Letter/A4 or smaller)	
Output tray capacity	Simplex	250 sheets (80 g/m <sup>2</sup> )	
	Duplex	200 sheets (80 g/m <sup>2</sup> )	
Continuous printing		1 to 999 sheets	
Photoconductor		OPC drum (diameter 30 mm)	
Image write system		Semiconductor laser (1 beam)	
Charging system		Scorotron (positive charging)	

Item		Specifications	
		Low model	High model
Transfer system		Transfer roller (negative-charged)	
Separation system		Small diameter separation, discharger brush	
Cleaning system		Drum: Counter blade	
Charge erasing system		Exposure by eraser lamp (LED)	
Fusing system		Heat roller system	
Resolution		Fast 1200 mode, 600 dpi, 300 dpi	Fine 1200 mode (Half speed only), Fast 1200 mode, 600 dpi, 300 dpi
Operating environment	Temperature	10 to 32.5 °C/50 to 90.5 °F	
	Humidity	15 to 80%	
	Altitude	2,500 m/8,202 ft maximum	
	Brightness	1,500 lux maximum	
CPU		PowerPC 405F5/360 MHz	
Supported OS		Windows XP, Windows XP Professional, Windows Server 2003, Windows Server 2003 x64 Edition, Windows Vista x86 Edition, Windows Vista x64 Edition, Windows 7 x86 Edition, Windows 7 x64 Edition, Windows Server 2008, Windows Server 2008 x64 Edition, Windows Server 2012 x64 Edition, Windows 8 x86 Edition, Windows 8 x64 Edition, Apple Macintosh OS 10.x (Ver.10.5 or more)	
Interface	Standard	Hi-Speed USB: 1	
	Option	KUIO: 1	
PDL		PRESCRIBE	
Memory	Standard	32 MB	
	Maximum	544 MB	
Dimension (W × D × H)		375 × 393 × 250 mm 14 3/4 × 15 1/2 × 9 7/8"	
Weight (without toner container)		12 kg/26.5 lb or less	
Power source		120 V AC, 60 Hz, 8.0 A 220 to 240 V AC, 50 Hz, 4.2 A	
Options		Expanded memory, Paper feeder (250-sheet), Network interface card (IB-23)	

NOTE: These specifications are subject to change without notice.


## 1-1-2 Parts names

### (1) Overall

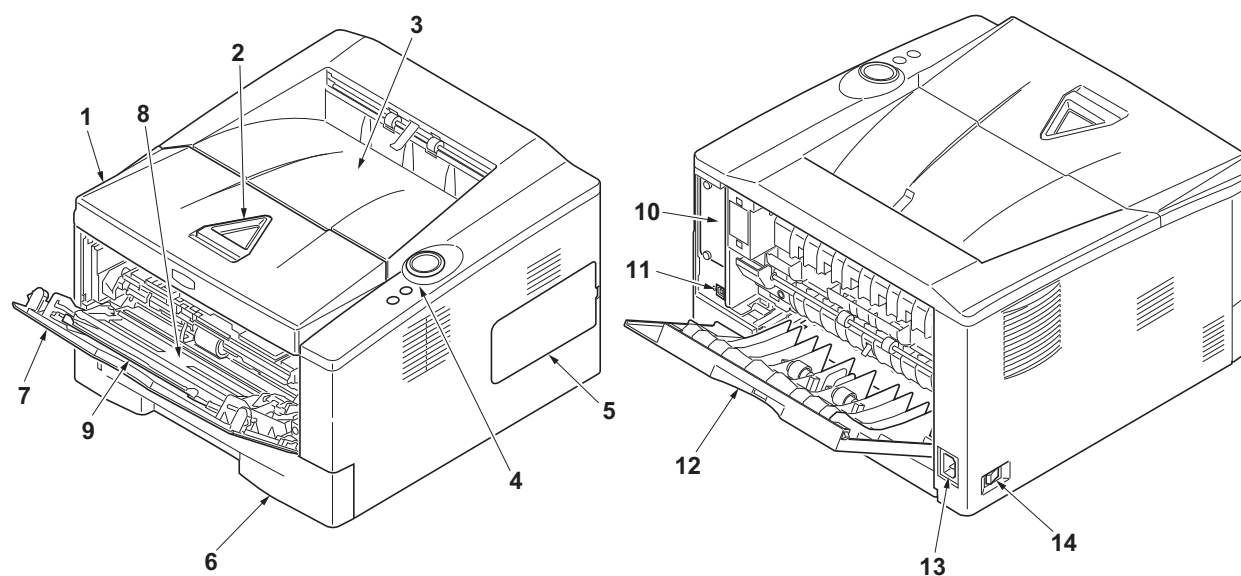

**Figure 1-1-1**

- |                     |                                   |
|---------------------|-----------------------------------|
| 1. Top cover        | 8. MP tray                        |
| 2. Paper stopper    | 9. Sub tray                       |
| 3. Top tray         | 10. Optional interface slot cover |
| 4. Operation panel  | 11. USB interface connector       |
| 5. Right side cover | 12. Rear cover                    |
| 6. Cassette         | 13. Power cord connector          |
| 7. Front cover      | 14. Power switch                  |

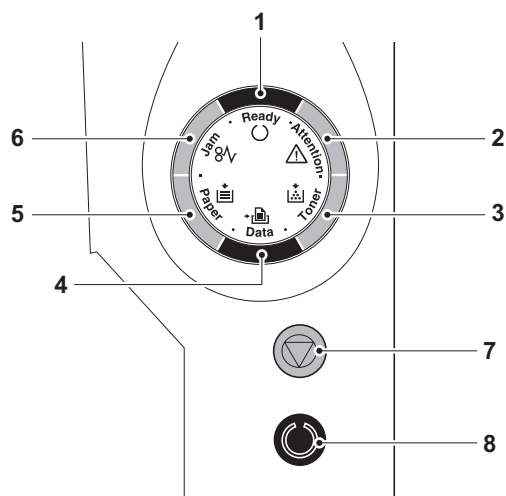**(2) Operation panel****Figure 1-1-2**

1. Ready indicator
2. Attention indicator
3. Toner indicator
4. Data indicator
5. Paper indicator
6. Jam indicator
7. Cancel key
8. GO key



## 1-1-3 Machine cross section

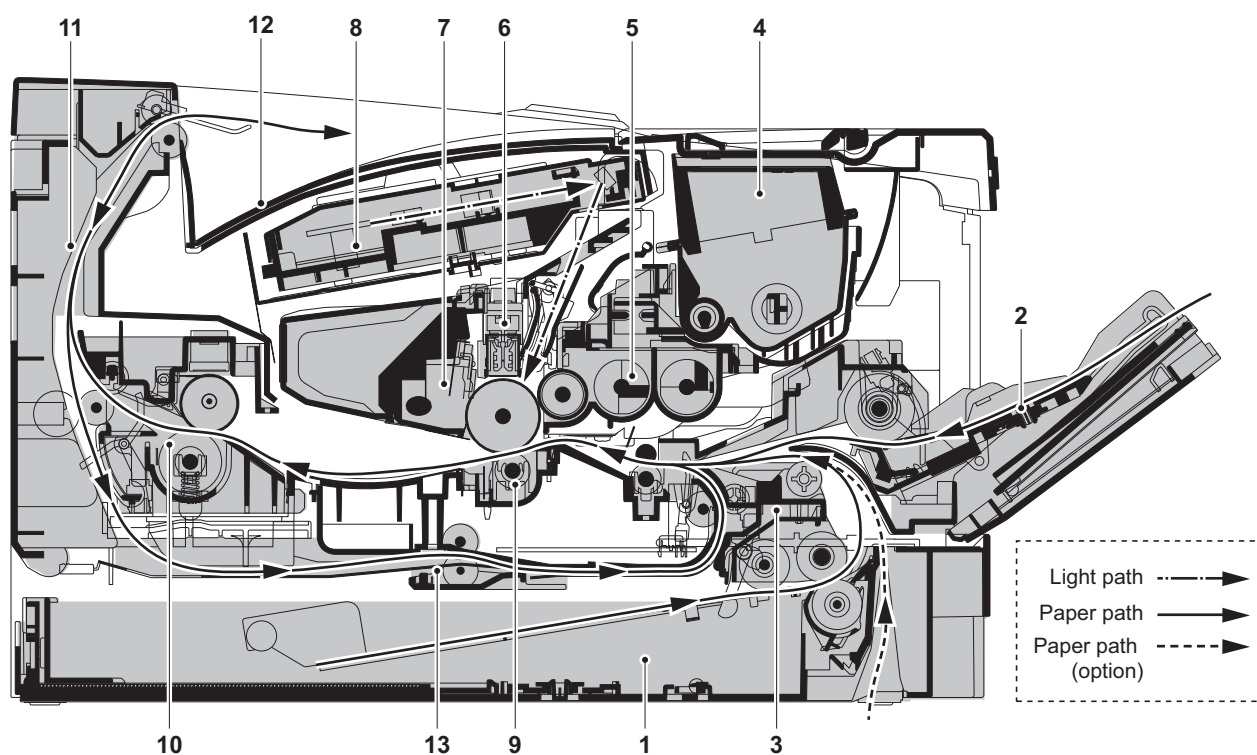


Figure 1-1-3

- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. Cassette                     | 8. Laser scanner unit          |
| 2. MP tray                      | 9. Transfer/separation section |
| 3. Paper feed/conveying section | 10. Fuser section              |
| 4. Toner container              | 11. Exit section               |
| 5. Developing unit              | 12. Top tray                   |
| 6. Main charger unit            | 13. Duplex/conveying section   |
| 7. Drum unit                    |                                |

This page is intentionally left blank.

### 1-2-1 Installation environment

1. Temperature: 10 to 32.5°C/50 to 90.5°F
2. Humidity: 15 to 80%RH
3. Power supply: 120 V AC, 8.0 A  
220 - 240 V AC, 4.2 A
4. Power source frequency: 50 Hz  $\pm 0.3\%$ /60 Hz  $\pm 0.3\%$
5. Installation location
 

Avoid direct sunlight or bright lighting. Ensure that the photoconductor will not be exposed to direct sunlight or other strong light when removing paper jams.

Avoid locations subject to high temperature and high humidity or low temperature and low humidity; an abrupt change in the environmental temperature; and cool or hot, direct air.

Avoid places subject to dust and vibrations.

Choose a surface capable of supporting the weight of the machine.

Place the machine on a level surface (maximum allowance inclination: 1°).

Avoid air-borne substances that may adversely affect the machine or degrade the photoconductor, such as mercury, acidic or alkaline vapors, inorganic gasses, NOx, SOx gases and chlorine-based organic solvents.

Select a well-ventilated location.
6. Allow sufficient access for proper operation and maintenance of the machine.

Machine front: 500 mm/19 11/16"

Machine rear: 200 mm/7 7/8"

Machine right: 300 mm/11 13/16"

Machine left: 300 mm/11 13/16"

Machine top: 400 mm/15 3/4"


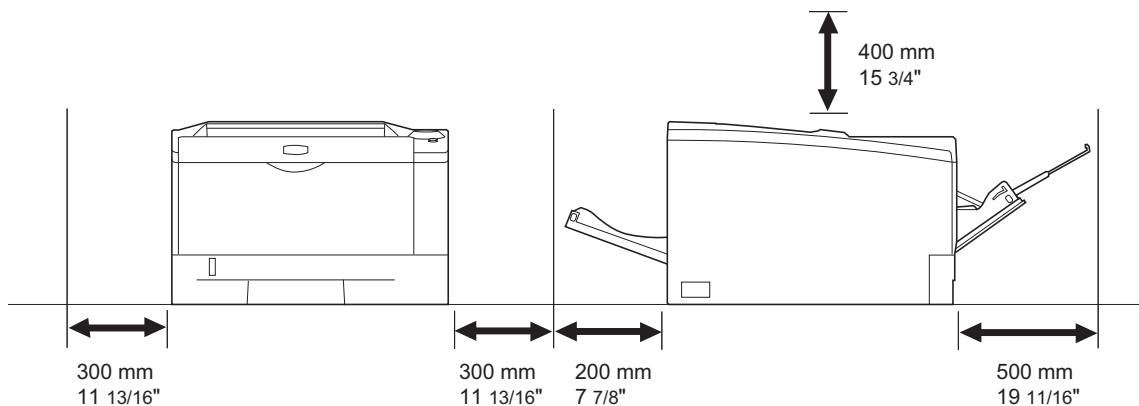


Figure 1-2-1

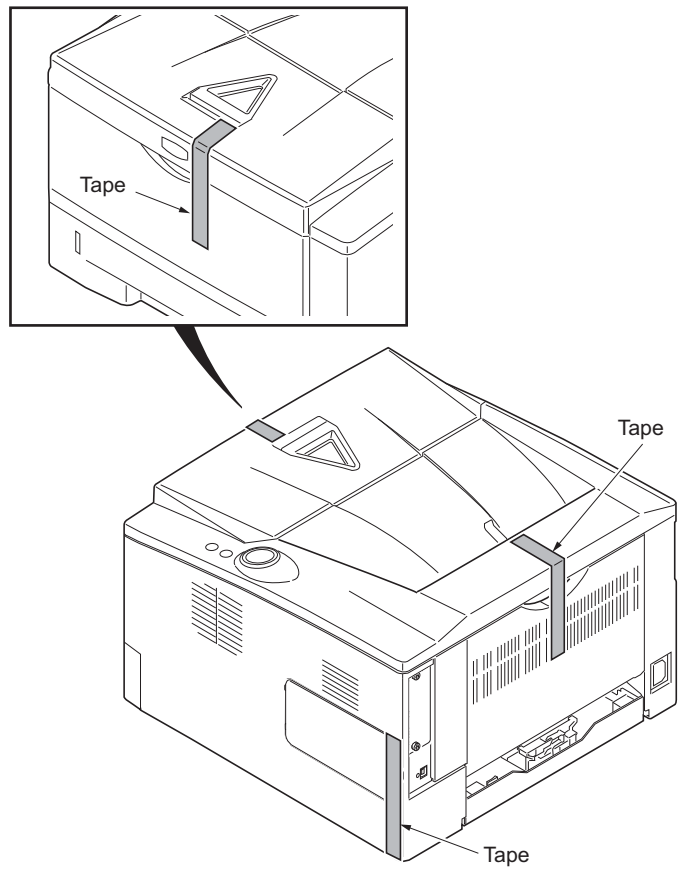

**(1) Removing the tapes****Procedure**

1. Remove three tapes.

**Figure 1-2-3**

### 1-2-3 Installing the expanded memory (option)

#### Procedure

1. Turn off printer power switch.  
Caution: Do not insert or remove expanded memory while printer power is on.  
Doing so may cause damage to the printer and the expanded memory.
2. Remove the right side cover.
3. Remove the tape.

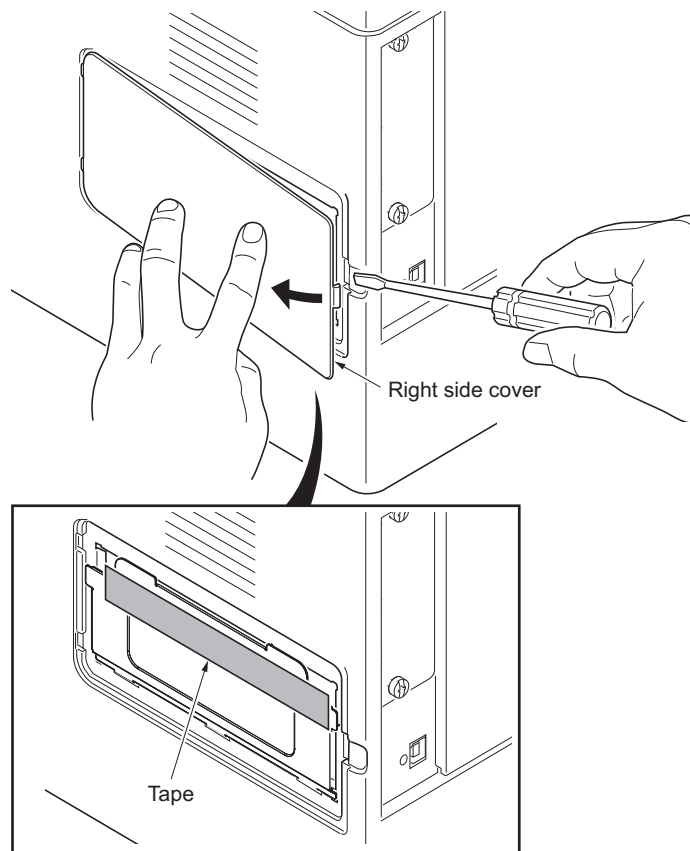


Figure 1-2-4

4. Open the memory slot cover.
5. Open clamps on both ends of the memory socket on the control PWB.
6. Insert the expanded memory into the memory socket so that the notches on the memory align with the corresponding protrusions in the slot.  
The memory module is secured to the memory socket with the clamps.
7. Close the memory slot cover.
8. Refit the right side cover.
9. Print a status page to check the memory expansion (See page P.1-3-2).  
If memory expansion has been properly performed, information on the installed memory is printed with the total memory capacity has been increased. Standard memory capacity 32 MB.

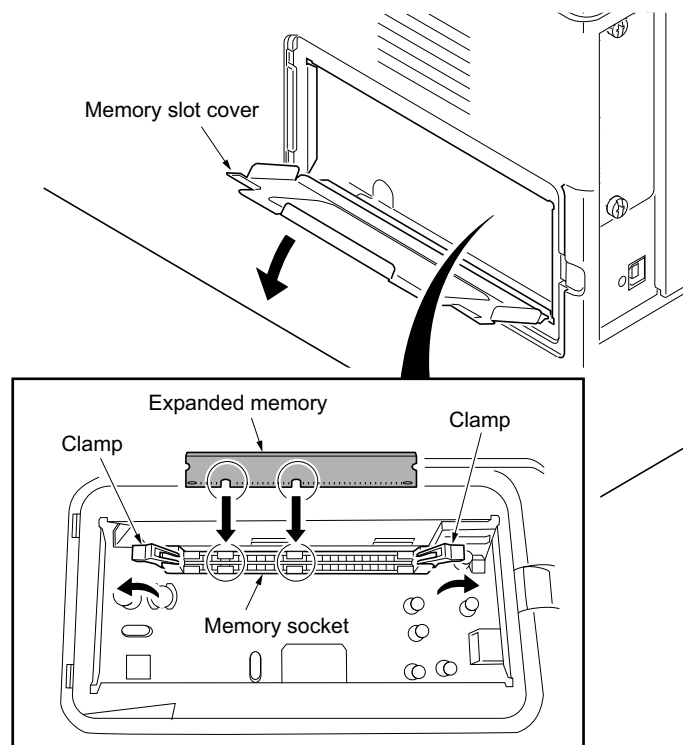


Figure 1-2-5

## 1-2-4 Installing the memory card (option)

### Procedure

1. Turn off printer power switch.  
Caution: Do not insert or remove memory card while printer power is on.  
Doing so may cause damage to the printer and the memory card.
2. Open the rear cover.

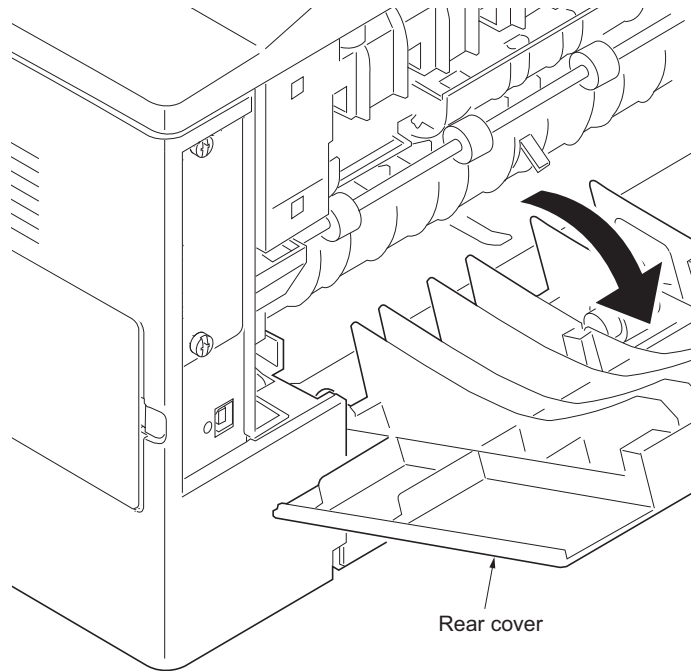


Figure 1-2-6

3. Remove two screws and then remove the optional interface slot cover.
4. Insert the memory card into the memory card slot. Push it in all the way.
5. Secure the optional interface slot cover by using two screws.
6. Format the memory card before use.

To format the memory card:  
Send the following PRESCRIBE command sequence from the PC to the printer.

```
!R! RWER F, A; EXIT;
```

Note: To send a PRESCRIBE command sequence to the printer, use COMMAND CENTER (the printer's embedded web) while the printer is connected to the PC via its network interface.

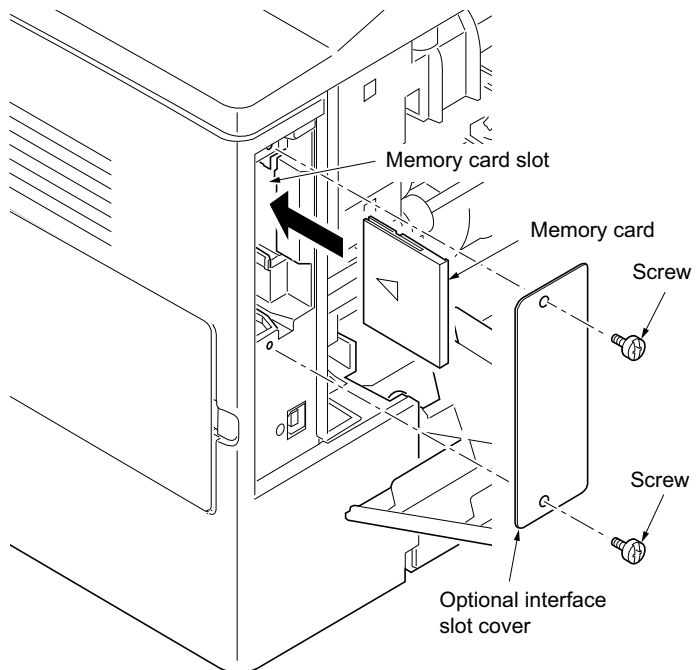


Figure 1-2-7

## 1-2-5 Installing the network interface card (option)

### Procedure

1. Turn off printer power switch.  
 Caution: Do not insert or remove network interface card while printer power is on.  
 Doing so may cause damage to the printer and the network interface card.
2. Open the rear cover.

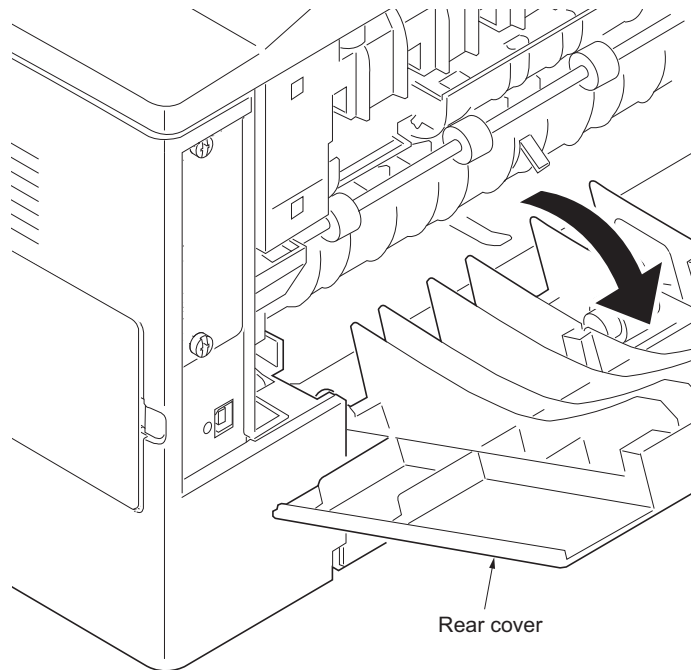


Figure 1-2-8

3. Remove two screws and then remove the optional interface slot cover.
4. Insert the network interface card into the network interface slot. Push it in all the way.
5. Secure the network interface card by using two screws.

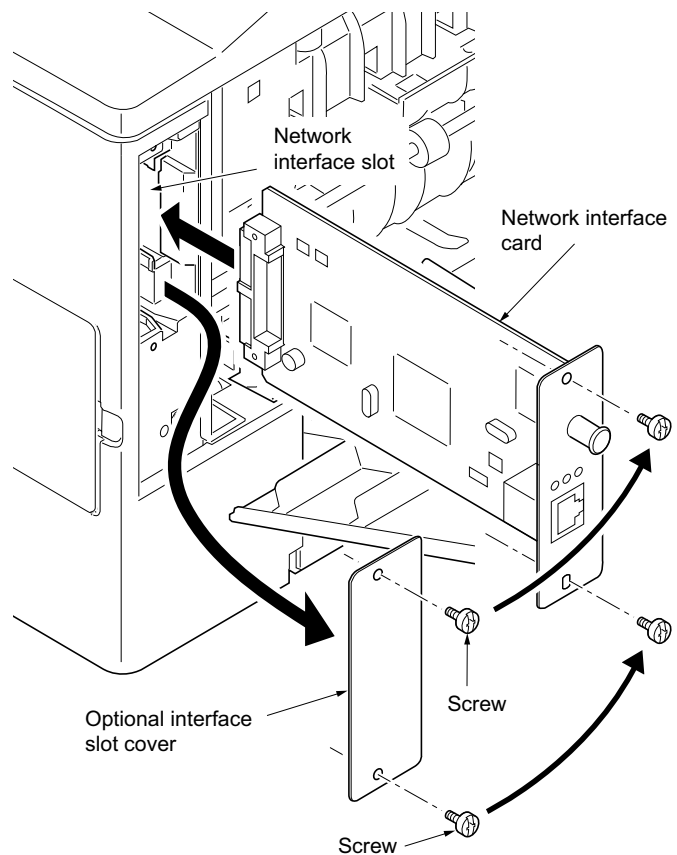


Figure 1-2-9



### **1-3-1 Maintenance mode**

The product incorporates several service modes which are activated by using the keys on the operation panel or by commanding from a PC.

#### **(1) Executing a service mode**


Printing a status page for service purpose.....	See page 1-3-2.
Printing an event log (EVENT LOG) .....	See page 1-3-6.
Toner install mode.....	See page 1-3-11.
[REPLACE MAINTENANCE KIT] message sheet.....	See page 1-3-12.

[illegible]

[illegible]

Service items		Description
No.	Items	Description
(1)	Engine ROM information	[Flash ROM version]
(2)	Boot ROM information	[Boot ROM version]
(3)	Software jumper switch information (hexadecimal) [First byte/Second byte (displayed in OEM model only)]	First byte bit 0 = 1: (Fixed) bit 1 = 0: Overseas, 1: Domestic (Japan) bit 2, 3 (Not used) bit 4 = 0: Kyocera, 1: OEM bit 5 = 0: For Europe, 1: For US bit 6 = 0: Non MICR mode, 1: MICR mode bit 7 (Not used) Second byte: Displayed in OEM model only
(4)	Total page	-
(5)	Toner install information	-
(6)	USB information	00: Not connected 01: Full-Speed 02: Hi-Speed
(7)	Operation panel lock status (displayed only when locked)	01: Partial lock 02: Full lock
(8)	NVRAM error (displayed only when any error has occurred)	01: ID error 02: Version error 03: Checksum error 04: NVRAM crush error
(9)	Printable area setting	/Top offset/Left offset/Page length/Page width
(10)	Left offset for each paper source	/MP tray/Cassette 1/Cassette 2/Cassette 3/Duplex (1/600 inches unit)
(11)	Top offset for each paper source	/MP tray/Cassette 2/Cassette 3/Duplex (1/600 inches unit)
(12)	Offset for rotation	/Top offset/Left offset/ (1/600 inches unit)
(13)	Optional paper feeder version	/Paper feeder 1/Paper feeder 2/
(14)	Calibration table setting	Setting value (FRPO I4), Hexadecimal
(15)	Resolution	Current value of bit-per-pixel
(16)	Copy quantity	-
(17)	Installed device/function information	bit0: HDD bit1: Optional ROM bit2: Memory card bit3: USB memory bit4: HDD security
(18)	Operation panel message language	PMSG command setting (decimal)
(19)	Current temperature	0 to 50 °C/32 to 122 °F (in 1 °C/1.8 °F increment, "-" = Temperature sensor is abnormal.)


Service items		Description																				
No.	Items	Description																				
(20)	Fixed asset number	(Maximum 16 characters)																				
(21)	Paper type attributes	Paper type setting value from 1 to 28 (fuser, weight, duplex) (unused paper type are always 0x00.)																				
(22)	Paper type attributes	Paper type setting value from 1 to 28 (density) (unused paper type are always 0x00.)																				
(23)	Memory SPD information (slot 1)	2 to 6 bytes, 8 to 36 bytes, 94 to 95 bytes (total 32 bytes)																				
(24)	DRT correction coefficient	4 bytes × 11 × 23 groups																				
(25)	Engine parameter	Hexadecimal, 256 bytes																				
(26)	RFID reader/writer version information	-																				
(27)	RFID information	-																				
(28)	Machine serial number	-																				
NOTE:																						
Code conversion																						
<table><tr><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td></tr><tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr></table>			A	B	C	D	E	F	G	H	I	J	0	1	2	3	4	5	6	7	8	9
A	B	C	D	E	F	G	H	I	J													
0	1	2	3	4	5	6	7	8	9													

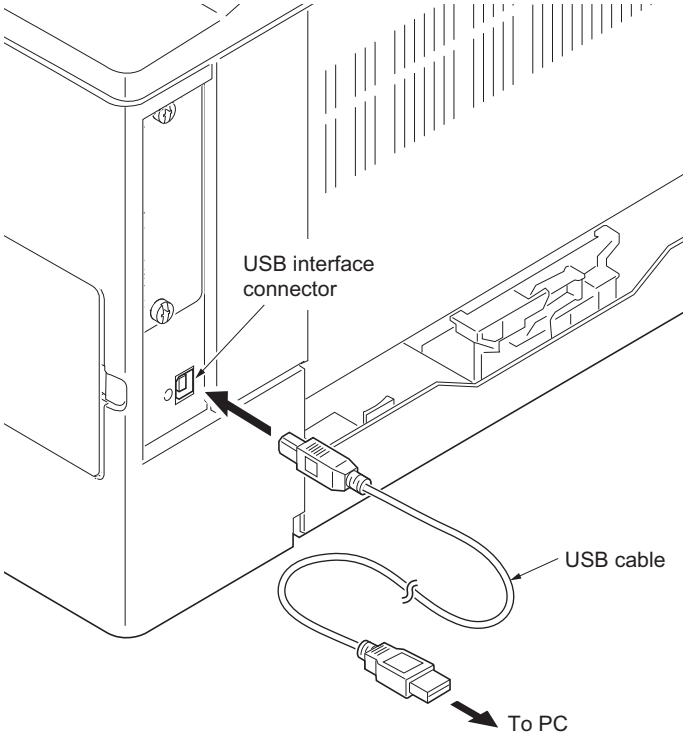Service items	Description
<b>Printing an event log (EVENT LOG)</b>	<p><b>Description</b> Prints a history list of occurrences of paper jam, self-diagnostics, toner replacements, etc.</p> <p><b>Purpose</b> To allow machine malfunction analysis based on the frequency of paper misfeeds, self diagnostic errors and replacements.</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Connect the USB cable between printer and PC.</li> </ol>  <p style="text-align: center;"><b>Figure 1-3-3</b></p> <ol style="list-style-type: none"> <li>2. Connect the power cord.</li> <li>3. Turn printer power on. Make sure the printer is ready.</li> <li>4. At the DOS prompt, send the following command to the printer:    <pre>echo !R! ELOG;EXIT;&gt;prn</pre>             Event log will be printed.         </li> </ol>

1-3-7

Service items		Description		
		Detail of event log (EVENT LOG) information		
No.	Items	Description		
(1)	Control PWB mask version	[Engine mask version/Engine software version]		
(2)	BROM version	-		
(3)	Software jumper switch information (hexadecimal) [First byte/Second byte (displayed in OEM mode only)]	First byte bit 0 = 1: (Fixed) bit 1 = 0: Overseas, 1: Domestic (Japan) bit 2, 3 (Not used) bit 4 = 0: Kyocera, 1: OEM bit 5 = 0: For Europe, 1: For US bit 6 = 0: Non MICR mode, 1: MICR mode bit 7 (Not used) Second byte: Displayed in OEM mode only		
(4)	Control PWB firmware version	-		
(5)	Control PWB firmware release date	-		
(6)	Total page counter	-		
(7)	Printer serial number	-		
(8)	Paper Jam Log	<u>#</u> Remembers 1 to 8 of occurrence. If the occurrence of the previous paper jam is less than 8, all of the paper jams are logged. When the occurrence exceeds 8, the oldest occurrence is removed.	<u>Count.</u> The total page count at the time of the paper jam.	<u>Event</u> Log code (2 digit, hexadecimal, 6 categories) (a) Cause of a paper jam (b) Position of paper jam (c) Paper source (d) Paper size (e) Paper type (f) Paper exit  Refer to the next page for the details of each log code.

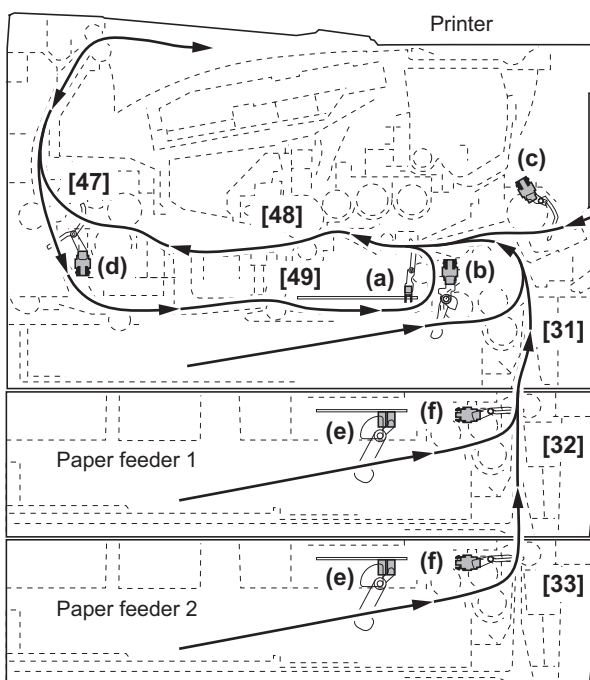

Service items		Description																												
No.	Items	Description																												
(8) cont.	Paper Jam Log	(a) Cause of paper jam  10: Paper does not arrive at the registration sensor. (MP tray) [42] 10: Paper does not arrive at the registration sensor. (Cassette 1) [31] 10: Paper does not arrive at the registration sensor. (Cassette 2) [31] 10: Paper does not arrive at the registration sensor. (Cassette 3) [31] 10: Paper does not arrive at the registration sensor. (Duplex conveying) [49] 11: Paper does not pass the registration sensor. [48] 12: Paper remains at the registration sensor when power is turned on. [48] 20: Paper does not arrive at the exit sensor. [48] 21: Paper does not pass the exit sensor. [47] 22: Paper remains at the exit sensor when power is turned on. [47] 30: Paper does not arrive at the paper feeder 1's PF paper feed sensor. (Cassette 2) [32] 30: Paper does not arrive at the paper feeder 1's PF paper feed sensor. (Cassette 3) [33] 31: Paper does not pass the paper feeder 1's PF paper feed sensor. (Cassette 2) [32] 32: Paper remains at the paper feeder 1's PF paper feed sensor when power is turned on. (Cassette 2) [32] 40: Paper does not arrive at the paper feeder 2's PF paper feed sensor. (Cassette 3) [33] 41: Paper does not pass the paper feeder 2's PF paper sensor. (Cassette 3) [33] 42: Paper remains at the paper feeder 2's PF paper feed sensor when power is turned on. (Cassette 3) [33] A1: Paper does not arrive at the exit sensor. [47] A3: Paper does not pass the exit sensor. [49] E0: Paper misfeed occurs due to forced stop when an error occurs during printing. (such as opening of a cover) [00] F0 to FE: Paper misfeed by another cause. [00]  Note: Values (hexadecimal) within [ ] indicate paper misfeed locations.																												
		(b) Detail of jam location   <table><tr><th colspan="2">Paper jam location</th></tr><tr><td>[31]</td><td>Cassette 1</td></tr><tr><td>[32]</td><td>Cassette 2</td></tr><tr><td>[33]</td><td>Cassette 3</td></tr><tr><td>[42]</td><td>MP tray</td></tr><tr><td>[47]</td><td>Fuser/Exit section</td></tr><tr><td>[48]</td><td>Printer inside</td></tr><tr><td>[49]</td><td>Duplex section</td></tr></table> <table><tr><th colspan="2">Sensors</th></tr><tr><td>(a)</td><td>Registration sensor</td></tr><tr><td>(b)</td><td>Paper sensor</td></tr><tr><td>(c)</td><td>MP paper sensor</td></tr><tr><td>(d)</td><td>Paper exit sensor</td></tr><tr><td>(e)</td><td>PF paper sensor</td></tr><tr><td>(f)</td><td>PF paper feed sensor</td></tr></table>	Paper jam location		[31]	Cassette 1	[32]	Cassette 2	[33]	Cassette 3	[42]	MP tray	[47]	Fuser/Exit section	[48]	Printer inside	[49]	Duplex section	Sensors		(a)	Registration sensor	(b)	Paper sensor	(c)	MP paper sensor	(d)	Paper exit sensor	(e)	PF paper sensor
Paper jam location																														
[31]	Cassette 1																													
[32]	Cassette 2																													
[33]	Cassette 3																													
[42]	MP tray																													
[47]	Fuser/Exit section																													
[48]	Printer inside																													
[49]	Duplex section																													
Sensors																														
(a)	Registration sensor																													
(b)	Paper sensor																													
(c)	MP paper sensor																													
(d)	Paper exit sensor																													
(e)	PF paper sensor																													
(f)	PF paper feed sensor																													

Service items		Description		
(8) cont.	Paper Jam Log	(c) Detail of paper source (Hexadecimal)		
		00: MP tray 01: Cassette 1 (printer) 02: Cassette 2 (paper feeder 1) 03: Cassette 3 (paper feeder 2) 07: Duplex		
		(d) Detail of paper size (Hexadecimal)		
		00: (Undefined)                      09: B5R                      20: Reply-paid postcard 01: Monarch                      0D: A5R                      21: Oficio II 02: Business                      0E: A6                      28: 16K-R 03: International DL                      0F: B6                      32: Statement-R 04: International C5                      10: Commercial #9                      33: Folio 05: Executive                      11: Commercial #6                      34: Western type 2 06: Letter-R                      12: ISO B5                      35: Western type 4 07: Legal                      13: Custom 08: A4R                      1F: Post card		
		(e) Detail of paper type (Hexadecimal)		
		01: Plain                      09: Letterhead                      16: Custom 2 02: Transparency                      0A: Color                      17: Custom 3 03: Preprint                      0B: Prepunched                      18: Custom 4 04: Labels                      0C: Envelope                      19: Custom 5 05: Bond                      0D: Cardstock                      1A: Custom 6 06: Recycle                      10: Thick                      1B: Custom 7 07: Vellum                      11: High quality                      1C: Custom 8 08: Rough                      15: Custom 1		
		(f) Detail of paper exit location (Hexadecimal)		
		01: Top tray		
(9)	Service Call (Self diagnostic error) Log	#	Count.	Service Code
		Remembers 1 to 8 of occurrence of self diagnostics error.  If the occurrence of the previous diagnostics error is less than 8, all of the diagnostics errors are logged.	The total page count at the time of the self diagnostics error.	Self diagnostic error code (See page 1-4-5)  Example 01.6000  01 means a self-diagnostic error; 6000 means a self diagnostic error code.

Service items		Description		
No.	Items	Description		
(10)	Maintenance Log	#	Count.	Item
	NOTE: It is not logged if 100 or more counts are not added to the count at the last occurrence of replacement.	Remembers 1 to 8 of occurrence of replacement. If the occurrence of the previous replacement of toner container is less than 8, all of the occurrences of replacement are logged.	<p>The total page count at the time of the replacement of the toner container.</p> <p>This is virtually logged as the occurrence of the "Toner Empty" condition since the replacement of the toner container is not precisely detectable.</p> <p>* :The toner replacement log is triggered by toner empty. This record may contain such a reference as the toner container is inserted twice or a used toner container is inserted.</p>	<p>Code of maintenance replacing item (1 byte, 2 categories)</p> <p>First byte (Replacing item)</p> <p>01: Toner container</p>
(11)	Unknown Toner Log	#	Count.	Item
	NOTE: It is not logged if 100 or more counts are not added to the count at the last error.	<p>Remembers 1 to 5 of occurrence of unknown toner detection.</p> <p>If the occurrence of the previous unknown toner detection is less than 5, all of the unknown toner detection are logged.</p>	The total page count at the time of the "Toner Empty" condition with using an unknown toner container.	<p>Unknown toner log code (1 byte, 2 categories)</p> <p>First byte 01: Fixed (Toner container)</p> <p>Second byte 00: Fixed (Black)</p>

Service items		Description		
(12)	Counter Log	(g) Paper jam	(h) Self diagnostic error	(i) Maintenance item replacing
	<p>Comprised of three log counters including paper jams, self diagnostics errors, and replacement of the toner container.</p> <p>NOTE: It is not logged if 100 or more counts are not added to the count at the last error.</p>	<p>Indicates the log counter of paper jams depending on location.</p> <p>Refer to (8) Paper Jam Log.</p> <p>All instances including those are not occurred are displayed.</p>	<p>Indicates the log counter of self diagnostics errors depending on cause. (See page 1-4-5)</p> <p>Example C6000: 4</p> <p>Self diagnostics error 6000 has happened four times.</p>	<p>Indicates the log counter depending on the maintenance item for maintenance.</p> <p>T: Toner container 00: Black</p> <p>Example T00: 1</p> <p>The (black) toner container has been replaced once.</p> <p>* :The toner replacement log is triggered by toner empty. This record may contain such a reference as the toner container is inserted twice or a used toner container is inserted.</p>
<b>Toner install mode</b>		<p><b>Description</b> Replenishes toner rapidly from the toner container into the developing unit.</p> <p><b>Purpose</b> To execute after replacing the developing unit to replenish toner rapidly into the developing unit.</p> <p><b>Procedure</b> Toner install mode is performed by simultaneously pressing and holding the GO and Cancel keys for more than 5 seconds. To abort toner install mode, turn power on while pressing and holding the GO and Cancel keys.</p>		

Service items	Description
<p><b>[REPLACE MAINTENANCE KIT] message sheet</b></p>	<p><b>Description</b>  [REPLACE MAINTENANCE KIT] message sheet is printed at the 1st power-up after the page count exceeding 100,000 pages.</p> <p><b>Procedure</b>  Replace the maintenance kit.</p> <p>Low model  Maintenance kit MK-182 (for 120 V specifications)  Maintenance kit MK-180 (for 230 V specifications)  Maintenance kit MK-184 (for 240 V specifications)</p> <p>High model  Maintenance kit MK-172 (for 120 V specifications)  Maintenance kit MK-170 (for 230 V specifications)  Maintenance kit MK-174 (for 240 V specifications)</p> <p><b>Procedure for replacing</b>  Drum unit (See page 1-5-12)  Developing unit (See page 1-5-11)</p> <div data-bbox="564 882 1310 1780" data-label="Image"> <p style="text-align: center;"><b><u>REPLACE MAINTENANCE KIT</u></b></p> <p><b><u>IMPORTANT!!</u></b></p> <p>Replacement of the maintenance kit is necessary at 100,000 pages of printing and requires professional servicing.</p> <p>Contact your service technician.</p> <p><b><u>Wichtig!!</u></b></p> <p>Dieser Austausch ist 100.000 Druckseiten erforderlich und muss von einem qualifizierten Techniker vorgenommen werden.</p> <p>Den Kundendienst informieren.</p> <p><b><u>IMPORTANT!!</u></b></p> <p>Remplacez le kit d'entretien.</p> <p>Le remplacement du kit d'entretien est requis à 100 000 pages et nécessite l'intervention d'un professionnel.</p> <p>Contactez votre technicien de maintenance.</p> </div>

**Figure 1-3-5 [REPLACE MAINTENANCE KIT] message sheet**

This page is intentionally left blank.

## 1-4-1 Paper misfeed detection

### (1) Paper misfeed indication

If paper jams in the paper conveying system, or no paper sheets are fed at all, the printer automatically goes offline, and the jam indicator will flash rapidly. Status Monitor or COMMAND CENTER can indicate the location of the paper jam (the component where the paper jam has occurred). After removing the jammed paper, the printer will resume printing.


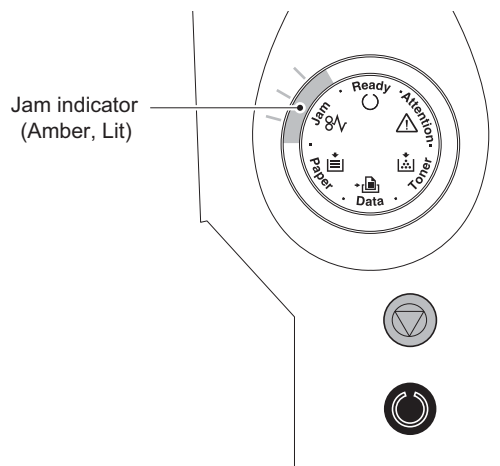


Figure 1-4-1

**(2) Paper misfeed detection condition****Figure 1-4-2**

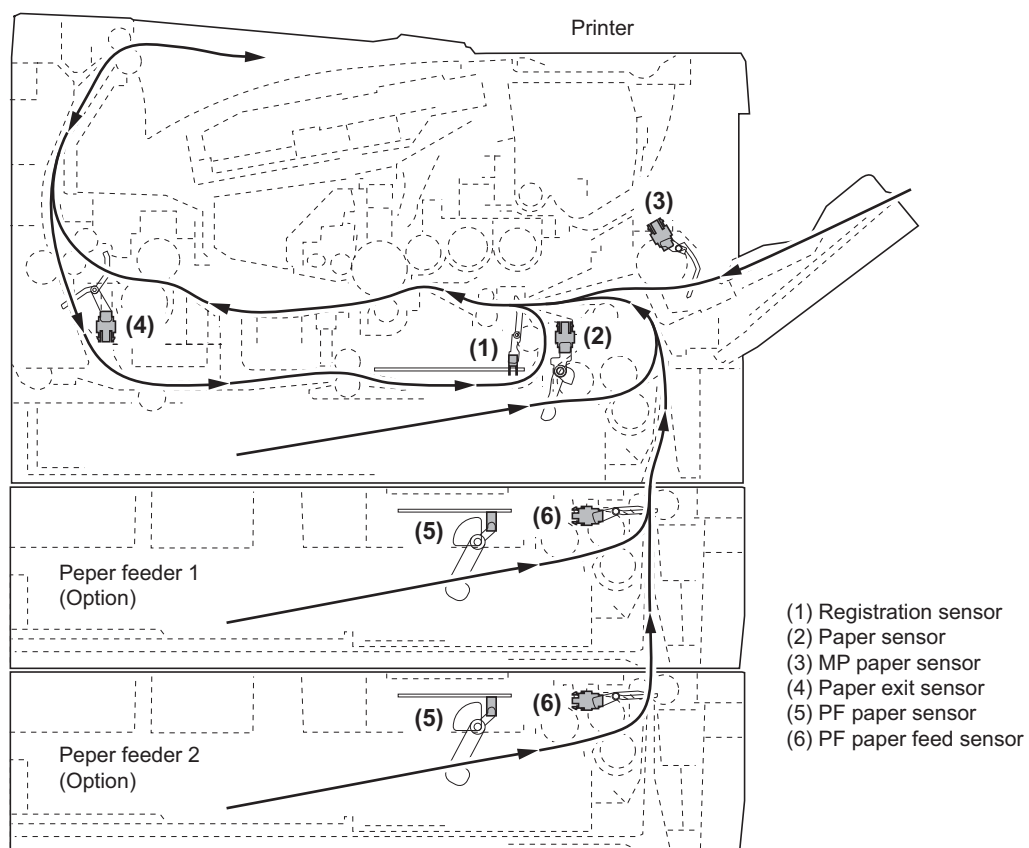

## 1-4-2 Self-diagnostic function

### (1) Self-diagnostic function

The printer is equipped with self-diagnostic function which automatically halts the printer when an error is detected. The four indicators (Jam, Paper, Attention, Toner) are simultaneously lit, then indicate a specific error by the combination of the four indicators.

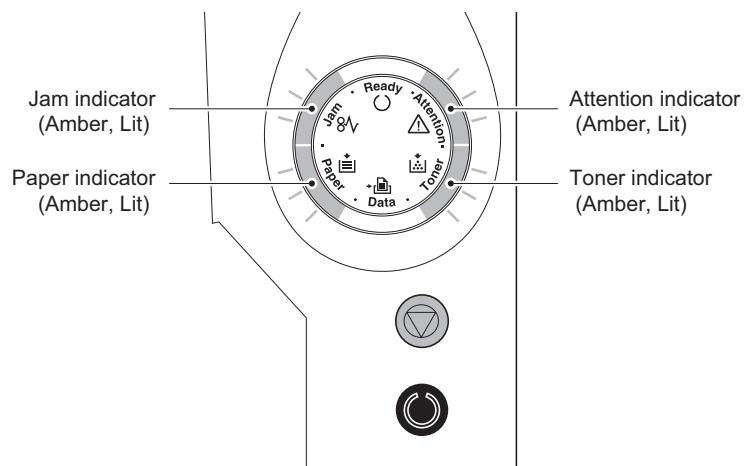
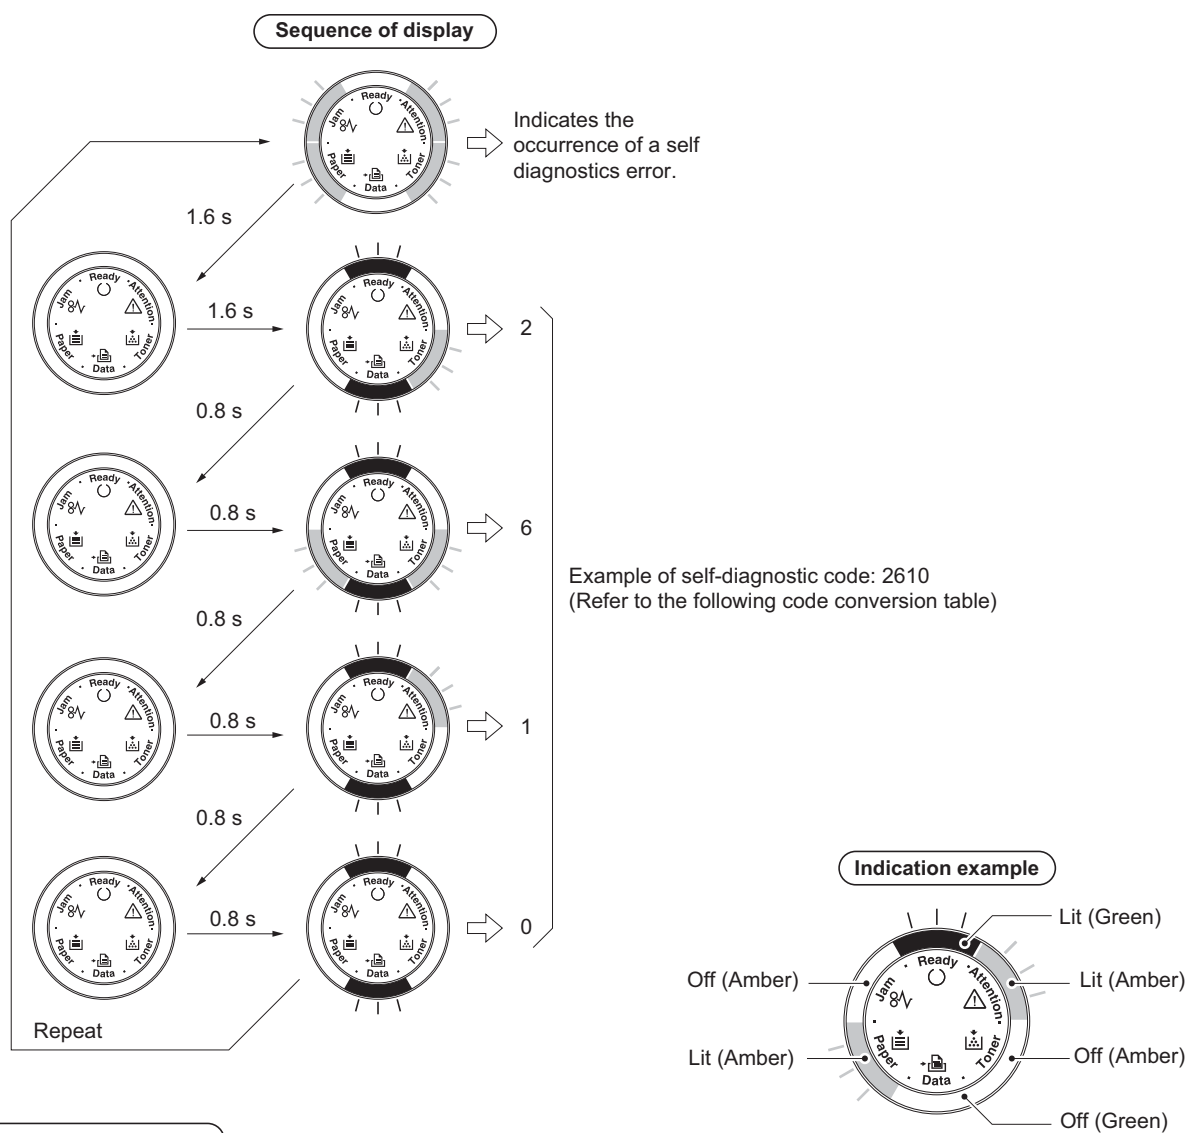


Figure 1-4-3

## (2) Self diagnostic codes indication

**Code conversion table**

Code	1	2	3	4	5	
Indicator						
Code	6	7	8	9	0	F
Indicator						

Self diagnostic codes indication (Animation). See page 2-4-3.

**Figure 1-4-4**

## (3) Self diagnostic codes

Code	Contents	Remarks	
		Causes	Check procedures/corrective measures
0150	<b>Control PWB EEPROM error</b> Detecting control PWB EEPROM (U300) communication error.	Improper installation control PWB EEPROM (U300).	Check the installation of the EEPROM (U300) and remedy if necessary (See page 1-5-19).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
0420	<b>Paper feeder communication error</b> Communication error between control PWB and optional paper feeder.	Improper installation paper feeder.	Follow installation instruction carefully again.
		Defective harness between control PWB (YC318) and paper feeder interface connector, or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
		Defective harness between PF main PWB (YC5) and paper feeder interface connector, or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness (Refer to the service manual for the paper feeder).
		Defective PF main-PWB.	Replace the PF main PWB (Refer to the service manual for the paper feeder).
2000	<b>Main motor error</b> The main motor ready input is not given for 2 s during the main motor is ON.	Defective harness between main motor (CN1) and control PWB (YC305), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
		Defective drive transmission system of the main motor.	Check if the rollers and gears rotate smoothly. If not, grease the bushings and gears. Check for broken gears and replace if any.
		Defective main motor.	Replace the main motor (See page 1-5-29).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).

 
Code	Contents	Remarks	
		Causes	Check procedures/corrective measures
<b>2610</b>	<b>PF paper feed motor error (Paper feeder 1)</b> The PF paper feed motor of paper feeder 1 ready input is not given for 2 s during the PF paper feed motor is ON.	Defective harness between PF paper feed motor and PF main PWB (YC4), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness (Refer to the service manual for the paper feeder).
		Defective drive transmission system of the PF paper feed motor.	Check if the gears rotate smoothly. If not, grease the bushings and gears. Check for broken gears and replace if any.
		Defective PF main motor.	Replace the PF main motor (Refer to the service manual for the paper feeder).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
<b>2620</b>	<b>PF paper feed motor error (Paper feeder 2)</b> The PF paper feed motor of paper feeder 2 ready input is not given for 2 s during the PF paper feed motor is ON.	Defective harness between PF paper feed motor and PF main PWB (YC4), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness (Refer to the service manual for the paper feeder).
		Defective drive transmission system of the PF paper feed motor.	Check if the gears rotate smoothly. If not, grease the bushings and gears. Check for broken gears and replace if any.
		Defective PF main motor.	Replace the PF main motor (Refer to the service manual for the paper feeder).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
<b>4000</b>	<b>Polygon motor (laser scanner unit) error</b> The polygon motor ready input is not given for 6 s during the polygon motor is ON.	Defective harness between polygon motor and control PWB (YC319), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
		Defective laser scanner unit.	Replace the laser scanner unit (See page 1-5-30).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).

Code	Contents	Remarks	
		Causes	Check procedures/corrective measures
6000	<b>Broken fuser heater lamp wire</b> The fuser temperature does not rise after the fuser heater lamp has been turned on.	Poor contact in the fuser thermistor connector terminals.	Reinsert the connector (See page 1-5-16).
		Poor contact in the fuser heater lamp connector terminals.	Reinsert the connector (See page 1-5-16).
		Fuser thermistor installed incorrectly.	Replace the fuser unit (See page 1-5-16).
		Fuser thermal cutout triggered.	Replace the fuser unit (See page 1-5-16).
		Fuser heater lamp installed incorrectly.	Replace the fuser unit (See page 1-5-16).
		Broken fuser heater lamp wire.	Replace the fuser unit (See page 1-5-16).
6020	<b>Abnormally high fuser thermistor temperature</b> Fuser thermistor detects abnormally temperature. When the temperature of a fuser thermistor detects 195 °C or more at the time of heater OFF and 155 °C or more.	Shorted fuser thermistor.	Replace the fuser unit (See page 1-5-16).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
6030	<b>Broken fuser thermistor wire</b> Input from fuser thermistor is 0 (A/D value).	Poor contact in the fuser thermistor connector terminals.	Reinsert the connector (See page 1-5-16).
		Broken fuser thermistor wire.	Replace the fuser unit (See page 1-5-16).
		Fuser thermistor installed incorrectly.	Replace the fuser unit (See page 1-5-16).
		Fuser thermal cutout triggered.	Replace the fuser unit (See page 1-5-12).
		Fuser heater lamp installed incorrectly.	Replace the fuser unit (See page 1-5-16).
		Broken fuser heater lamp wire.	Replace the fuser unit (See page 1-5-16).
6400	<b>Zero cross signal error</b> The zero cross signal does not reach the control PWB for specified time.	Defective harness between high voltage PWB (YC202) and control PWB (YC311), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness (See page 1-5-19).
		Defective harness between power source PWB (YC103) and high voltage PWB (YC201), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness (See page 1-5-22).
		Defective power source PWB.	Replace the power source PWB (See page 1-5-22).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).

Code	Contents	Remarks	
		Causes	Check procedures/corrective measures
<b>7990</b>	<b>Waste toner full</b> The waste toner sensor has detected that the waste toner reservoir (drum unit) is full.	Waste toner reservoir (drum unit) is full.	Turn the main power switch off/on to restart the printer. If the error is not resolved, replace the drum unit (See page 1-5-12).
		Defective waste toner sensor.	Replace the waste toner sensor.
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
<b>F010</b>	<b>Control PWB checksum error</b>	Defective code ROM (flash memory).	Turn the power switch off/on to restart the printer. If the error is not resolved, replace the control PWB (See page 1-5-19).
		Defective control PWB.	Replace the control PWB (See page 1-5-19).
<b>F020</b>	<b>Control PWB RAM checksum error</b>	Defective main memory (RAM) on the control PWB.	Turn the power switch off/on to restart the printer. If the error is not resolved, replace control PWB (See page 1-5-19).
		Defective expanded memory (DIMM).	Replace the expanded memory (DIMM) (See page 1-2-4).
<b>F030</b>	<b>Control PWB general failure</b>	Defective control PWB.	Turn the power switch off/on to restart the printer. If the error is not resolved, replace control PWB (See page 1-5-19).
<b>F040</b>	<b>Control PWB engine communication error</b>	Defective control PWB.	Turn the power switch off/on to restart the printer. If the error is not resolved, replace control PWB (See page 1-5-19).
<b>F050</b>	<b>Control PWB engine checksum error</b>	Some error may have occurred when downloading the firmware of the control PWB.	Download the firmware of the control PWB again using the memory card (See page 1-6-2).
		Defective control PWB.	Turn the power switch off/on to restart the printer. If the error is not resolved, replace control PWB (See page 1-5-19).
<b>F226</b>	<b>Control PWB video data control error</b>	Defective control PWB.	Turn the power switch off/on to restart the printer. If the error is not resolved, replace control PWB (See page 1-5-19).

**1-4-3 Image formation problems**

(1) Completely blank printout.




See page 1-4-10

(2) All-black printout.




See page 1-4-10

(3) Dropouts.

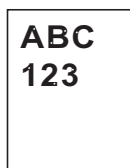


See page 1-4-11

(4) Black dots.

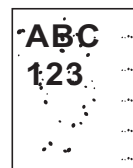


See page 1-4-11

(5) Black horizontal streaks.

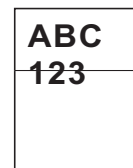


See page 1-4-11

(6) Black vertical streaks.

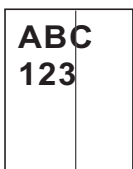


See page 1-4-12

(7) Unsharpness.

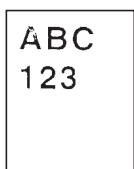


See page 1-4-12

(8) Gray background.

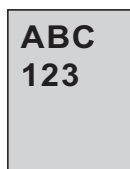


See page 1-4-12

(9) Dirt on the top edge or back of the paper.

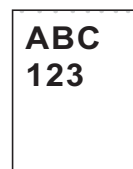


See page 1-4-13

(10) Undulated printing at the right edge (scanning start position).

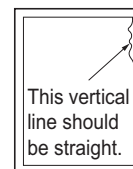


See page 1-4-13

**(1) Completely blank printout.**

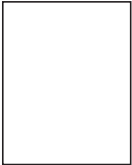
Print example	Causes	Check procedures/corrective measures
	Defective drum unit or developing unit.	Open the top cover and check that the drum unit and developing unit are correctly seated. Investigate that the terminals between the main charger unit and the drum unit are not in loose contact (See page 1-5-12 and 1-5-12).
	Defective transfer bias output or developing bias output.	Replace the high voltage PWB (See page 1-5-25).
	Poor contact of developing bias terminal (spring) and high voltage output terminal B (J401, J402, J403) on the high voltage PWB. Poor contact of transfer bias terminal (spring) and transfer bias terminal T (J201, J202, J203) on the high voltage PWB.	Check the high voltage PWB visually and correct or replace if necessary (See page 1-5-25).
	Defective laser scanner unit.	Replace the laser scanner unit (See page 1-5-30).
	Defective control PWB.	Replace the control PWB (See page 1-5-19).

**(2) All-black printout.**


Print example	Causes	Check procedures/corrective measures
	Defective main charger unit.	Open the top cover and check that the drum unit and developing unit are correctly seated (See page 1-5-11). Investigate that the terminals between the main charger unit and the drum unit are not in loose contact.
	Poor contact of main charger terminal (spring) and main charger output terminal M on the high voltage PWB.	Check the high voltage PWB visually and correct or replace if necessary (See page 1-5-25).
	Defective main charging output.	Replace the high voltage PWB (See page 1-5-25).
	Broken main charger wire.	Replace the main charger unit (See page 1-5-13).
	Defective control PWB.	Replace the control PWB (See page 1-5-19).




**(3) Dropouts.**

Print example	Causes	Check procedures/corrective measures
	Defective developing roller (developing unit).	If the defects occur at regular intervals of 62.8 mm/2 1/2" (See page 2-4-2), the problem may be the damaged developing roller (in the developing unit). Replace the developing unit (See page 1-5-11).
	Defective drum unit.	If the defects occur at regular intervals of 94 mm/3 11/16" (See page 2-4-2), the problem may be the damaged drum (in the drum unit). Replace the drum unit (See page 1-5-12).
	Defective fuser unit (heat roller or press roller).	If the defects occur at regular intervals of 73.162 mm/2 7/8", or 78.5 mm/3 1/16" (See page 2-4-2), the problem may be the damaged heat roller or press roller (in the fuser unit). Replace fuser unit (See page 1-5-16).
	Defective paper specifications.	Paper with rugged surface or dump tends to cause dropouts. Replace paper with the one that satisfies the paper specifications.
	Defective transfer roller installation.	The transfer roller must be supported by the bushes at the both ends. Clean the bush to remove oil and debris. Replace the transfer roller if necessary (See page 1-5-14).
	Defective transfer bias output.	Replace the high voltage PWB or control PWB (See page 1-5-25 or 1-5-19).


**(4) Black dots.**

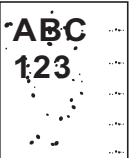Print example	Causes	Check procedures/corrective measures
	Defective drum unit or developing unit.	If the defects occur at regular intervals of 94 mm/3 11/16" (See page 2-4-2), the problem may be the damaged drum (in the drum unit). Replace drum unit (See page 1-5-12). If the defects occur at random intervals, the toner may be leaking from the developing unit or drum unit. Replace the developing unit or drum unit (See page 1-5-11 or 1-5-12).


**(5) Black horizontal streaks.**

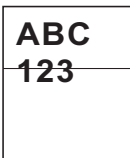Print example	Causes	Check procedures/corrective measures
	Defective drum unit's ground.	Check that the drum shaft and the grounding tab (printer) are in good contact. Apply the grounding tab a small amount of electroconductive grease as required.
	Defective drum unit.	Replace the drum unit (See page 1-5-12).


**(6) Black vertical streaks.**

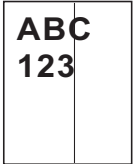Print example	Causes	Check procedures/corrective measures
	Adhesion of oxide to main charger wire.	Remove the drum unit (See page 1-5-12). Slide the charger cleaner (green) left and right 2 or 3 times to clean the charger wire, then return it to its original position (CLEANER HOME POSITION). Refer to the operation guide.
	Defective drum unit.	A streak of toner remaining on drum after printing means that the cleaning blade (in the drum unit) is not working properly. Replace the drum unit (See page 1-5-12).
	Defective developing roller (developing unit).	Replace the developing unit (See page 1-5-11).


**(7) Unsharpness.**

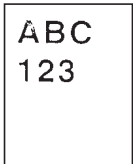Print example	Causes	Check procedures/corrective measures
	Defective paper specifications.	Replace paper with the one that satisfies the paper specification.
	Defective transfer roller installation.	The transfer roller must be supported by the bushes at the both ends. Clean the bush to remove oil and debris. Replace the transfer roller if necessary (See page 1-5-14).
	Defective transfer bias output.	Replace the high voltage PWB or control PWB (See page 1-5-25).
	EcoPrint mode setting.	The EcoPrint mode can provide faint, unsharp printing because it acts to conserve toner for draft printing purpose. For normal printing, turn the EcoPrint mode off by using the operator panel. For details, refer to the operation guide.


**(8) Gray background.**

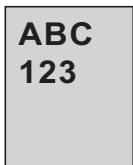Print example	Causes	Check procedures/corrective measures
	Print density setting.	The print density may be set too high. Try adjusting the print density. For details, refer to the operation guide.
	Defective potential on the drum surface.	Replace the drum unit (See page 1-5-12).
	Defective main charger grid.	Clean the main charger grid (See page 1-5-13).
	Defective developing roller (developing unit).	If a developing unit which is known to work normally is available for check, replace the current developing unit in the printer with the normal one. If the symptom disappears, replace the developing unit with a new one (See page 1-5-11).

**(9) Dirt on the top edge or back of the paper.**

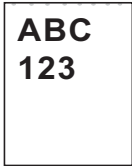Print example	Causes	Check procedures/corrective measures
	Toner contamination in various parts.	Dirty edges and back of the paper can be caused by toner accumulated on such parts as the paper chute guide, paper conveying paths, the bottom of the drum and developing unit, and the fuser unit inlet. Clean these areas and parts to remove toner.
	Defective transfer roller.	If the transfer roller is contaminated with toner, clean the transfer roller using a vacuum cleaner or by continuously printing a low density page until the symptom has faded away.

**(10) Undulated printing at the right edge (scanning start position).**

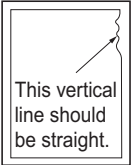Print example	Causes	Check procedures/corrective measures
	Defective polygon motor (laser scanner unit).	Replace the laser scanner unit (See page 1-5-30).
	Defective control PWB.	Replace the control PWB (See page 1-5-19).

## 1-4-4 Electric problems

Problem	Causes	Check procedures/corrective measures
(1) The machine does not operate when the power switch is turned on.	No electricity at the power outlet.	Measure the input voltage.
	The power cord is not plugged in properly.	Check the contact between the power plug and the outlet.
	The top cover is not closed completely.	Check the top cover.
	Broken power cord.	Check for continuity. If none, replace the cord.
	Defective power switch.	Check for continuity across the contacts. If none, replace the power source PWB (See page 1-5-22).
	Blown fuse in the power source PWB.	Check for continuity. If none, remove the cause of blowing and replace the power source PWB (See page 1-5-22).
	Defective interlock switch.	Check for continuity across the contacts of interlock switch. If none, replace the power source PWB (See page 1-5-22).
	Defective power source PWB.	Replace the power source PWB (See page 1-5-22).
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(2) Right cooling fan motor does not operate.	Broken right cooling fan motor coil.	Check for continuity across the coil. If none, replace the right cooling fan motor.
	Defective harness between right cooling fan motor and control PWB (YC315), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(3) Left cooling fan motor does not operate.	Broken left cooling fan motor coil.	Check for continuity across the coil. If none, replace the left cooling fan motor.
	Defective harness between left cooling fan motor and control PWB (YC104), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(4) Registration clutch does not operate.	Broken registration clutch coil.	Check for continuity across the coil. If none, replace the registration clutch.
	Defective harness between registration clutch and control PWB (YC308), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(5) Paper feed clutch does not operate.	Broken paper feed clutch coil.	Check for continuity across the coil. If none, replace the paper feed clutch.
	Defective harness between paper feed clutch and control PWB (YC308), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).

Problem	Causes	Check procedures/corrective measures
(6) Developing clutch does not operate.	Broken developing clutch coil.	Check for continuity across the coil. If none, replace the developing clutch.
	Defective harness between developing clutch and control PWB (YC308), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(7) MP paper feed solenoid does not operate.	Broken MP paper feed solenoid coil.	Check for continuity across the coil. If none, replace the MP paper feed solenoid.
	Defective harness between MP paper feed solenoid and control PWB (YC309), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(8) Duplex solenoid does not operate.	Broken duplex solenoid coil.	Check for continuity across the coil. If none, replace the duplex solenoid.
	Defective harness between duplex solenoid and control PWB (YC317), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(9) Eraser lamp does not turn on.	Defective harness between eraser lamp (YC701) and control PWB (YC316), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
	Defective eraser lamp (PWB).	Replace the eraser lamp (PWB) (See page 1-5-32).
	Defective control PWB.	Replace the control PWB (See page 1-5-19).
(10) Paper indicator is flashing when paper is present in the cassette.	Defective paper sensor.	Replace the paper sensor.
	Defective harness between paper sensor and control PWB (YC306), or improper connector insertion.	Reinsert the connector. Also check for continuity within the connector harness. If none, remedy or replace the harness.
(11) A paper jam in the paper feed/conveying section or fuser section is indicated when the power switch is turned on.	A piece of paper torn from paper is caught around registration sensor or exit sensor.	Check and remove if any.
	Defective registration sensor on the high voltage PWB.	Replace the high voltage PWB (See page 1-5-25).
	Defective exit sensor.	Replace the exit sensor.
(12) Attention indicator is lit when the top cover is closed.	Defective interlock switch on the power source PWB.	Check for continuity across the interlock switch. If there is no continuity when the interlock switch is on, replace the power source PWB (See page 1-5-22).

### 1-4-5 Mechanical problems

Problem	Causes/check procedures	Corrective measures
(1) No primary paper feed.	Check if the surfaces of the paper feed roller is dirty with paper powder.	Clean with isopropyl alcohol.
	Check if the paper feed roller is deformed.	Check visually and replace any deformed paper feed roller (assembly) (See page 1-5-6).
	Defective paper feed clutch installation.	Check visually and remedy if necessary.
(2) No secondary paper feed.	Check if the surfaces of the upper and lower registration rollers are dirty with paper powder.	Clean with isopropyl alcohol.
	Defective registration clutch installation.	Check visually and remedy if necessary.
(3) Skewed paper feed.	Paper width guide in a cassette installed incorrectly.	Check the paper width guide visually and correct or replace if necessary.
(4) Multiple sheets of paper are fed at one time.	Check if the separator pad or MPF separation pad is worn.	Replace the separator pad if it is worn.
	Check if the paper is curled.	Replace the paper.
(5) Paper jams.	Check if the paper is excessively curled.	Replace the paper.
	Check if the contact between the upper and lower registration rollers is correct.	Check visually and remedy if necessary.
	Check if the heat roller or press roller is extremely dirty or deformed.	Replace the fuser unit (See page 1-5-12).
	Check if the contact between the ejection roller and fuser ejection pulley is correct.	Check visually and remedy if necessary.
(6) Toner drops on the paper conveying path.	Check if the drum unit or developing unit is extremely dirty.	Clean the drum unit or developing unit (See page 1-5-11 or 1-5-11).
(7) Abnormal noise is heard.	Check if the pulleys, rollers and gears operate smoothly.	Grease the bearings and gears.
	Check if the following electromagnetic clutches are installed correctly: Paper feed clutch, registration clutch and developing clutch.	Check visually and remedy if necessary.

## **1-5-1 Precautions for assembly and disassembly**

### **(1) Precautions**

Be sure to turn the power switch off and disconnect the power plug before starting disassembly.

When handling PWBs, do not touch connectors with bare hands or damage the PWB.

Do not touch any PWB containing ICs with bare hands or any object prone to static charge.

When removing the hook of the connector, be sure to release the hook.

Take care not to get the wire caught.

To reassemble the parts, use the original screws. If the types and the sizes of screws are not known, refer to the PARTS LIST.

### **(2) Drum**

Note the following when handling or storing the drum.

When removing the drum unit, never expose the drum surface to strong direct light.

Keep the drum at an ambient temperature between 0 °C/32 °F and 40 °C/104 °F and at a relative humidity not higher than 90% RH. Avoid abrupt changes in temperature and humidity.

Avoid exposure to any substance which is harmful to or may affect the quality of the drum.

Do not touch the drum surface with any object. Should it be touched by hands or stained with oil, clean it.

### **(3) Toner container**

Store the toner container in a cool, dark place.

Avoid direct light and high humidity.

#### (4) How to tell a genuine Kyocera toner container

As a means of brand protection, the Kyocera toner container utilizes an optical security technology to enable visual validation. A validation viewer is required to accomplish this.

Hold the validation viewer over the left side part of the brand protection seal on the toner container. Through each window of the validation viewer, the left side part of the seal should be seen as follows:

A black-colored band when seen through the left side window

A shiny or gold-colored band when seen through the right side window

The above will reveal that the toner container is a genuine Kyocera branded toner container, otherwise, it is a counterfeit.

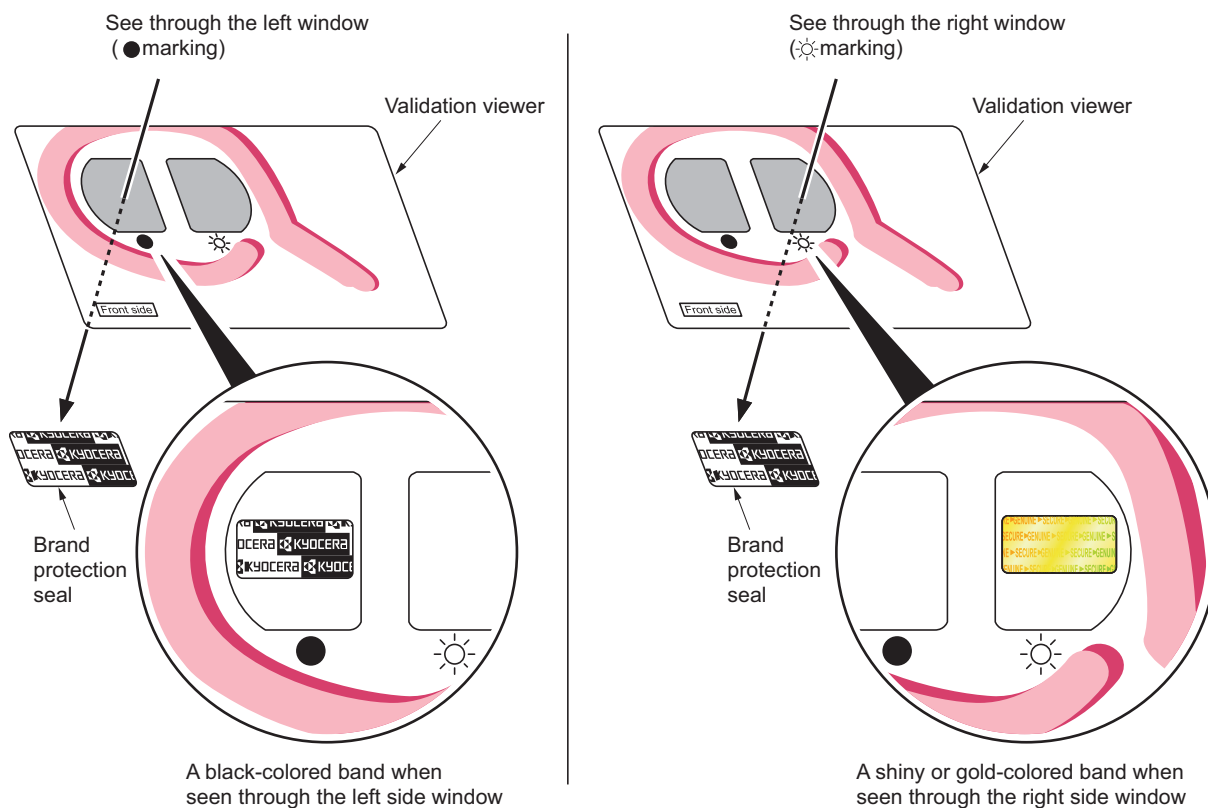


Figure 1-5-1

The brand protection seal has an incision as shown below to prohibit reuse.

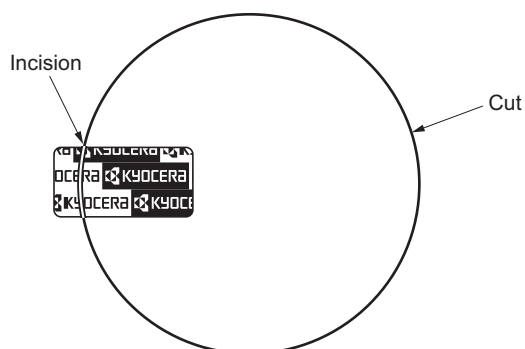


Figure 1-5-2



## 1-5-2 Outer covers

### (1) Detaching and refitting the top cover

#### Procedure

1. Open the top cover.
2. Remove two screws.

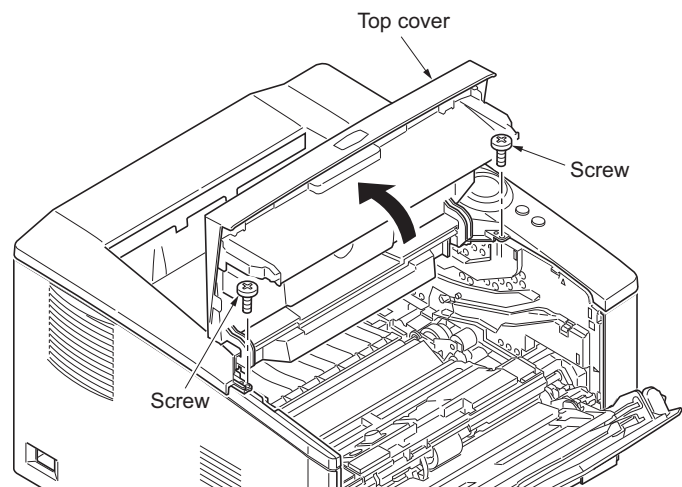


Figure 1-5-3

3. Extract the boss from the hole.
4. Unhook the A hook.
5. Unhook two B hooks.
6. Remove the connector.
7. Remove the top cover.

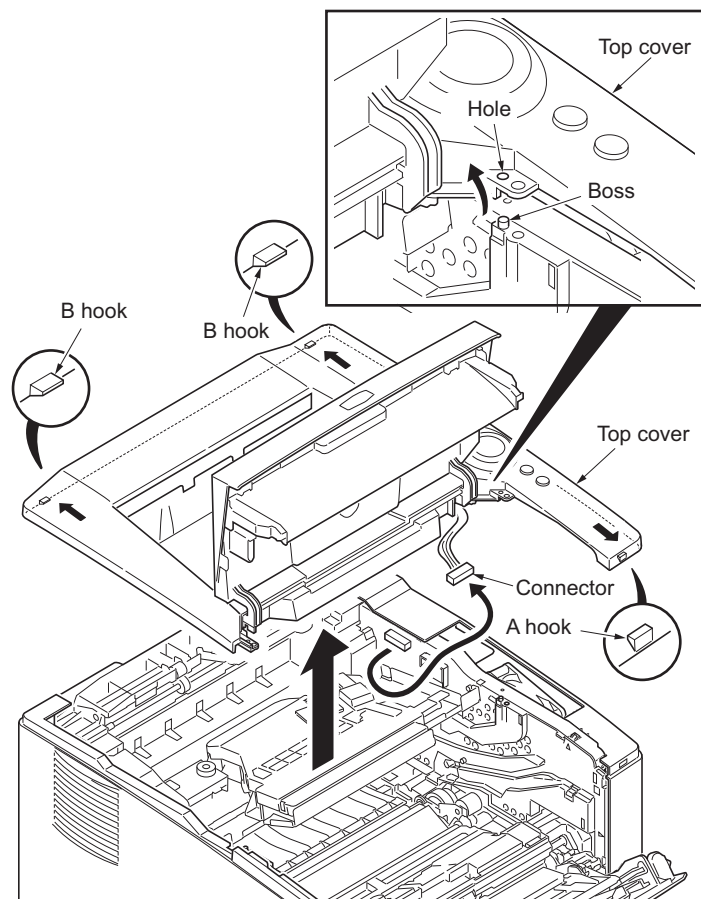
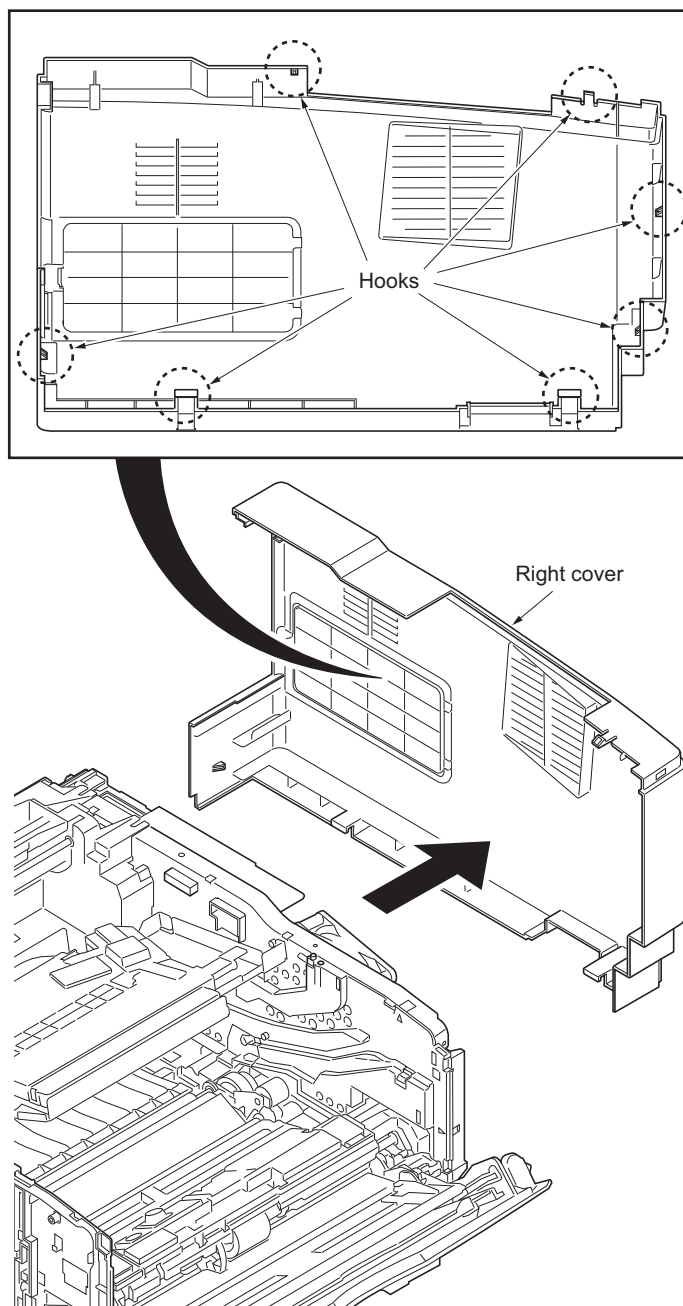



Figure 1-5-4

**(2) Detaching and refitting the right and left covers****Procedure**

1. Remove the top cover (See page 1-5-3).
2. Remove the cassette (See page 1-5-6).
3. Open the front cover.
4. Unhook seven hooks and then remove the right cover.

**Figure 1-5-5**

5. Unhook seven hooks and then remove the left cover.

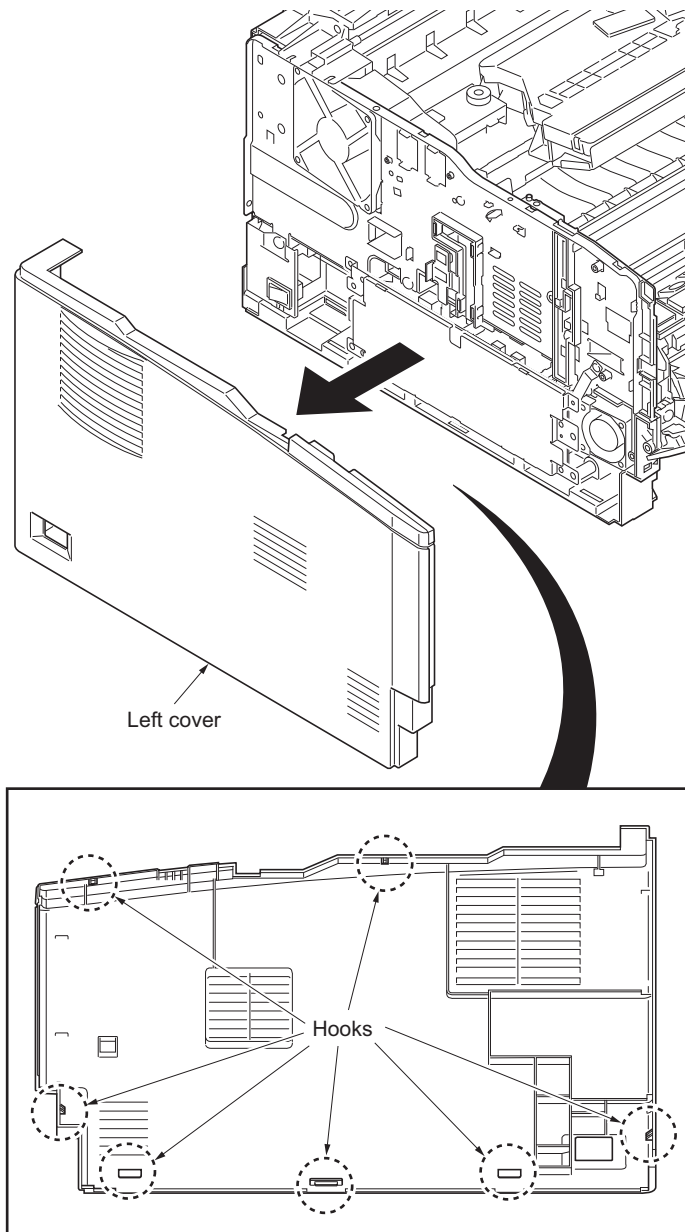

**Figure 1-5-6**

### 1-5-3 Paper feed section

#### (1) Detaching and refitting the paper feed assembly (paper feed roller and pickup roller)

##### Procedure

1. Remove the cassette.

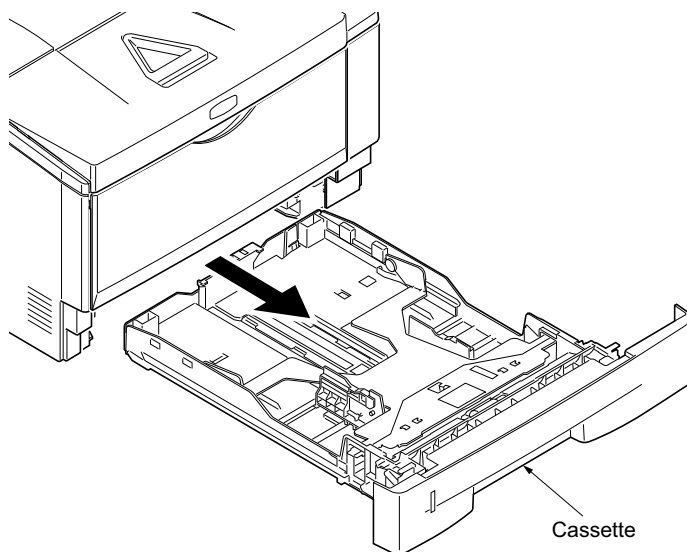


Figure 1-5-7

2. Slide the feed shaft.
3. While pressing the lever and then remove the paper feed roller assembly.

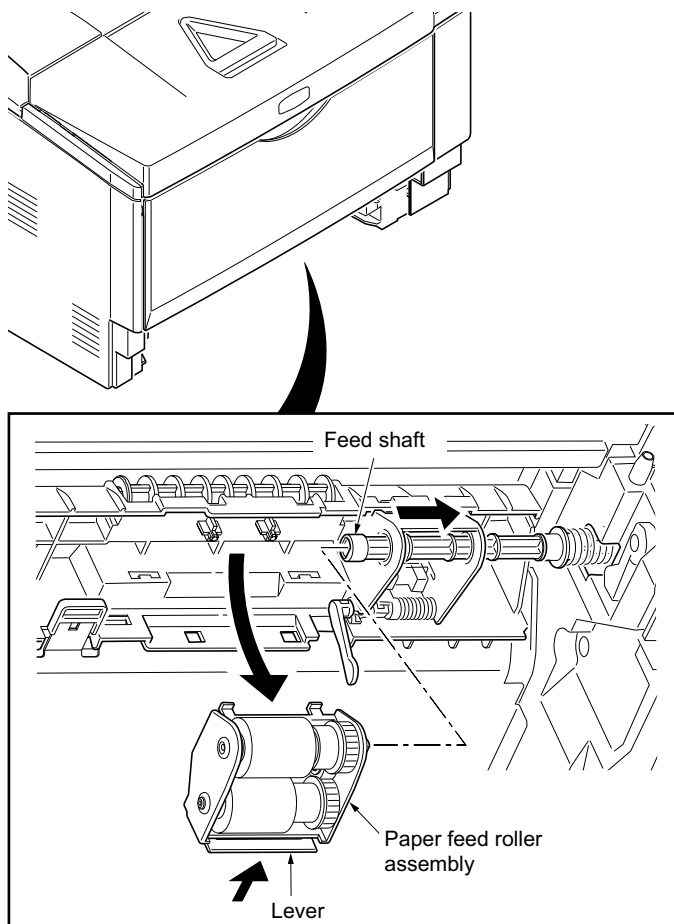
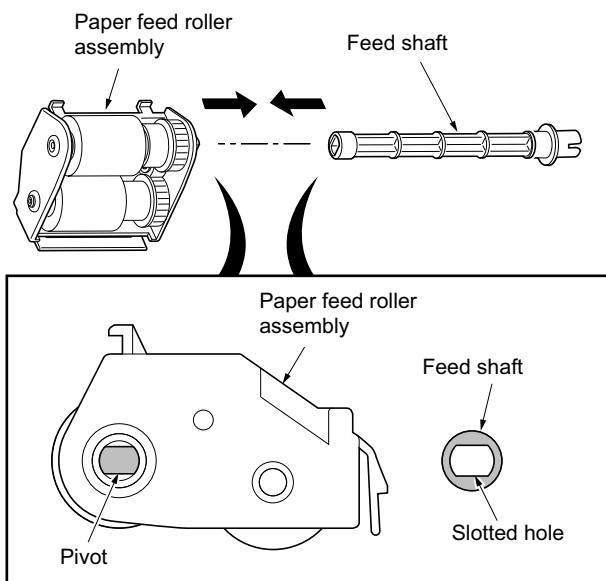



Figure 1-5-8

4. Check or replace the paper feed assembly and refit all the removed parts.  
When refitting the paper feed roller assembly, be sure to align the paper feed roller pivot with the slotted hole on the feed shaft.


**Figure 1-5-9**

**(2) Detaching and refitting the retard roller assembly****Procedure**

1. Remove the cassette (See page 1-5-6).
2. Push the bottom plate down until it locks.
3. Unhook two hooks and then remove the retard guide.

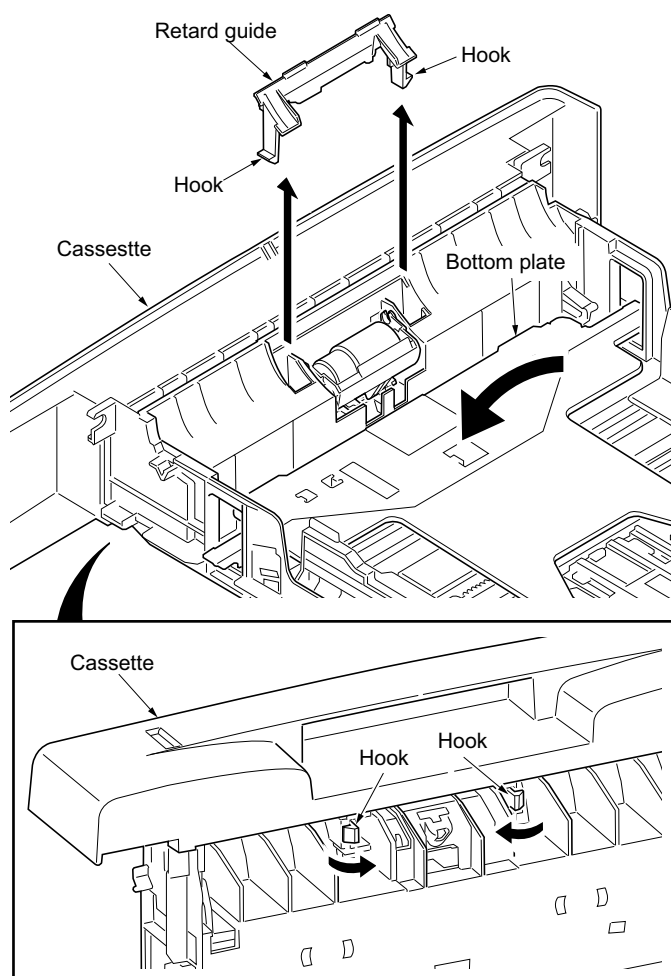**Figure 1-5-10**

4. Remove the retard roller assembly.

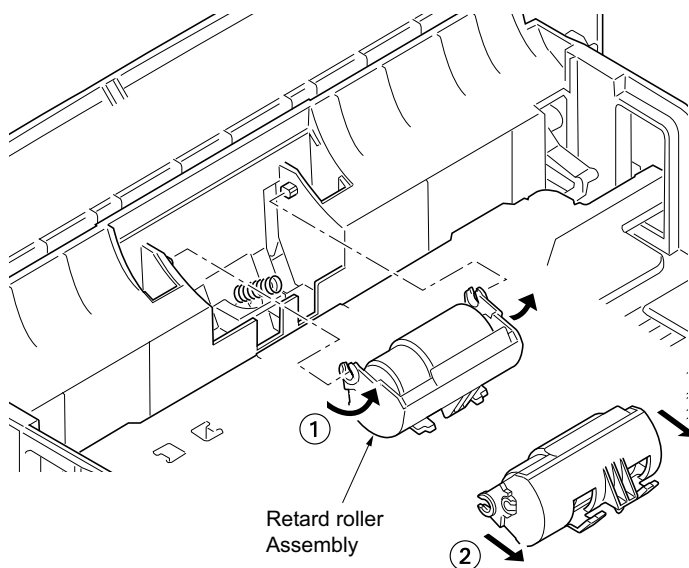**Figure 1-5-11**

5. Check or replace the retard roller assembly and refit all the removed parts.

Caution: Before refitting the retard roller assembly, firmly install the spring onto the projection of the retard roller assembly.

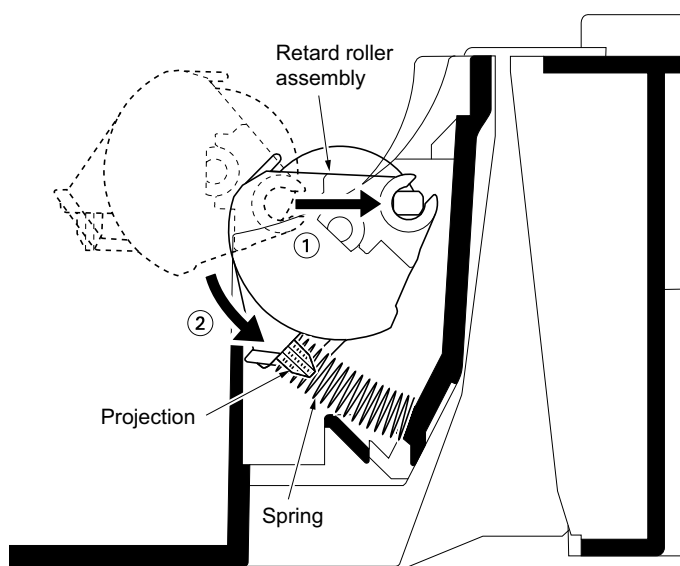
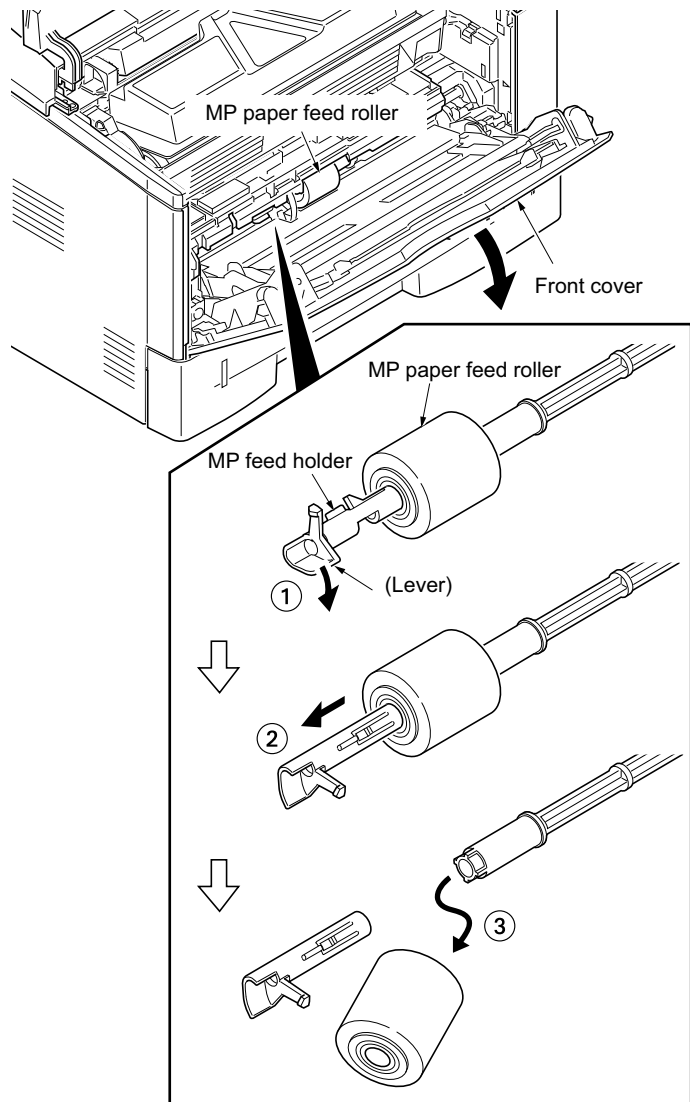



Figure 1-5-12

**(3) Detaching and refitting the MP paper feed roller****Procedure**

1. Open the front cover.
2. Pull the MP feed holder (lever) down (1).
3. Slide the MP feed holder (2).
4. Remove the MP paper feed roller (3).

**Figure 1-5-13**

5. Check or replace the MP paper feed roller and refit all the removed parts.  
When refitting the MP paper feed roller, be sure to align the MPF feed shaft pivot with the slotted hole on the MP paper feed roller.

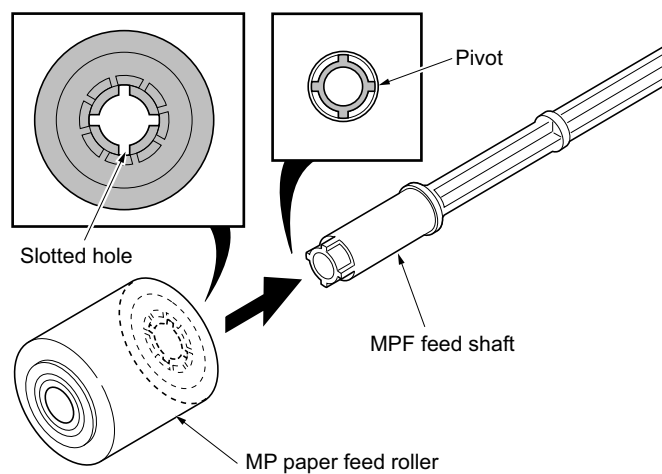**Figure 1-5-14**



## 1-5-4 Developing section

### (1) Detaching and refitting the developing unit

#### Procedure

1. Open the top cover.
2. Open the front cover.
3. Remove the developing unit (with toner container).
4. Check or replace the developing unit and refit all the removed parts.
5. When the developing unit is replaced with a new one, carry out the following procedure.
6. Perform toner install mode in the service mode (see page 1-3-11).

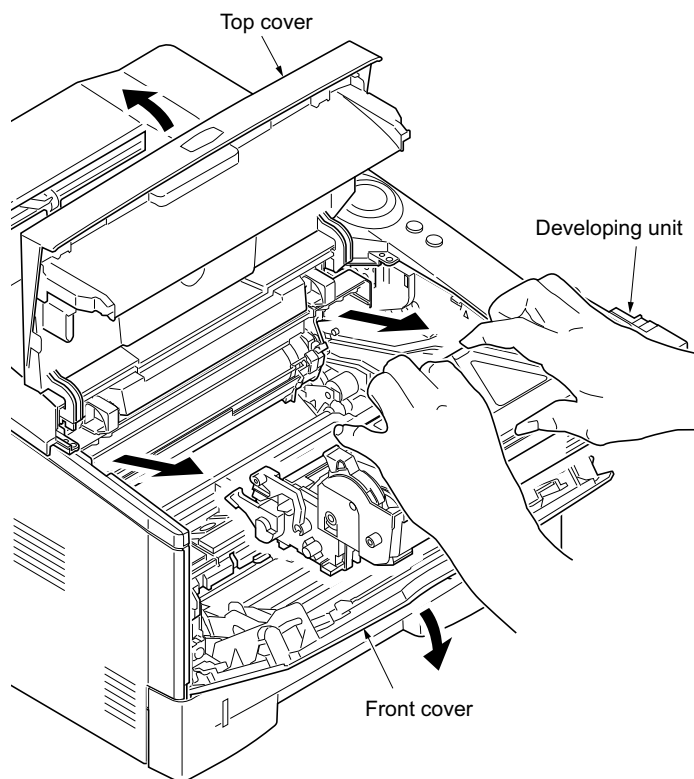


Figure 1-5-15

## 1-5-5 Drum section

### (1) Detaching and refitting the drum unit

#### Procedure

1. Remove the developing unit (See page 1-5-11).
2. Remove the drum unit.
3. Check or replace the drum unit and refit all the removed parts.

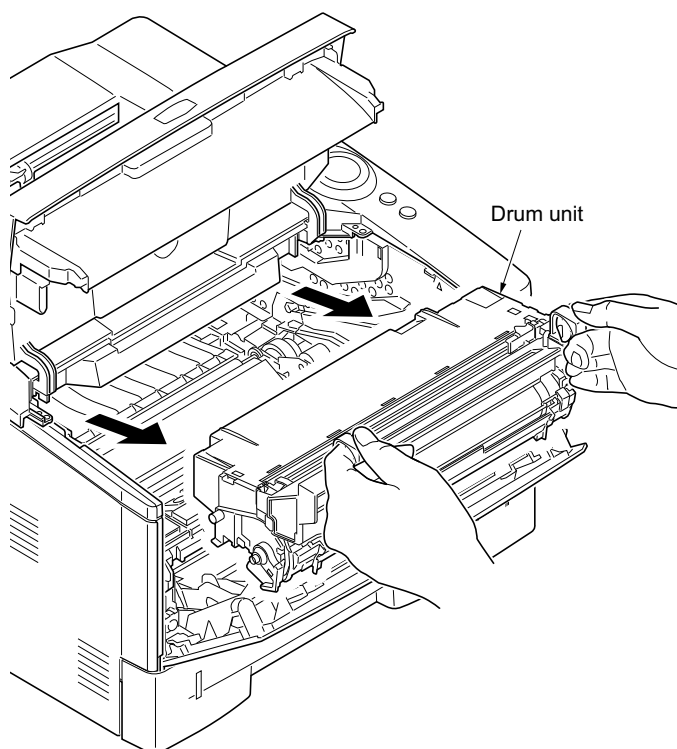
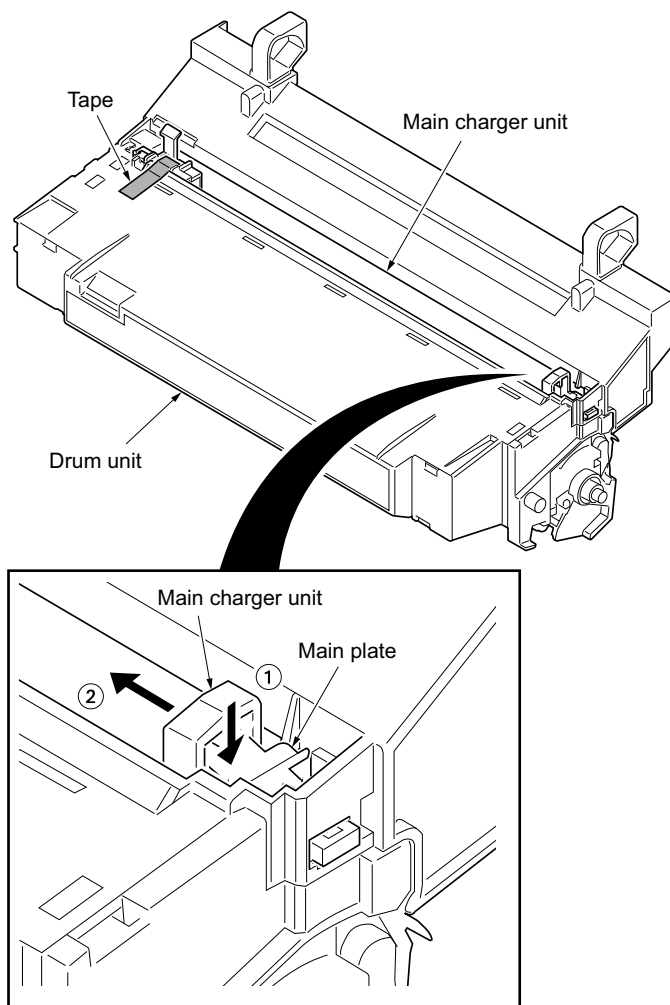



Figure 1-5-16

**(2) Detaching and refitting the main charger unit****Procedure**

1. Remove the drum unit (See page 1-5-12).
2. Remove the tape.
3. While pushing on the main plate (1), slide the main charger unit (2).

**Figure 1-5-17**

4. Remove the main charger unit by lifting it.
5. Check or replace the main charger unit and refit all the removed parts.

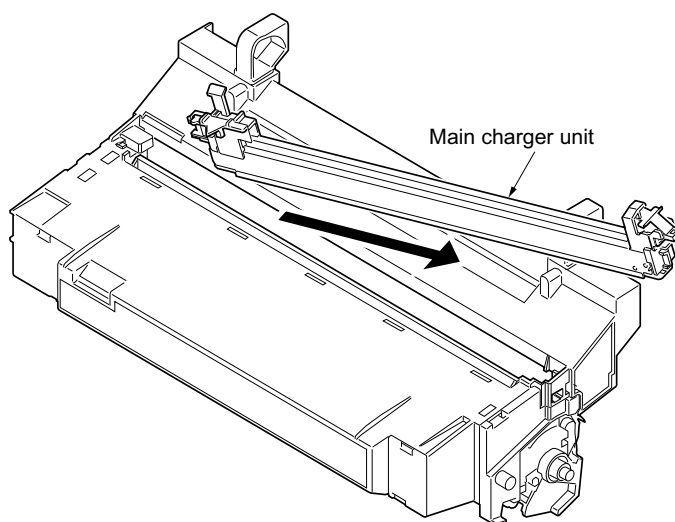**Figure 1-5-18**

## 1-5-6 Transfer/separation section

### (1) Detaching and refitting the transfer roller

#### Procedure

1. Remove the developing unit (See page 1-5-11).
2. Remove the drum unit (See page 1-5-12).
3. Slide the paper chute guide and unhook the hooks.
4. Remove the paper chute guide.

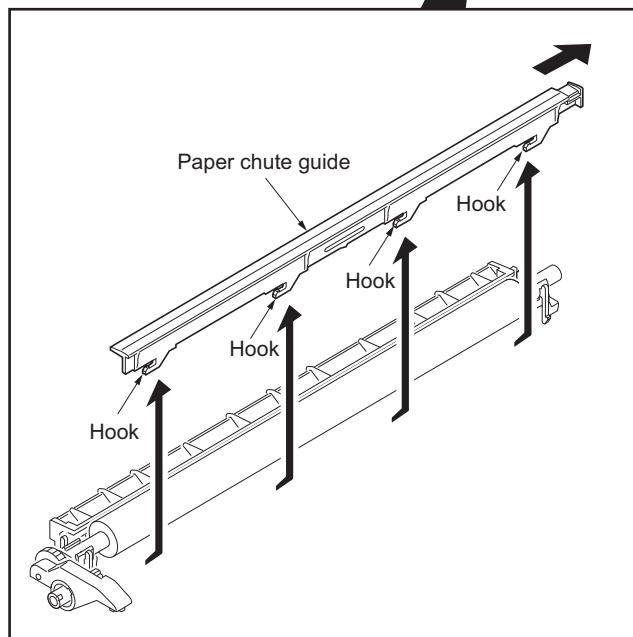
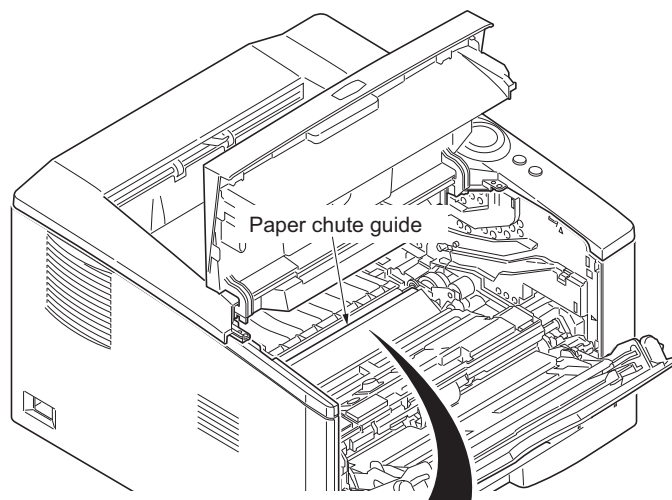


Figure 1-5-19

5. Remove the transfer roller's shaft from the both transfer bushes.
6. Remove the gear Z16 from the transfer roller.

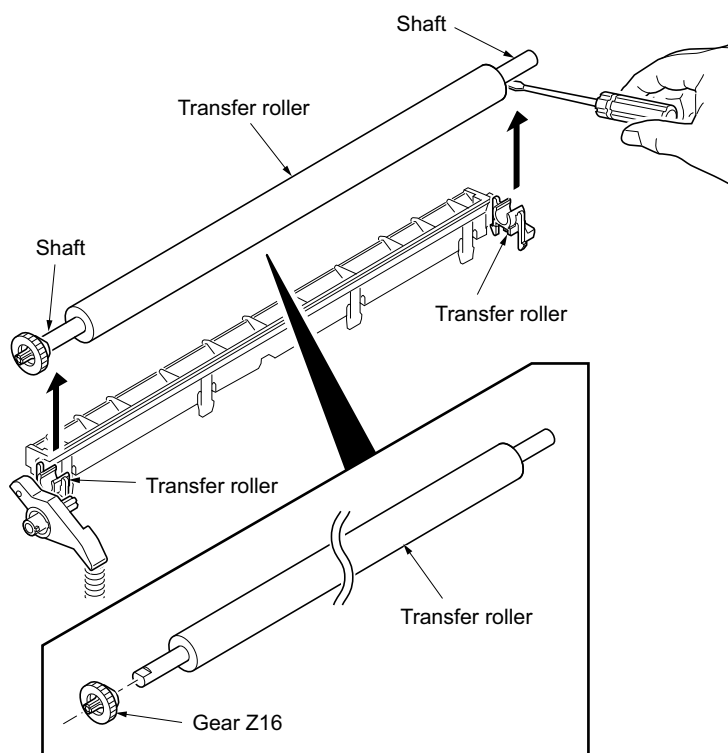


Figure 1-5-20

7. Check or replace the transfer roller and refit all the removed parts.  
 Caution: When refitting the transfer roller, be careful about following point.  
 Push the release lever to raise the lever end, then insert the front of gear Z16 under the release lever end.

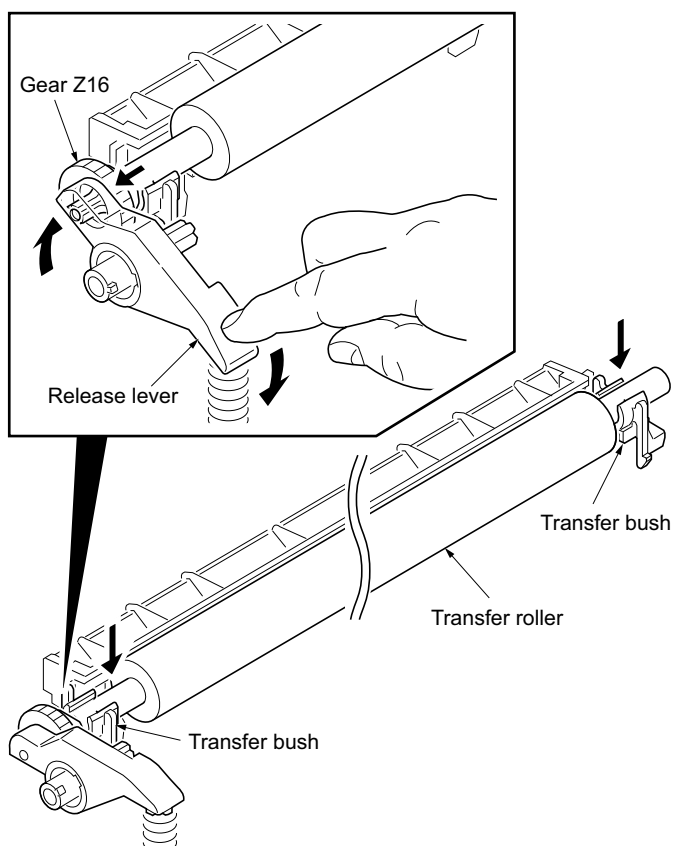


Figure 1-5-21

## 1-5-7 Fuser section

### (1) Detaching and refitting the fuser unit

#### Procedure

1. Remove the outer covers (See page 1-5-3).
2. Remove two connectors.
3. Release the wires from wire clamps.

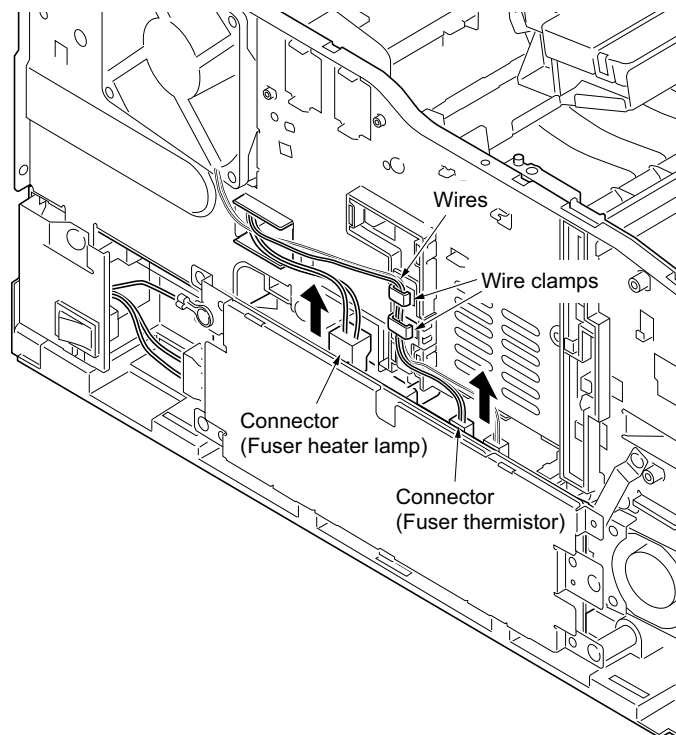


Figure 1-5-22

4. Remove the connector.

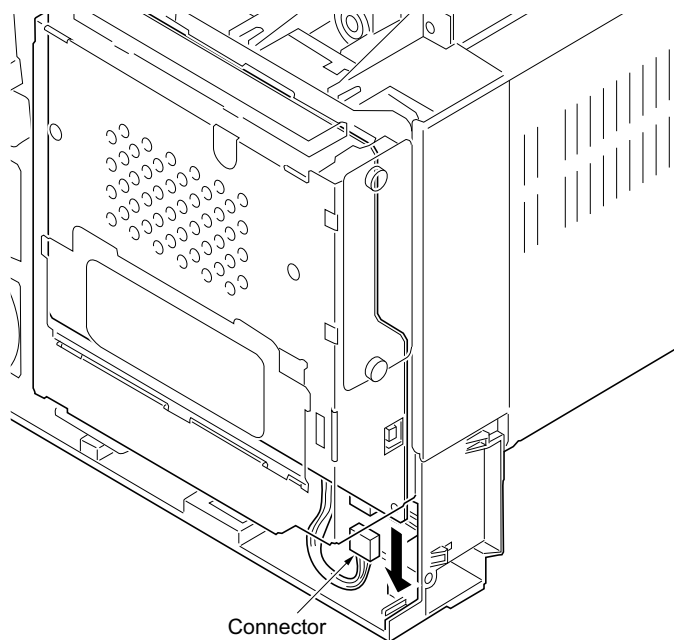
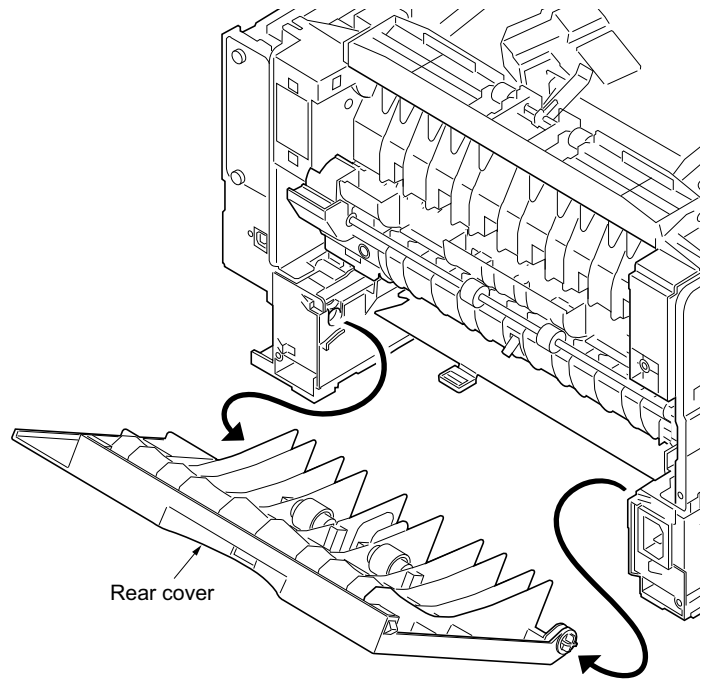
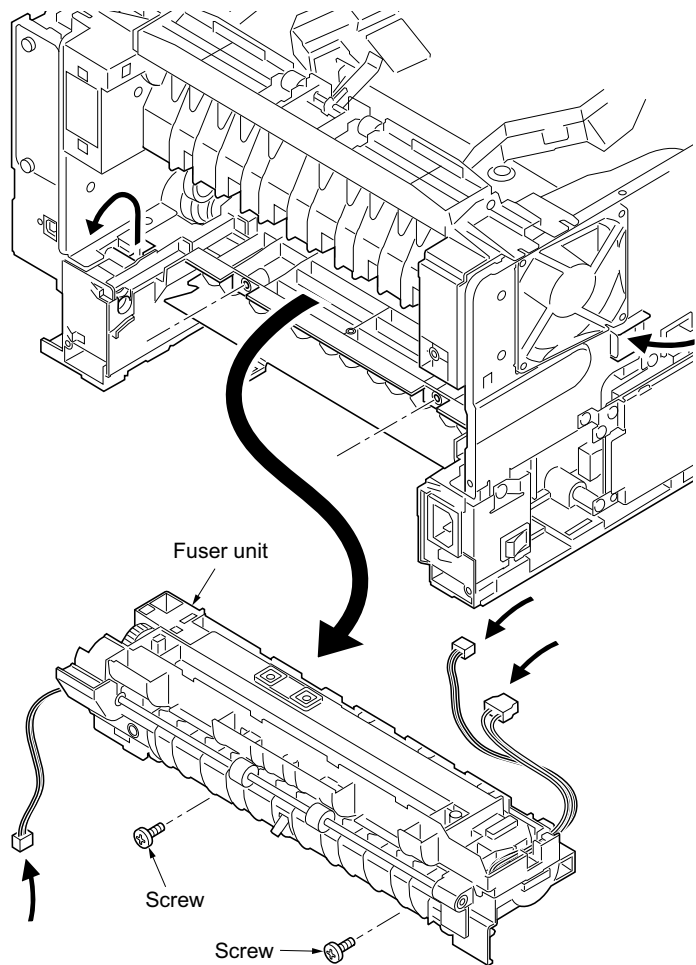


Figure 1-5-23

5. Remove the rear cover.

**Figure 1-5-24**

6. Remove two screws and then remove the fuser unit.
7. Check or replace the fuser unit and refit all the removed parts.

**Figure 1-5-25**

## (2) Switching the fuser pressure

The fuser pressure may be decreased to suppress the print quality problems such as paper creases and curls. It must be cautioned that decreasing the fuser pressure could cause loose toner fusing.

### Procedure

1. Remove the cassette (See page 1-5-6).
2. Open the duplex cover.
3. Slide the fuser lever R and L.  
Normal: Flush with the front of the machine.  
Fuser pressure decreased: Flush with the rear of the machine.


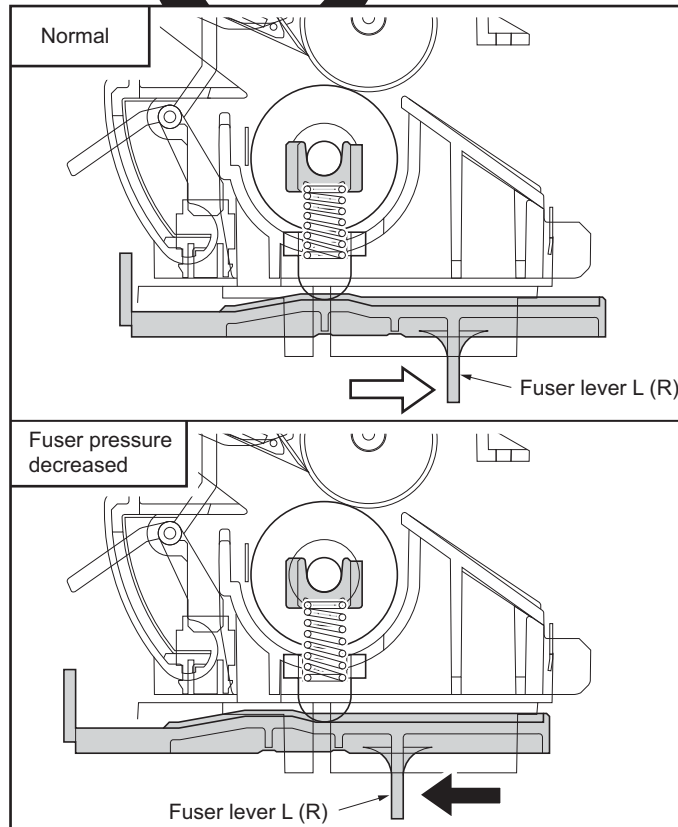


Figure 1-5-26

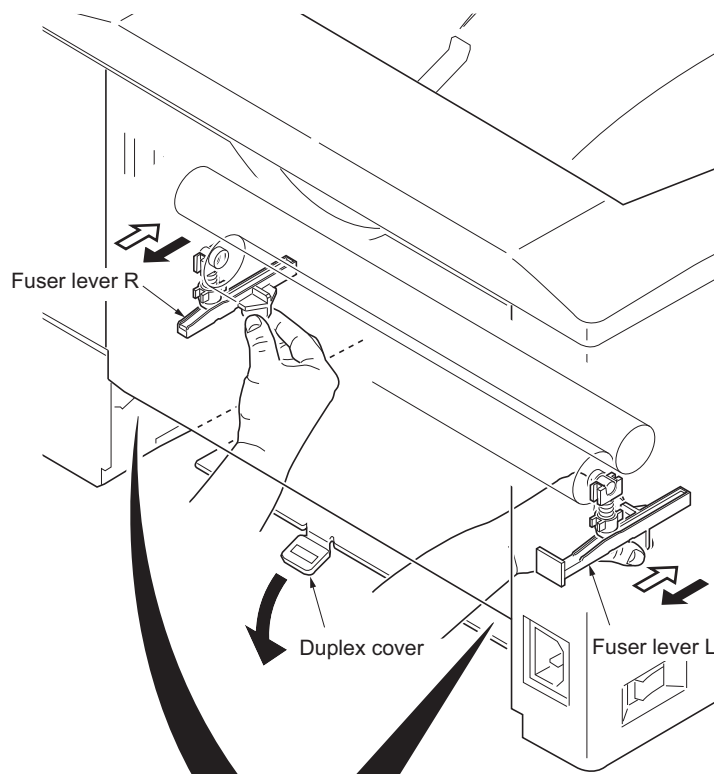

## 1-5-8 PWBs

### (1) Detaching and refitting the control PWB

#### Procedure

1. Remove the right cover (See page 1-5-4).
2. Remove fourteen connectors from the control PWB.
3. Release the wires from the wire clamps.

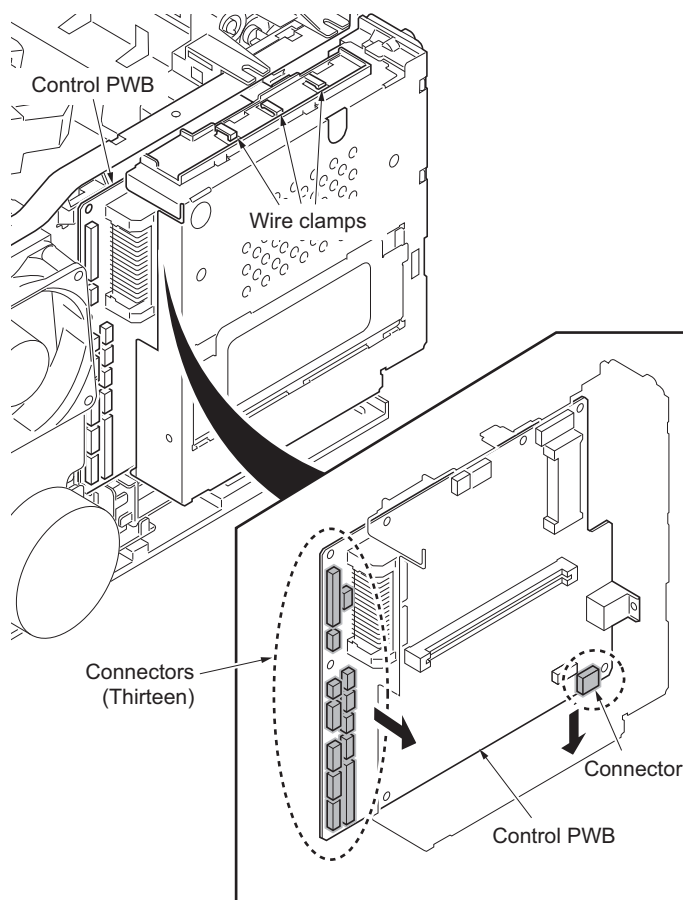
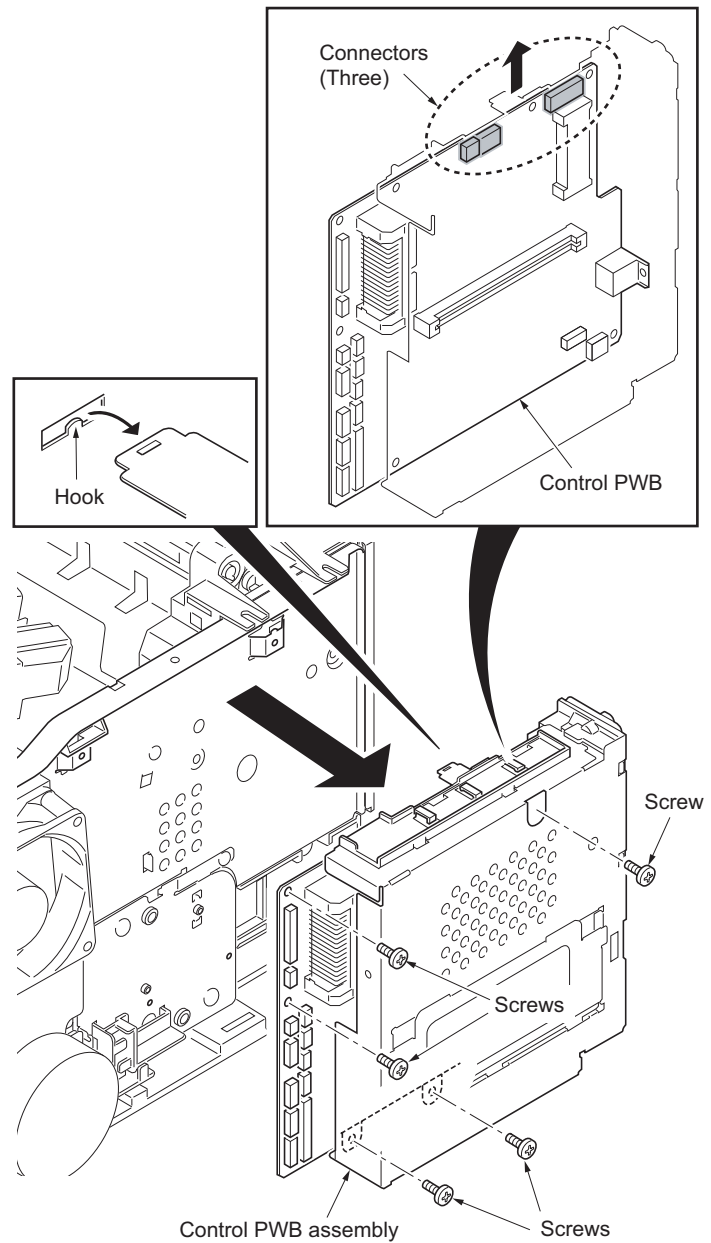
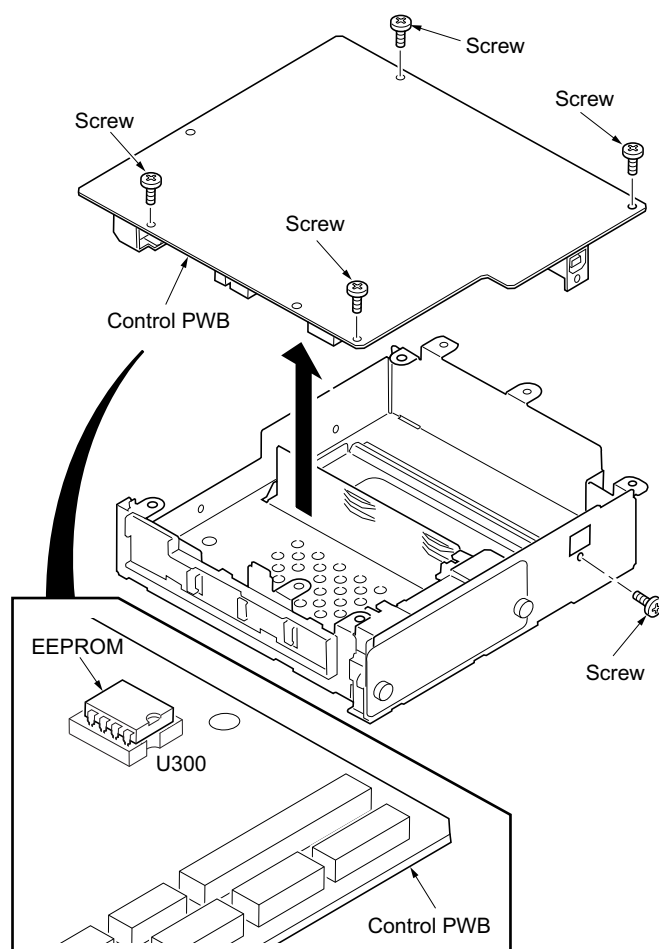


Figure 1-5-27

4. Remove five screws.
5. Remove three connectors from the control PWB.
6. Unhook the hook and then remove the control PWB assembly.

**Figure 1-5-28**

7. Remove five screws and then remove the control PWB.
8. Check or replace the control PWB and refit all the removed parts.  
To replace the control PWB, remove the EEPROM (U300) from the old control PWB and mount it to the new control PWB.

**Figure 1-5-29**

## (2) Detaching and refitting the power source PWB

### Procedure

1. Remove the top cover (See page 1-5-3).
2. Remove the left cover (See page 1-5-4).
3. Remove four connectors.

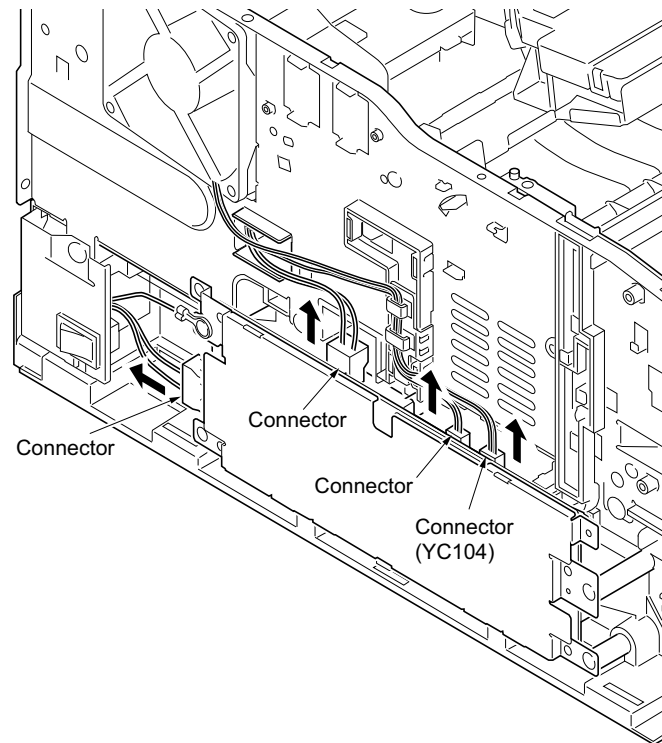


Figure 1-5-30

4. Remove four P tight screws, two screws and ground terminal.
5. Remove the power source PWB assembly from the high voltage PWB's connector.

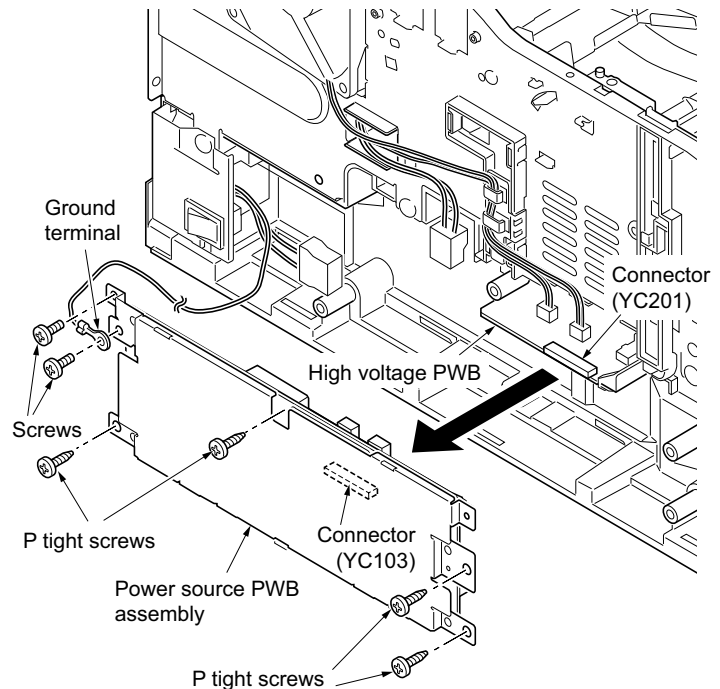
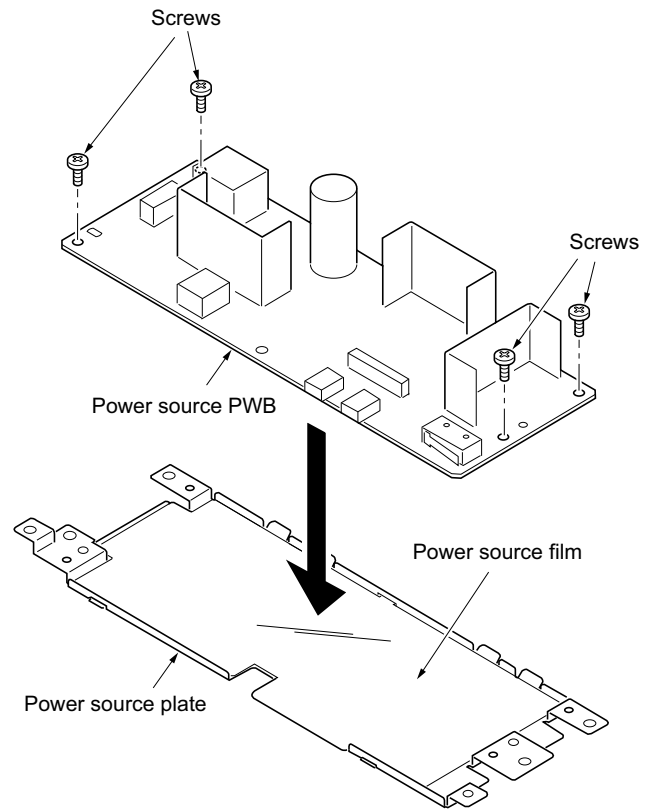


Figure 1-5-31

6. Remove four screws and then remove the power source plate from the power source PWB.
7. Check or replace the power source PWB and refit all the removed parts.  
Caution: The power source film must be installed in the specified position.

**Figure 1-5-32**

### (3) Detaching and refitting the operation panel PWB

#### Procedure

1. Remove the top cover (See page 1-5-3).
2. Remove two screws and then remove the panel cover.
3. Remove the operation panel PWB.
4. Remove the connector.
5. Check or replace the operation panel PWB and refit all the removed parts.  
Be sure to fit the GO and Cancel keys in the appropriate position.

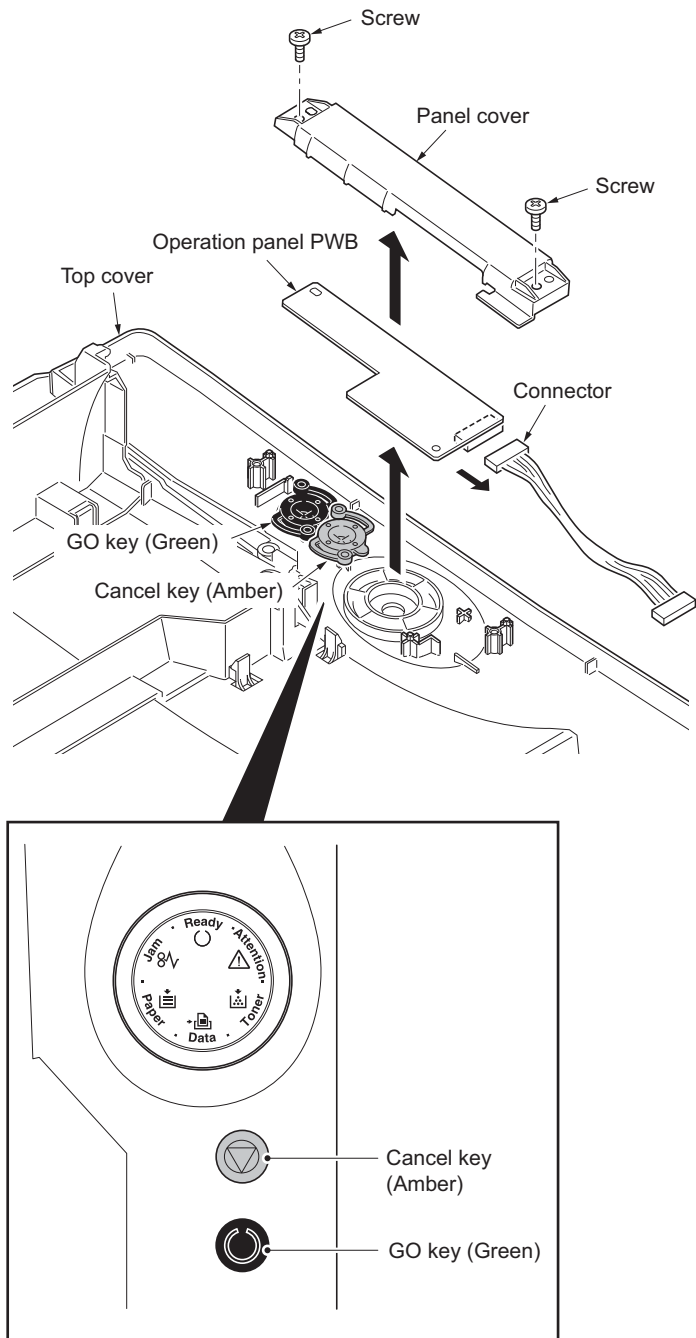
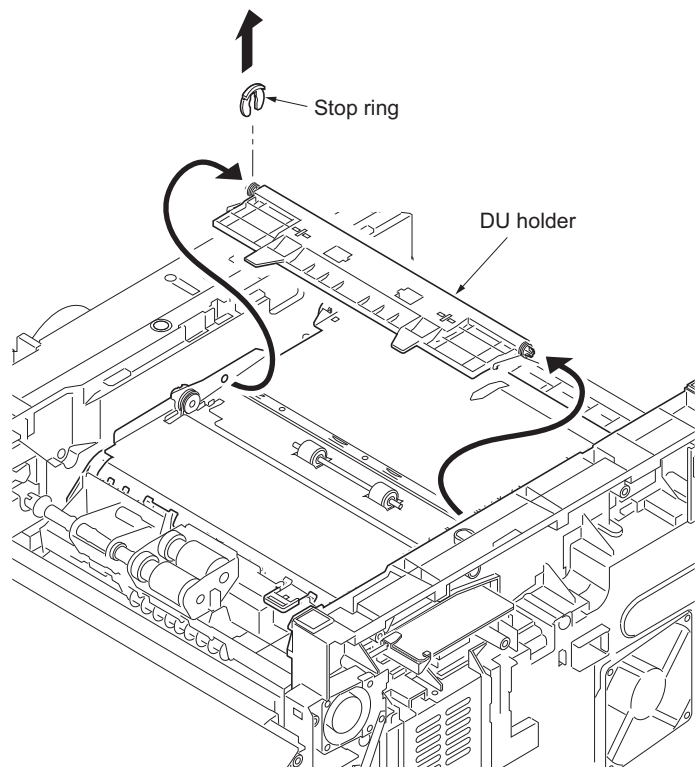



Figure 1-5-33

**(4) Detaching and refitting the high voltage PWB****Procedure**


1. Remove the developing unit (See page 1-5-11).
2. Remove the drum unit (See page 1-5-12).
3. Remove the cassette (See page 1-5-6).
4. Remove the outer covers (See page 1-5-3).
5. Remove the power source PWB (See page 1-5-22).
6. Turn the printer with the bottom side up.
7. Remove the stop ring.
8. Remove the DU holder.

**Figure 1-5-34**

9. Pull out the DU bush.
10. Remove the DU cover assembly.

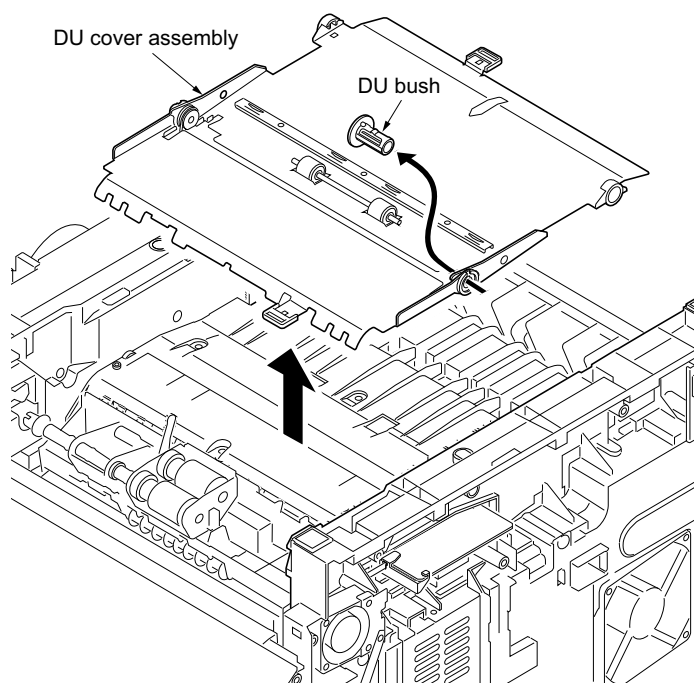**Figure 1-5-35**

11. Remove four screws.
12. Unhook three hooks and then remove the lower base cover.

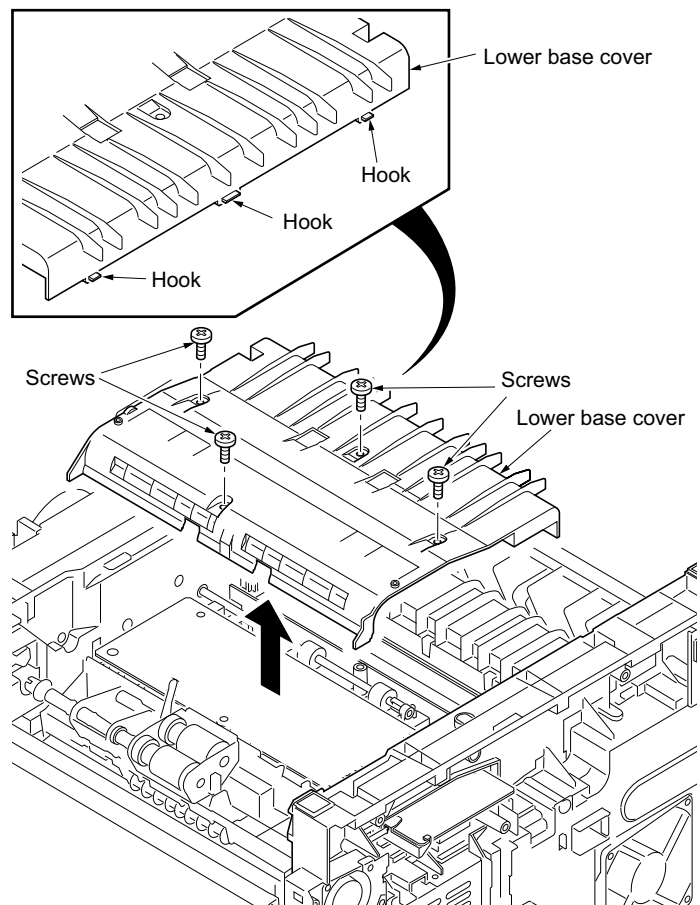**Figure 1-5-36**



13. Remove the spring.
14. Remove the cassette pin.

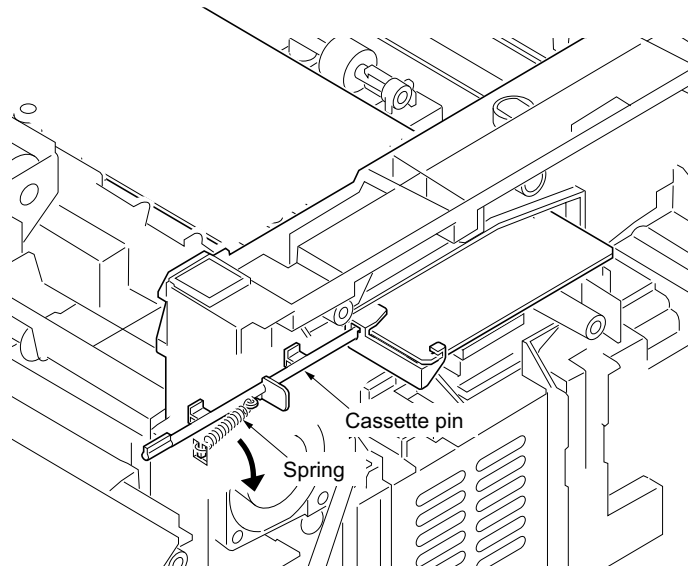


Figure 1-5-37

15. Remove two connectors and then remove the high voltage PWB.
16. Remove the cassette pin holder from the high voltage PWB.

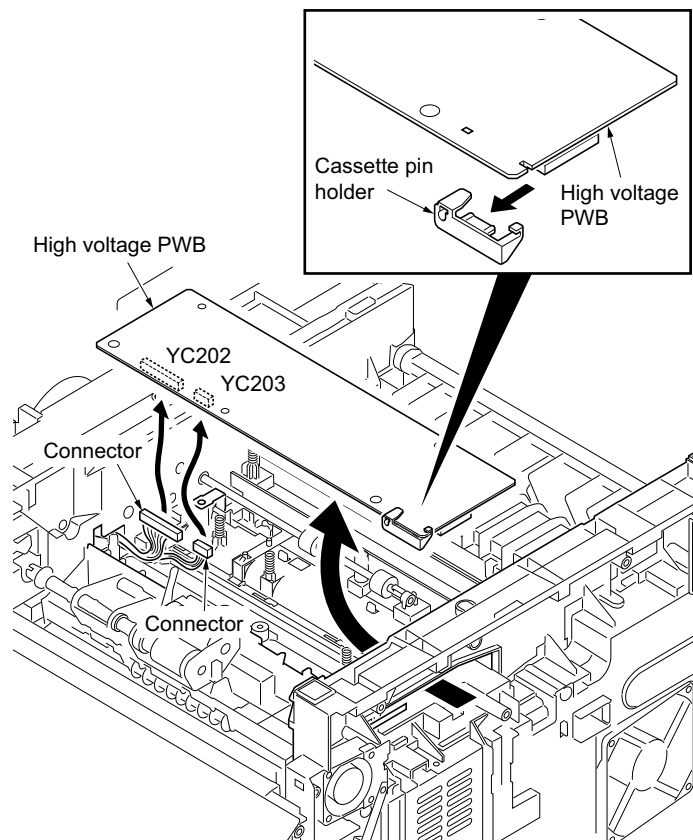


Figure 1-5-38

17. Check or replace the high voltage PWB and refit all the removed parts.

When refitting the high voltage PWB, be careful about following points.

- Position the ground plate so that it is atop the high voltage PWB.
- Each interface is firmly in contact with each spring.
- The bias contact pin must be installed in the specified position.
- The cassette pin must be inserted in the cassette pin holder.

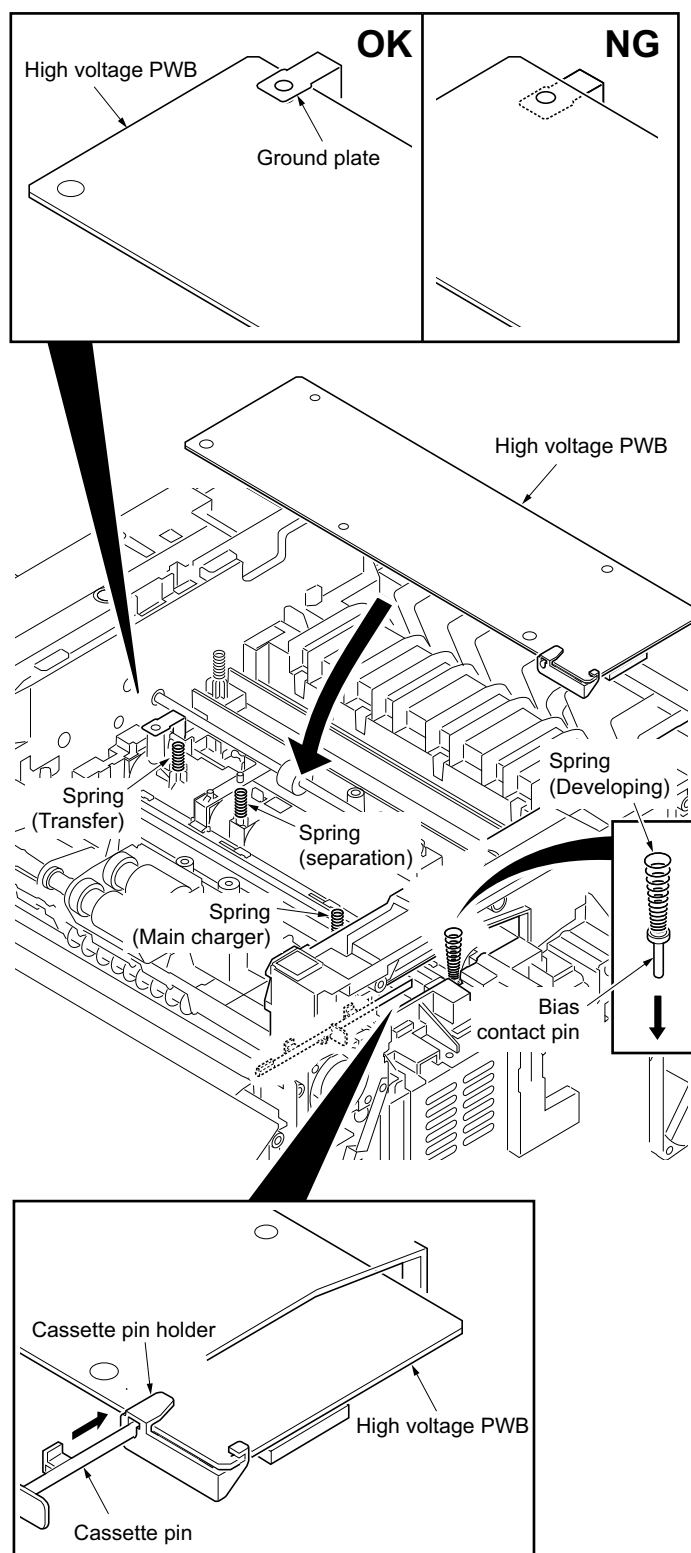


Figure 1-5-39

## 1-5-9 Others

### (1) Detaching and refitting the main motor

#### Procedure

1. Remove the right cover (See page 1-5-4).
2. Remove the connector.

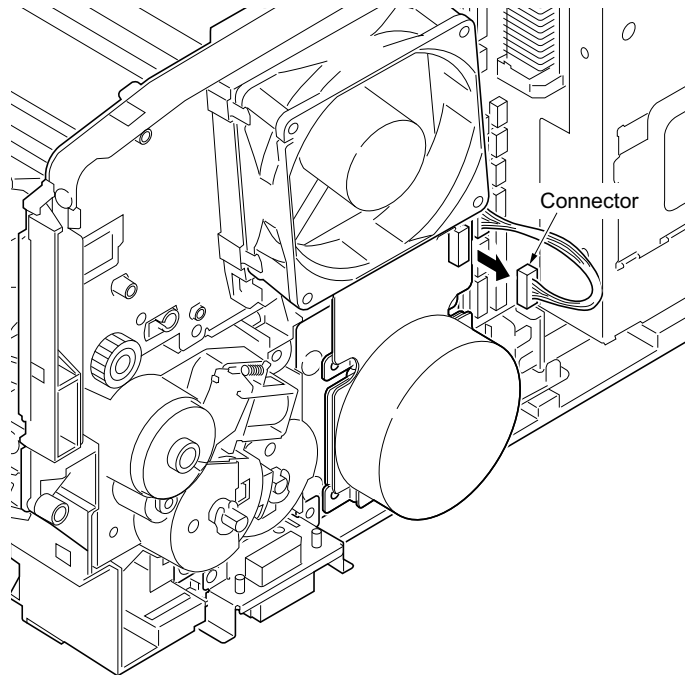


Figure 1-5-40

3. Remove the M3 screw and two M4 screws.
4. Remove the main motor.
5. Check or replace the main motor and refit all the removed parts.

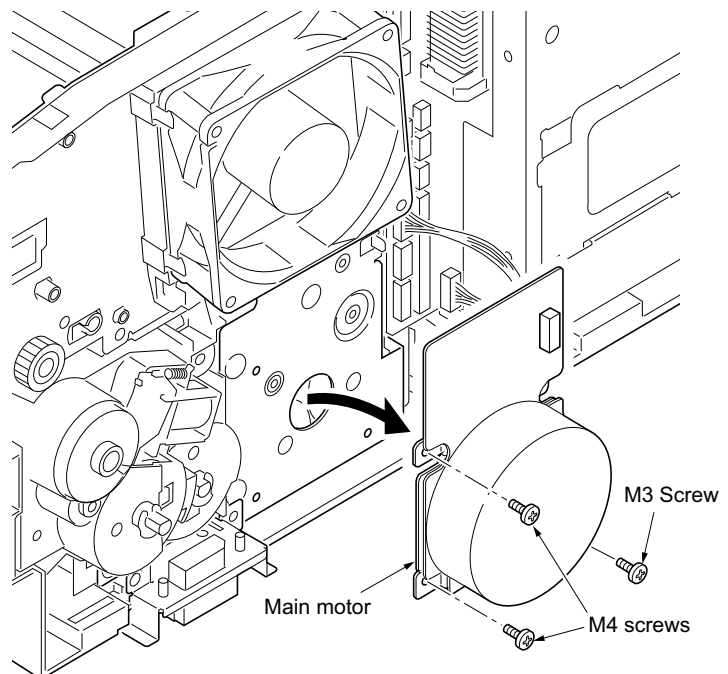
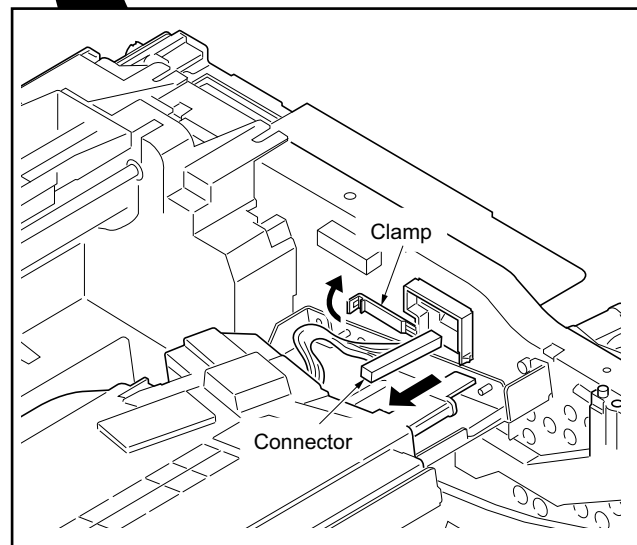
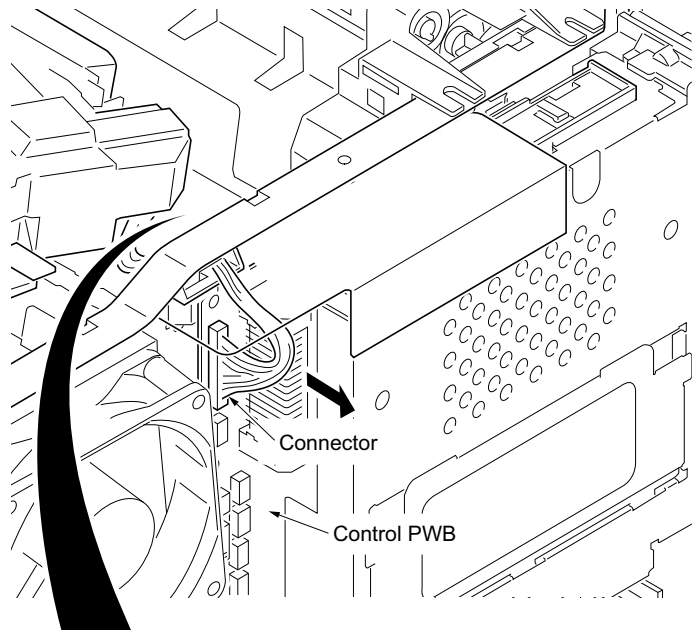



Figure 1-5-41

**(2) Detaching and refitting the laser scanner unit****Procedure**

1. Remove the right cover (See page 1-5-4).
2. Remove the connector from the control PWB.
3. Release the wire clamp.
4. Draw in the connector inside.

**Figure 1-5-42**

5. Remove four screws and then remove the laser scanner unit.
6. Check or replace the laser scanner unit and refit all the removed parts.

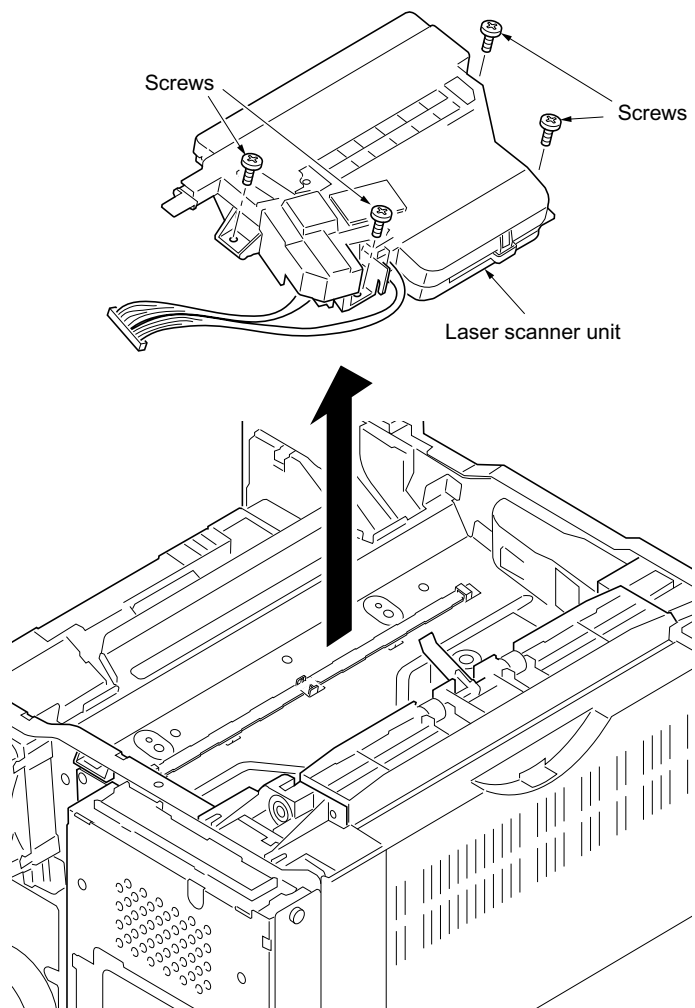**Figure 1-5-43**

### (3) Detaching and refitting the eraser lamp

#### Procedure

1. Remove the laser scanner unit (See page 1-5-30).
2. Remove the connector.
3. Remove the eraser lamp.
4. Check or replace the eraser lamp and refit all the removed parts.


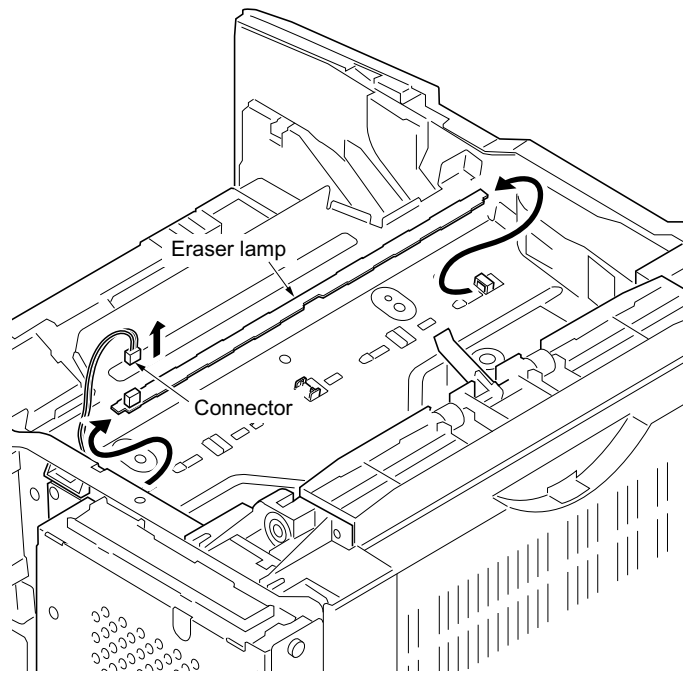


Figure 1-5-44

**(4) Direction of installing the left and right cooling fan motors**

When detaching or refitting the left and/or right cooling fan motors, be careful of the airflow direction (intake or exhaust).

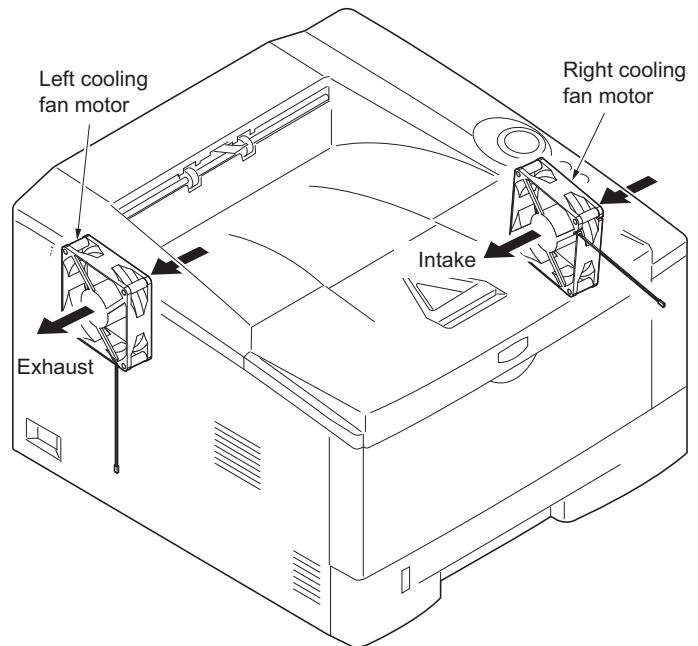

**Figure 1-5-45**


This page is intentionally left blank.



## 1-6-1 Downloading firmware

Firmware files are named after the following codes:

### Firmware file name example

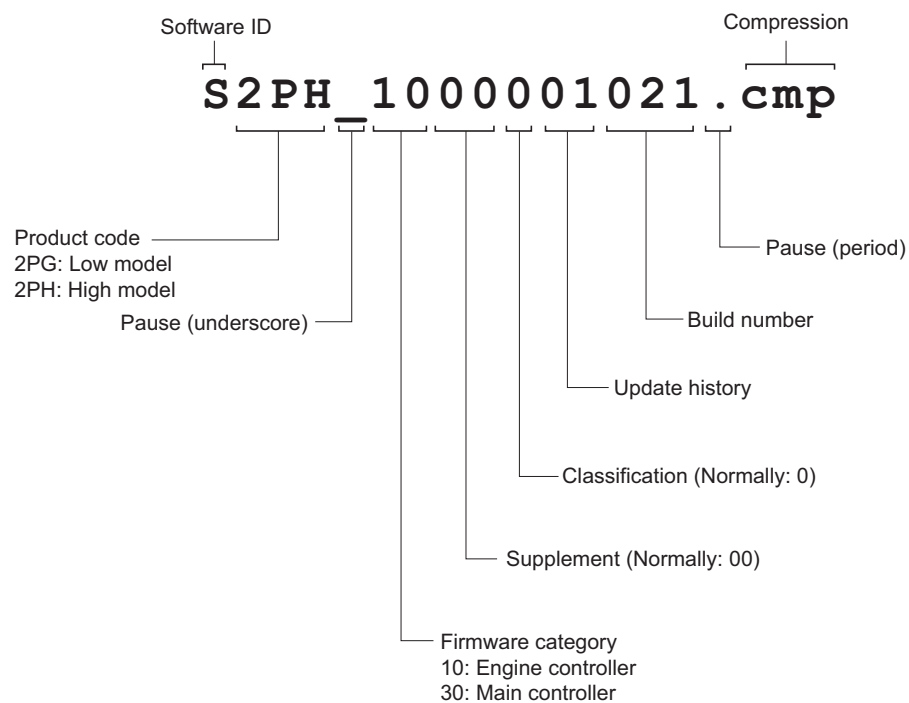

**Figure 1-6-1**

### (1) Downloading the firmware from the memory card

To download data written in a memory card (CompactFlash) to the printer, proceed as explained in this section.

#### CAUTION

Downloading firmware takes several minutes. Do not turn power off during downloading. If downloading is interrupted by an accidental power failure, etc., the control PWB may have to be replaced.

Do not download the system firmware and engine firmware at one time. Store the either firmware in a memory card and download one by one.

#### Procedure

1. Turn printer power off.
2. Open the rear cover.

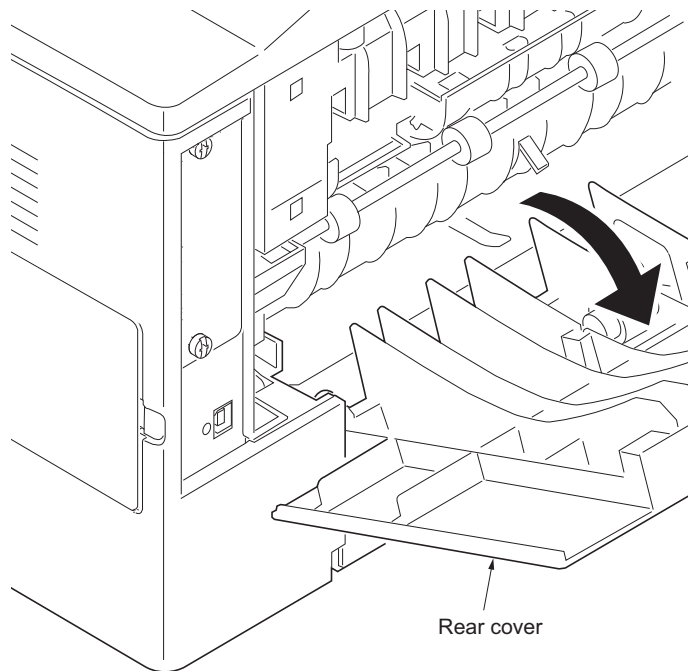


Figure 1-6-2

3. Remove two screws and then remove the optional interface slot cover.
4. Insert the memory card into the memory card slot.

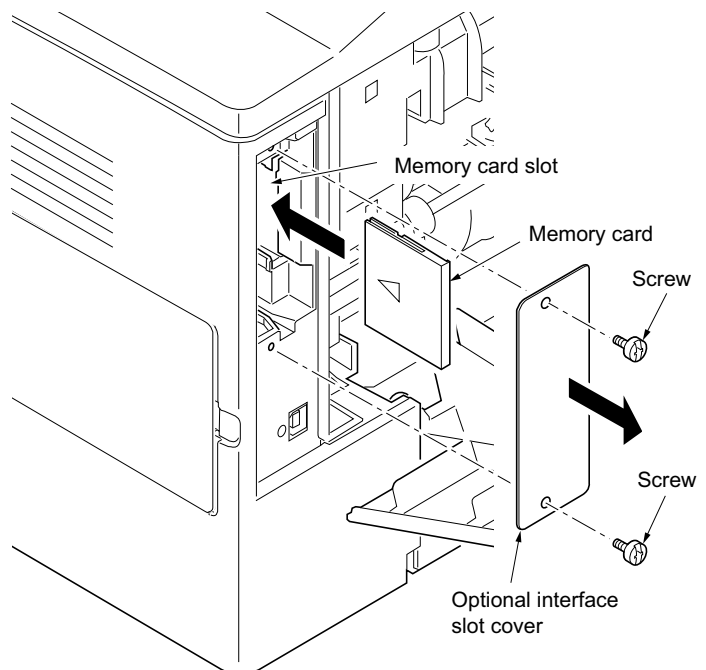


Figure 1-6-3

5. Turn printer power on.  
The printer starts and finishes downloading automatically.

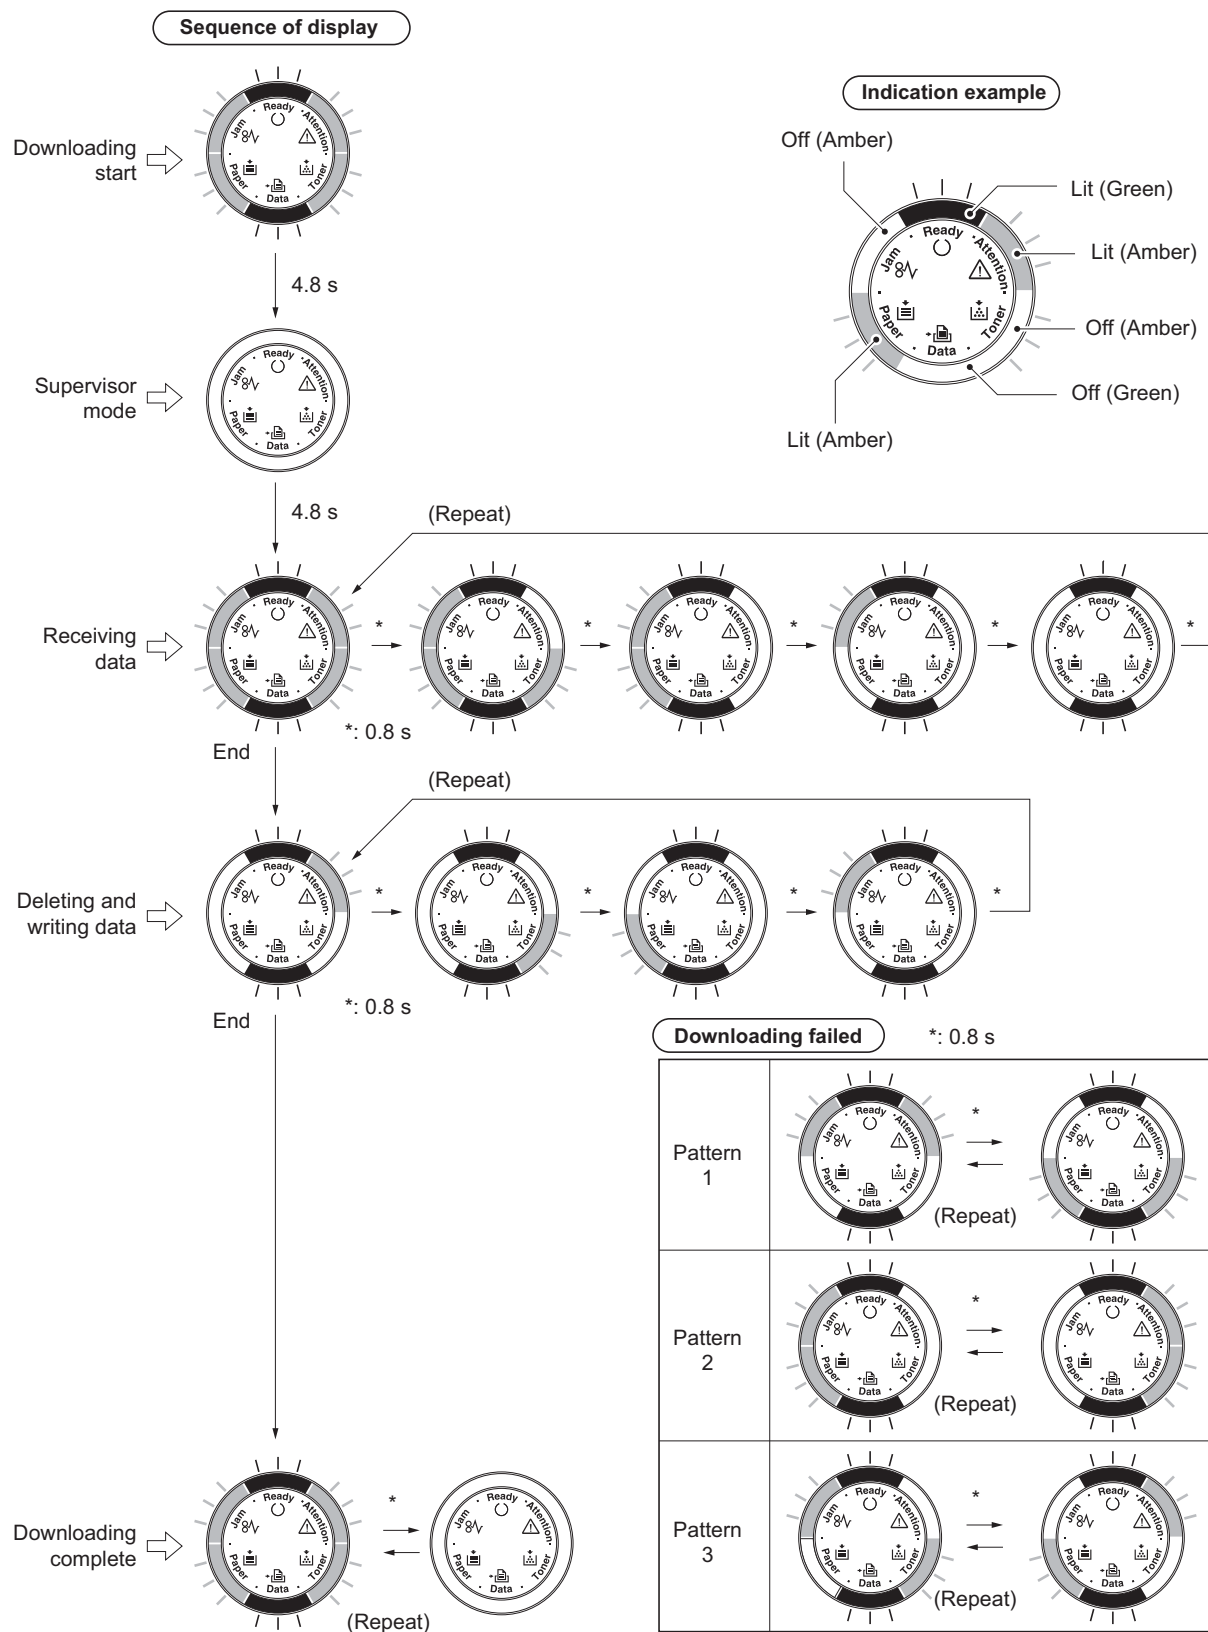
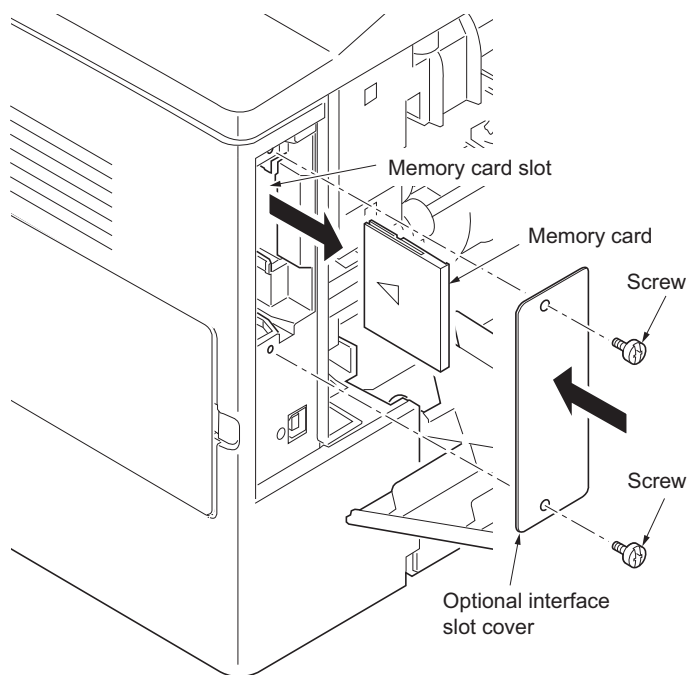


Figure 1-6-4

6. Confirm that downloading was finished normally (See previous page).
7. Turn power off.
8. Remove the memory card.
9. Secure the optional interface slot cover by using two screws.
10. Close the rear cover.
11. Turn power on again.  
Check the printer gets ready and Ready indicator is lit.
12. Print a status page (See page P.1-3-2).
13. Confirm the status page shows the new firmware version.

**Figure 1-6-5**

## 2-1-1 Paper feed/conveying section

Paper feed/conveying section consists of the paper feed unit that feeds paper from the cassette and the MP tray paper feed unit that feeds paper from the MP tray, and the paper conveying section that conveys the fed paper to the transfer/separation section.

### (1) Cassette paper feed section

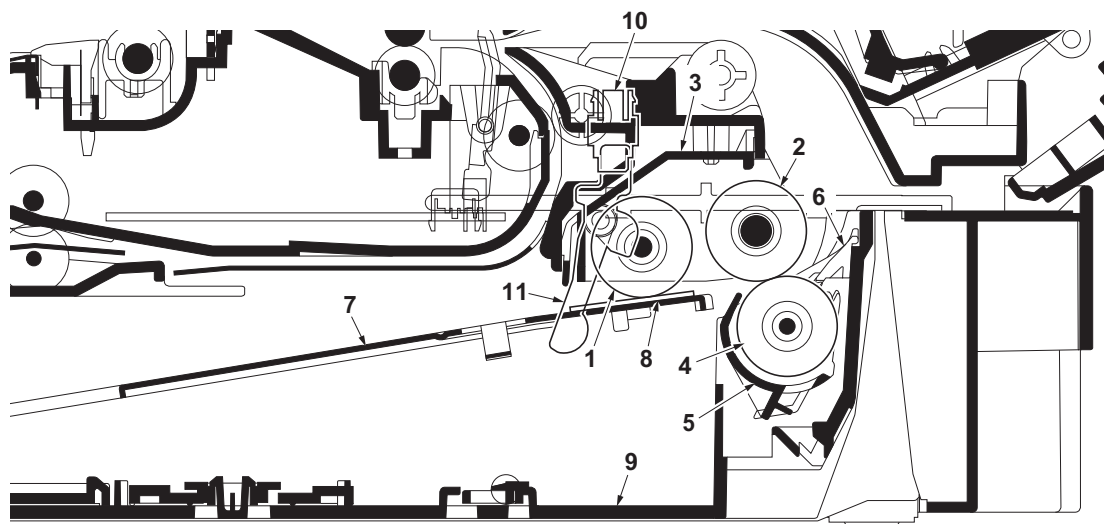


Figure 2-1-1 Cassette paper feed section

- |                       |                              |
|-----------------------|------------------------------|
| (1) Pickup roller     | (7) Bottom plate             |
| (2) Paper feed roller | (8) Bottom pad               |
| (3) Feed holder       | (9) Cassette base            |
| (4) Retard roller     | (10) Paper sensor            |
| (5) Retard holder     | (11) Actuator (paper sensor) |
| (6) Retard guide      |                              |

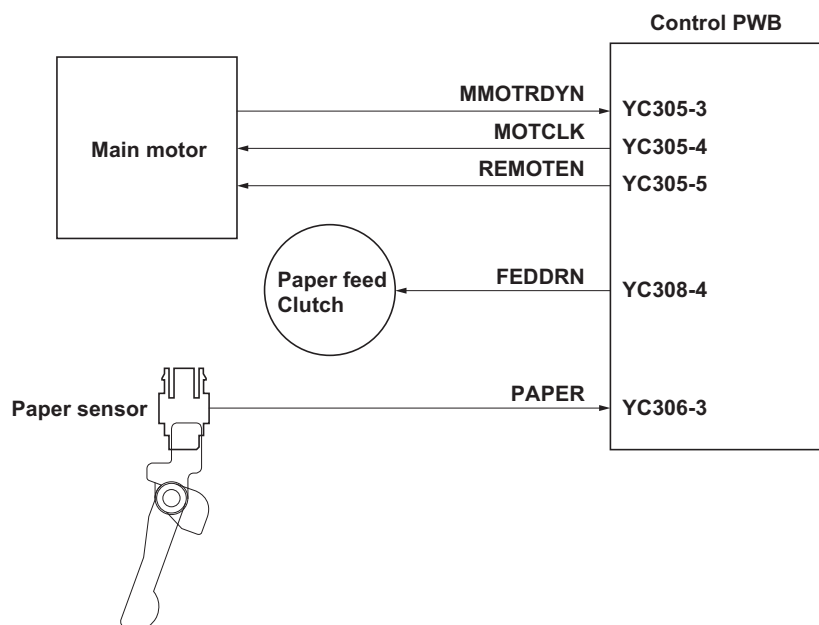


Figure 2-1-2Cassette paper feed section block diagram

## (2) MP tray paper feed section

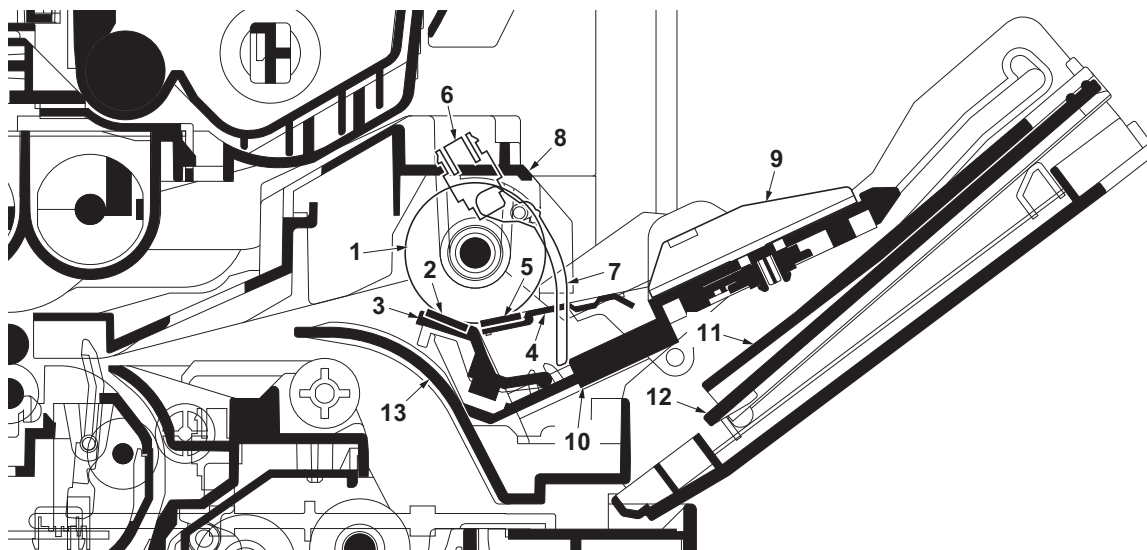


Figure 2-1-3 MP tray paper feed section

- |                                |                      |
|--------------------------------|----------------------|
| (1) MP paper feed roller       | (8) MPF frame        |
| (2) MPF separation pad         | (9) MPF guide R/L    |
| (3) MPF separator              | (10) MPF base        |
| (4) MPF bottom plate           | (11) MPF middle tray |
| (5) MPF friction pad           | (12) MPF upper tray  |
| (6) MP paper sensor            | (13) MPF turn guide  |
| (7) Actuator (MP paper sensor) |                      |

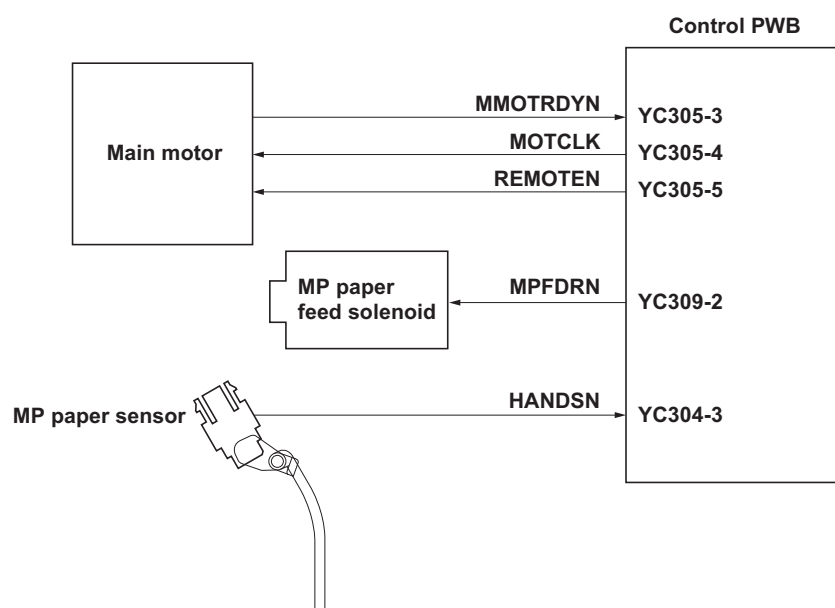


Figure 2-1-4 MP tray paper feed section block diagram

## (3) Paper conveying section

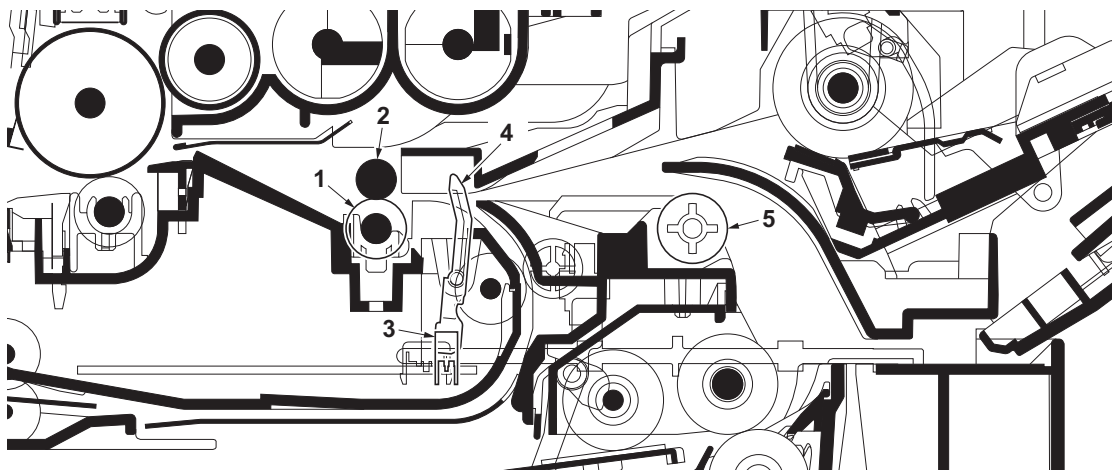


Figure 2-1-5 Paper conveying section

- (1) Lower registration roller
- (2) Upper registration roller
- (3) Registration sensor
- (4) Actuator (registration sensor)
- (5) Feed pulley

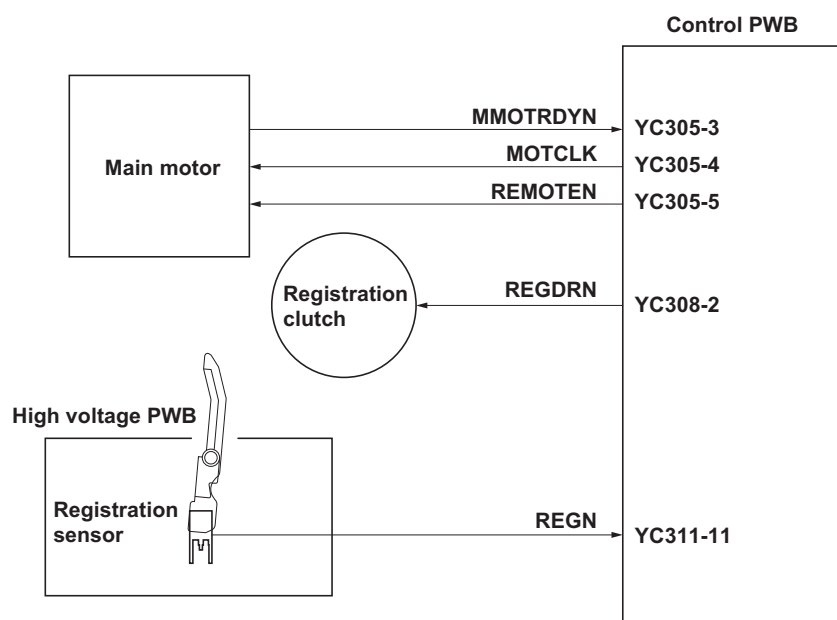


Figure 2-1-6 Paper conveying section block diagram

## 2-1-2 Drum section

### (1) Drum section

The durable layer of organic photoconductor (OPC) is coated over the aluminum cylinder base. The OPC tends to reduce its own electrical conductance when exposed to light. After a cyclic process of charging, exposure, and development, the electrostatic image is constituted over the OPC layer.

Since the OPC is materialized by resin, it is susceptible to damage caused by sharp edges such as a screwdriver, etc., resulting in a print quality problem. Also, finger prints can cause deterioration of the OPC layer, therefore, the drum (in the drum unit) must be handled with care. Substances like water, alcohol, organic solvent, etc., should be strictly avoided. As with all other OPC drums, the exposure to a strong light source for a prolonged period can cause a print quality problem. The limit is approximately 500 lux for less than five minutes. If the drum (drum unit) remains removed from the printer, it should be stored in a cool, dark place.

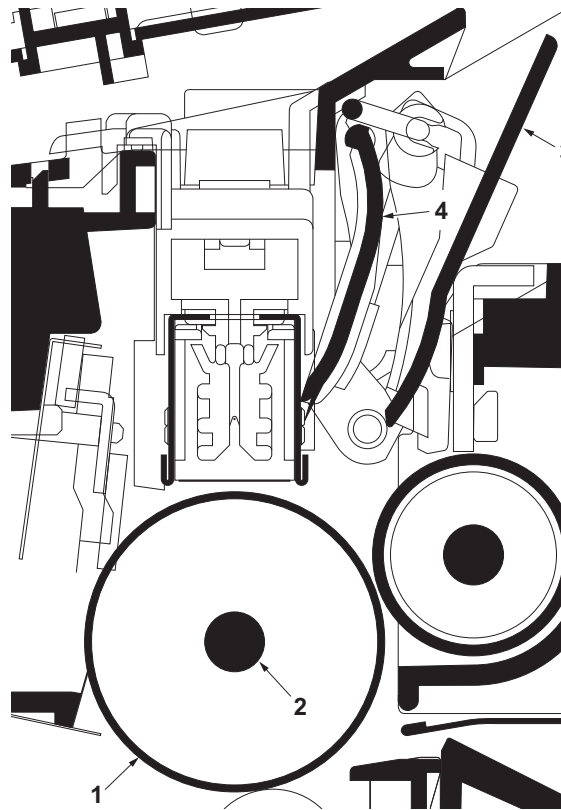


Figure 2-1-7 Drum section

- (1) Drum
- (2) Drum shaft
- (3) Drum cover A
- (4) Drum cover B



## (2) Main charger unit

As the drum rotates in a “clean (neutral)” state, its photoconductive layer is given a uniform, positive (+) corona charge dispersed by the main charger wire. Due to high-voltage scorotron charging, the charging wire can get contaminated by oxidation after a long run. Therefore, the charger wire must be cleaned at a specific interval. Cleaning the charging wire prevents print quality problems such as black streaks.

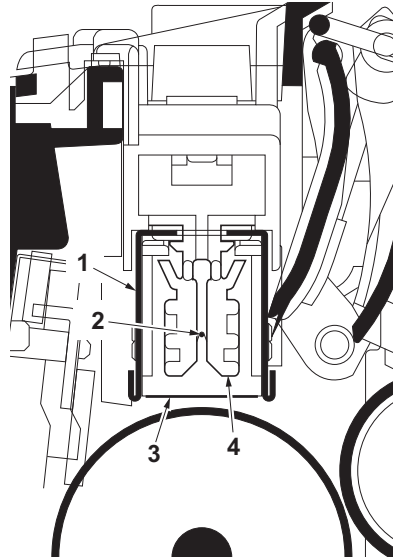


Figure 2-1-8 Main charger unit

- (1) Main charger shield
- (2) Main charger wire
- (3) Main charger grid
- (4) Main charger wire cleaner

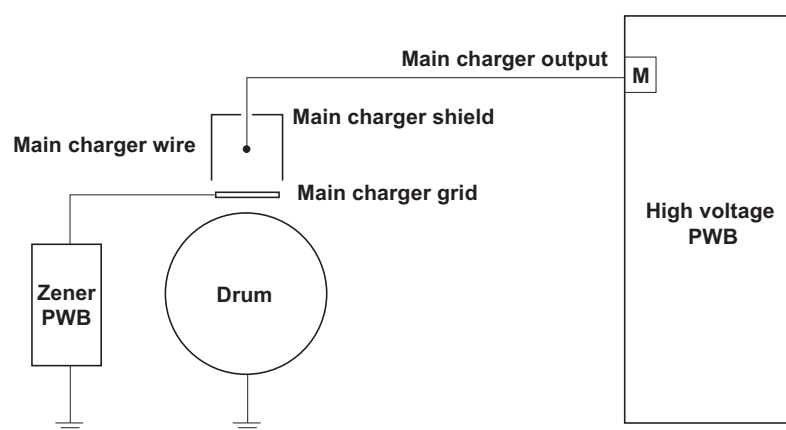


Figure 2-1-9 Drum unit and main charger unit block diagram

### 2-1-3 Expose section

#### (1) Laser scanner unit

The charged surface of the drum is then scanned by the laser beam from the laser scanner unit.

The laser beam (780 nm wavelength) beam is dispersed as the polygon motor revolves to reflect the laser beam over the drum. Various lenses and mirror are housed in the laser scanner unit, adjust the diameter of the laser beam, and focalize it at the drum surface.


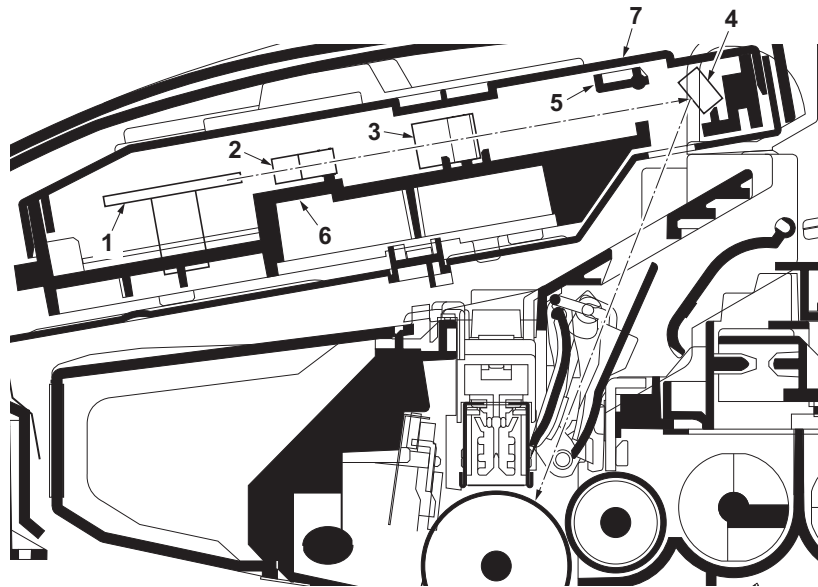


Figure 2-1-10 Laser scanner unit

- (1) Polygon motor (mirror)
- (2) F-θ lens
- (3) F-θ lens
- (4) LSU mirror
- (5) LSU shutter
- (6) LSU frame
- (7) LSU cover

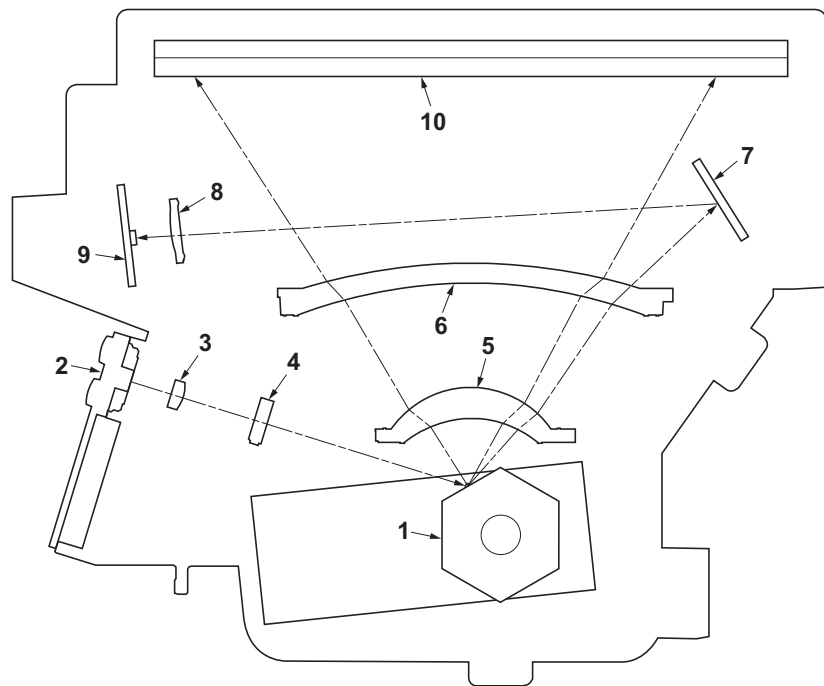

**Figure 2-1-11 Laser scanner unit**

- (1) Polygon motor (mirror)
- (2) Laser diode (APC PWB)
- (3) Collimator lens
- (4) Cylindrical lens
- (5) F-θ lens
- (6) F-θ lens
- (7) PD mirror
- (8) SOS lens
- (9) Pin photo diode sensor (PD PWB)
- (10) LSU mirror

### 2-1-4 Developing section

The latent image constituted on the drum is developed into a visible image. The developing roller contains a 3-pole (S-NS) magnet roller and an aluminum cylinder rotating around the magnet roller. Toner attracts to the magnet sleeve since it is powdery ink made of black resin bound to iron particles. Developing blade, magnetized by magnet, is positioned approximately 0.3 mm above the magnet sleeve to constitute a smooth layer of toner in accordance with the magnet sleeve revolution.

The developing roller is applied with the AC-weighted, positive DC power source. Toner on the magnet sleeve is given a positive charge. The positively charged toner is then attracted to the areas of the drum which was exposed to the laser light. (The gap between the drum and the magnet sleeve is approximately 0.32 mm.) The non-exposed areas of the drum repel the positively charged toner as these areas maintain the positive charge.

The developing roller is also AC-biased to ensure contrast in yielding by compensating the toner's attraction and repelling action during development.

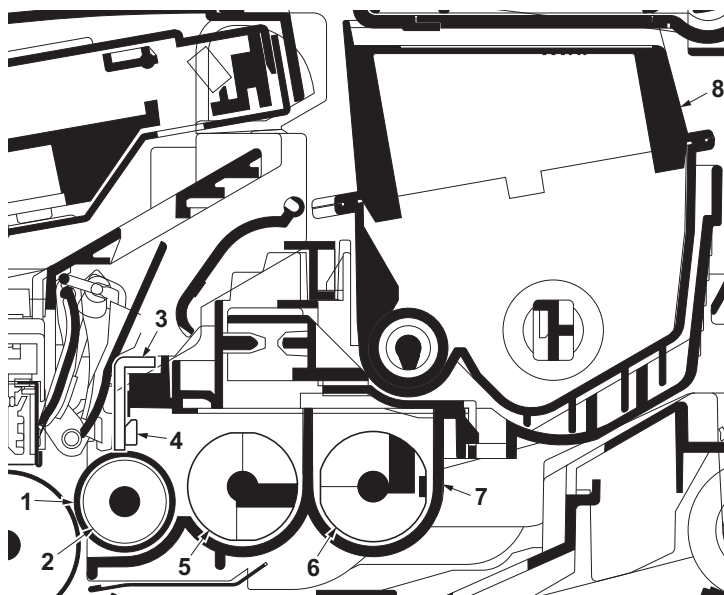


Figure 2-1-12 Developing unit and toner container

- |                      |                     |
|----------------------|---------------------|
| (1) Magnet sleeve    | (5) DLP screw A     |
| (2) Magnet roller    | (6) DLP screw B     |
| (3) Developing blade | (7) DLP case        |
| (4) Blade magnet     | (8) Toner container |

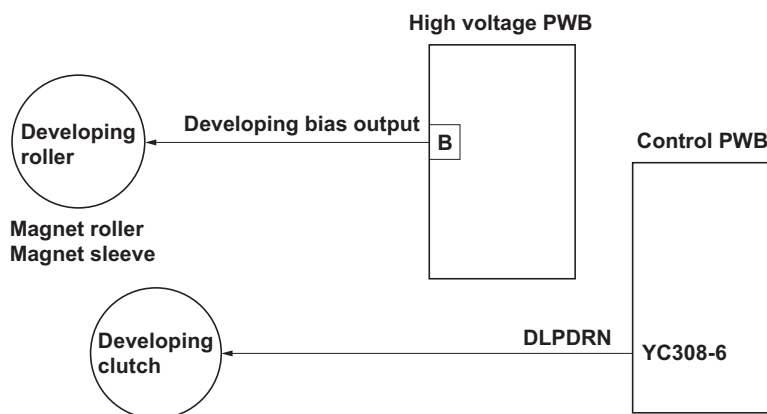


Figure 2-1-13 Developing section block diagram

### 2-1-5 Transfer/separation section

The transfer/separation section consists of the transfer roller, discharger brush and paper chute guide. A high voltage generated by the high voltage PWB is applied to the transfer roller for transfer charging. Paper after transfer is separated from the drum.

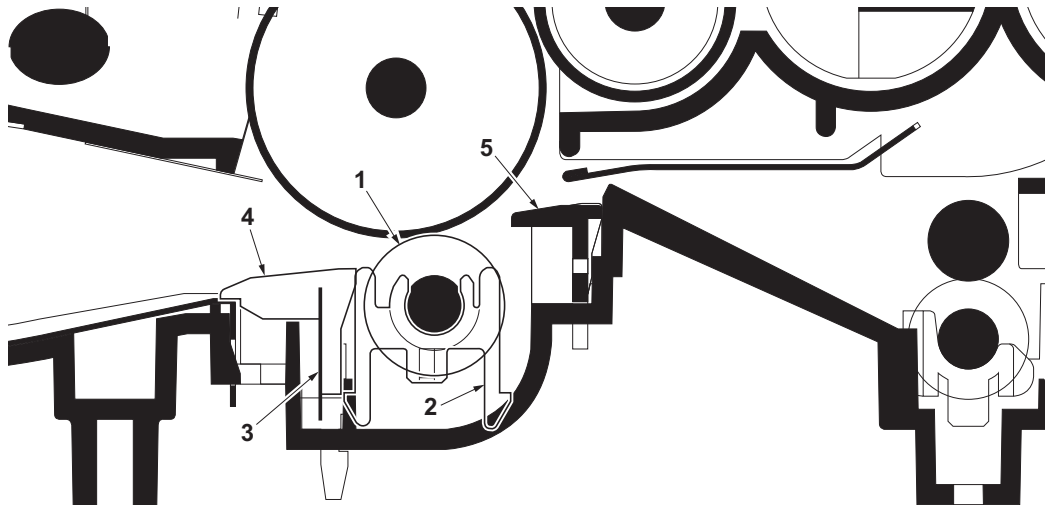


Figure 2-1-14 Transfer/separation section

- (1) Transfer roller
- (2) Transfer bushes
- (3) Discharger brush
- (4) DC brush holder
- (5) Paper chute guide

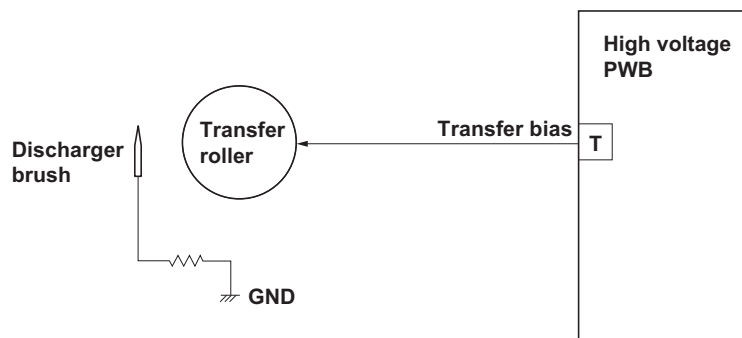


Figure 2-1-15 Transfer/separation section block diagram

## 2-1-6 Cleaning section

After the transferring process, the drum needs to be physically cleaned of toner which is residual after the development process. The cleaning blade is constantly pressed against the drum and scrapes the residual toner off to the sweep roller. The waste toner is collected at the output end of the sweep roller and sent back to the toner container, into the waste toner reservoir.

After the drum is physically cleaned, it then must be cleaned to the electrically neutral state. This is necessary to erase any residual positive charge, ready to accept the uniform charge for the next print process. The residual charge is canceled by exposing the drum to the light emitted from the eraser lamp (PWB). This lowers the electrical conductivity of the drum surface making the residual charge on the drum surface escape to the ground.

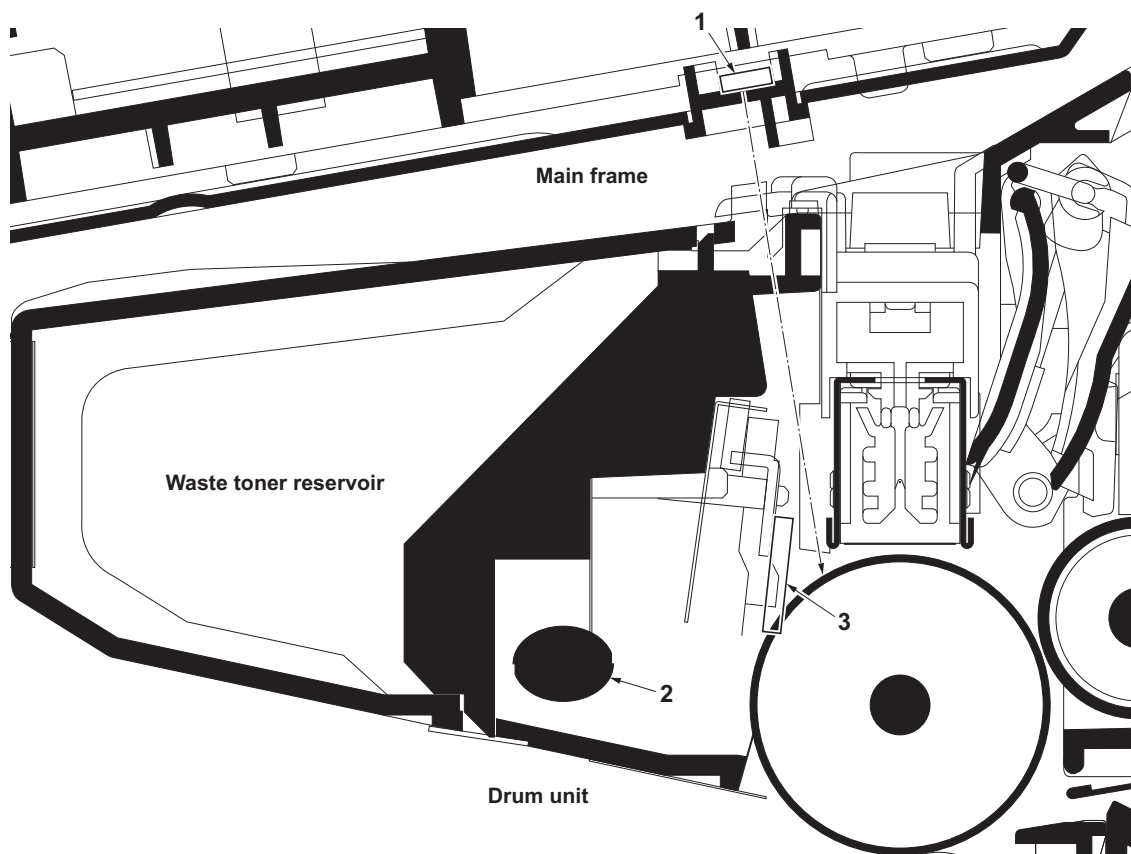


Figure 2-1-16 Cleaning section

- (1) Eraser lamp (PWB)
- (2) Sweep roller
- (3) Cleaning blade

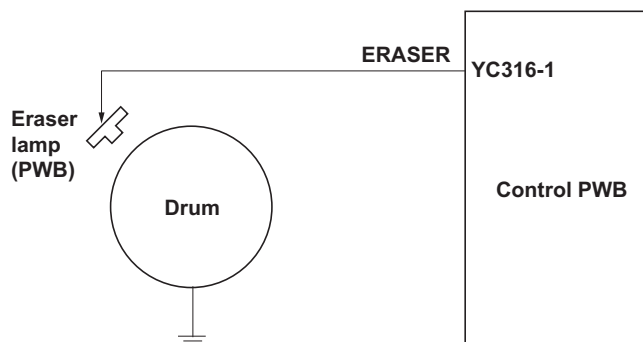


Figure 2-1-17 Cleaning section block diagram

## 2-1-7 Fuser section

The toner on the paper is molten and pressed into the paper as it passes between the heat roller and the press roller in the fuser unit. The heat roller has a heater lamp inside which continuously turns on and off by the fuser thermistor to maintain the constant temperature onto the heat roller surface. The heat roller is resin coated by fluorine to prevent toner from accumulating on the roller after a long run. Care must be taken while handling the heat roller not to scratch the roller surface as doing so may result in print problems. Fuser temperature is optimized to the paper type. The heat roller has four separators (claws) which are continuously in contact with its surface. These separators (claws) prevent the paper on which toner has been fused from being wound around the heat roller causing paper jam. The press roller is made of the heat-resistant silicon rubber. This roller is used to strongly press the paper towards the heat roller by means of press springs. The temperature of the heat roller is constantly monitored by the control PWB using the fuser thermistor. Should the temperature of the heat roller exceed the predetermined value, the fuser thermal cutout is activated to effectively disconnect the heater lamp from power.

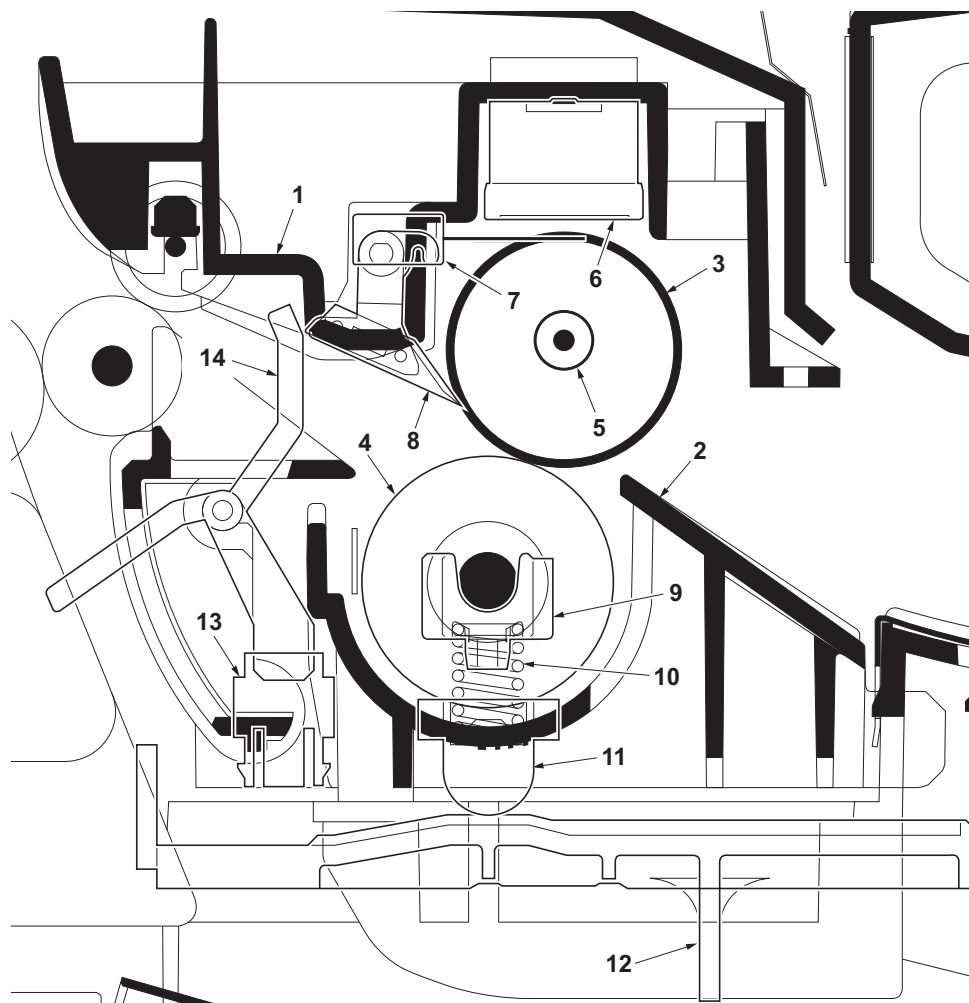


Figure 2-1-18 Fuser section

- |                          |                             |
|--------------------------|-----------------------------|
| (1) Upper fuser frame    | (8) Separators              |
| (2) Lower fuser frame    | (9) Fuser bushes            |
| (3) Heat roller          | (10) Press springs          |
| (4) Press roller         | (11) Press spring holders   |
| (5) Fuser heater lamp    | (12) Fuser lever L (R)      |
| (6) Fuser thermal cutout | (13) Exit sensor            |
| (7) Fuser thermistor     | (14) Actuator (exit sensor) |


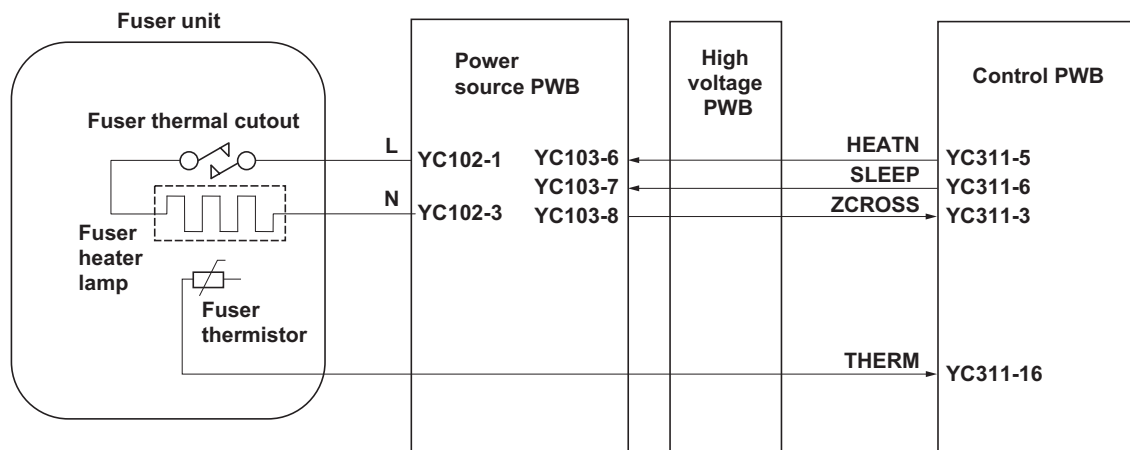


Figure 2-1-19 Fuser section block diagram




### 2-1-8 Paper exit section

The paper exit section transports the paper which passed the fuser unit towards the top tray. The paper which passed through the fuser unit turns on the actuator (exit sensor) in the fuser unit, and is led by the guide comprised of the rear cover, frame and the FD cover guide, finally reaching the upper FD roller. The paper is delivered to the top tray by the rotation of the upper FD roller.

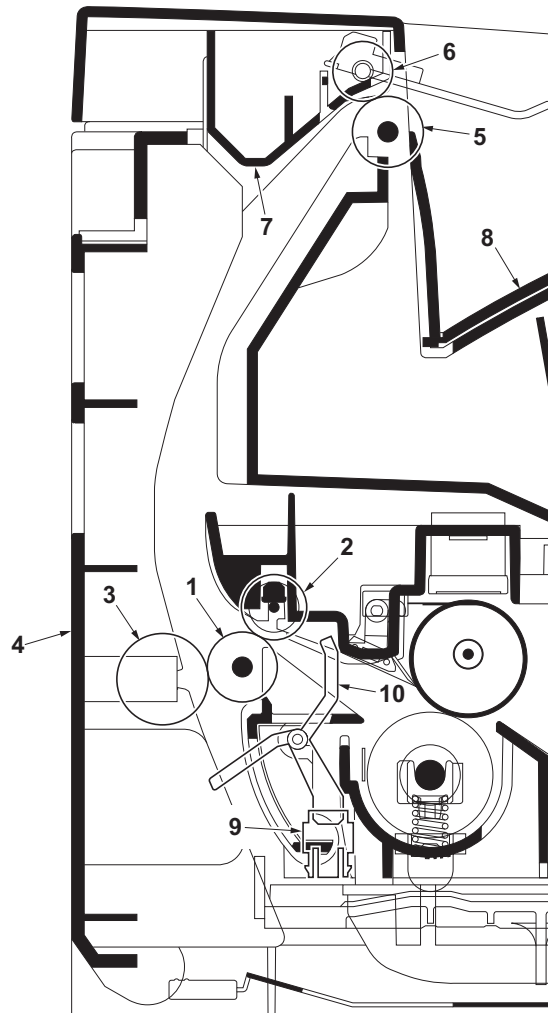

**Figure 2-1-20 Paper exit section**


- (1) Exit roller
- (2) Fuser exit pulley
- (3) Middle pulley
- (4) Rear cover
- (5) Upper FD roller
- (6) Exit pulley
- (7) FD cover
- (8) Top tray
- (9) Exit sensor
- (10) Actuator (exit sensor)

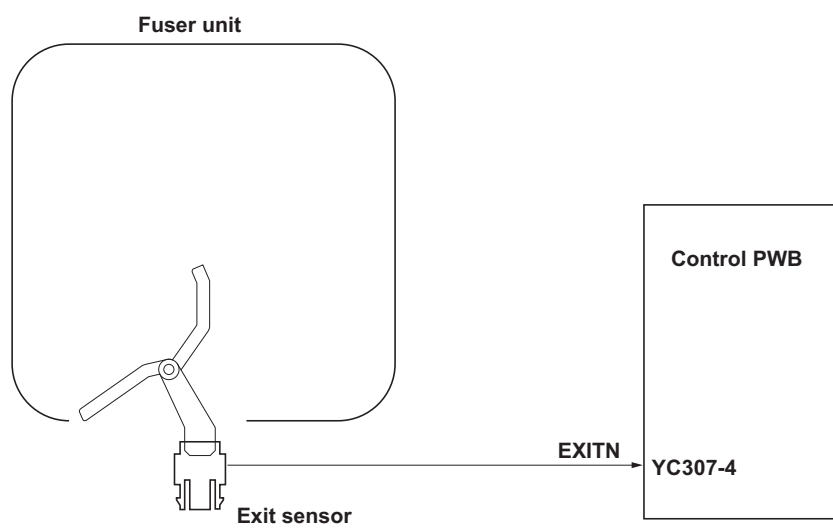

**Figure 2-1-21 Paper exit section block diagram**


## 2-1-9 Duplex/conveying section

The duplex/conveying section consists of conveying path which sends the paper sent from the exit section to the paper feed/conveying section when duplex printing.

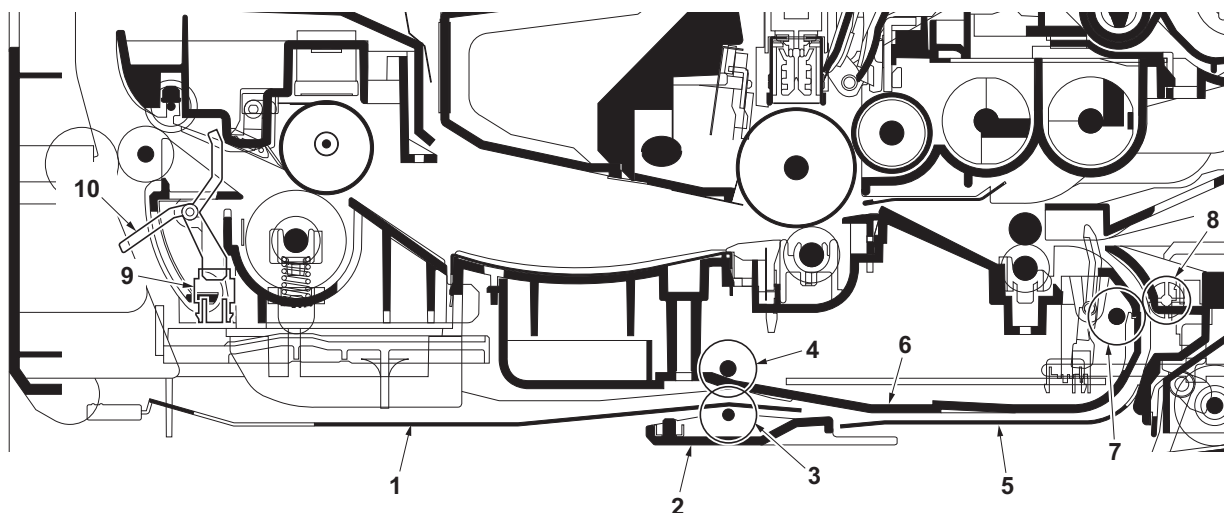

**Figure 2-1-22 Duplex/conveying section**

- (1) DU cover B
- (2) DU holder
- (3) Middle pulley B
- (4) DU roller
- (5) DU cover A
- (6) Lower base cover
- (7) Feed roller
- (8) Feed pulley
- (9) Exit sensor
- (10) Actuator (exit sensor)

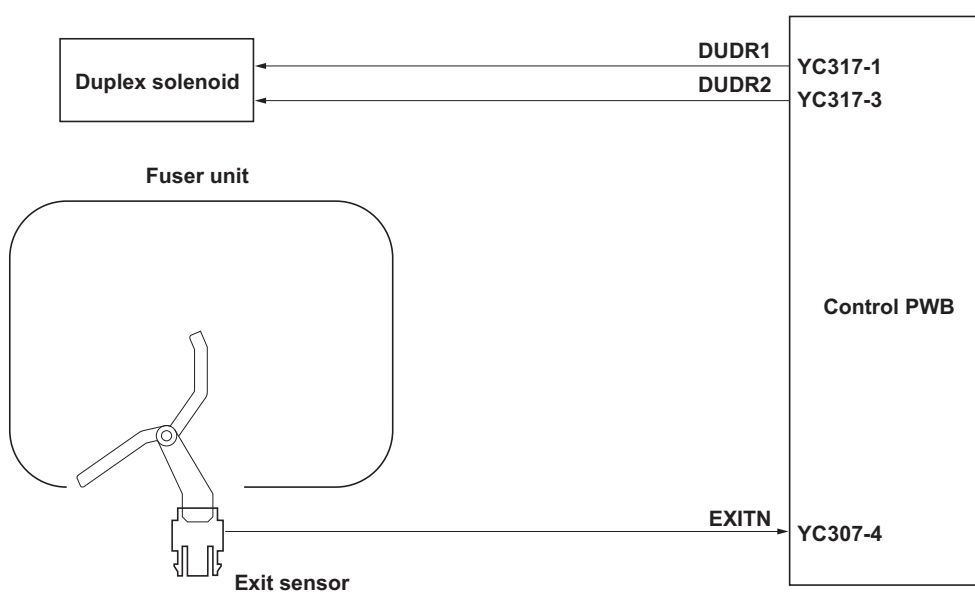


**Figure 2-1-23 Duplex/paper conveying section block diagram**

This page is intentionally left blank.

## 2-2-1 Electrical parts layout

### (1) PWBs

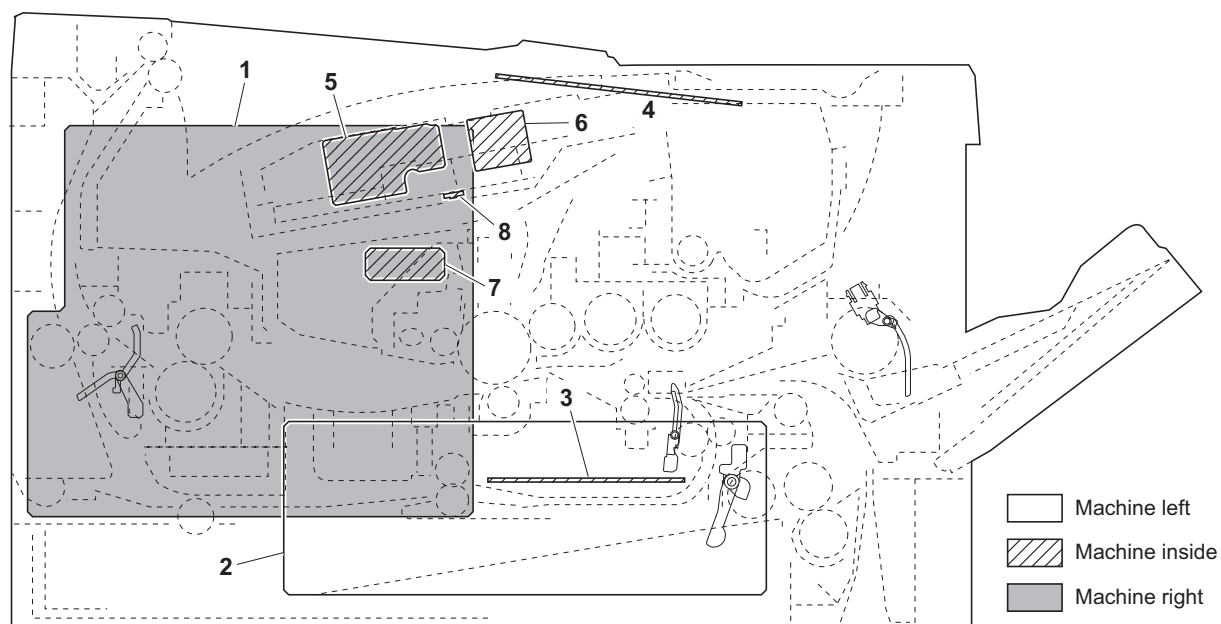


**Figure 2-2-1 PWBs**


- |    |                           |  |
|----|---------------------------|--|
| 1. | Control PWB .....         | Main controller: Controls the software such as the print data processing and provides the interface with computers.<br>Engine: Controls printer hardware such as high voltage/bias output control, paper conveying system control, and fuser temperature control, etc. |
| 2. | Power source PWB .....    | After full-wave rectification of AC power source input, switching for converting to 24 V DC for output. Controls the fuser heater lamp.  |
| 3. | High voltage PWB .....    | Generates main charging, developing bias and transfer bias.  |
| 4. | Operation panel PWB ..... | Consists the LED indicators and key switches.  |
| 5. | APC PWB .....             | Generates and controls the laser beam.   |
| 6. | PD PWB .....              | Controls horizontal synchronizing timing of laser beam.  |
| 7. | Zener PWB .....           | Adjusts the drum surface potential.  |
| 8. | Eraser lamp PWB .....     | Eliminates the residual electrostatic charge on the drum.  |

#### List of correspondences of PWB names

No.	Name used in service manual	Name used in parts list
1	Control PWB	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP)
2	Power source PWB	SWITCHING REGULATOR 120V SWITCHING REGULATOR 230V
3	High voltage PWB	HIGH VOLTAGE UNIT
4	Operation panel PWB	P.W.B BOARD ASSY PANEL
5	APC PWB	-
6	PD PWB	-
7	Zener PWB	-
8	Eraser lamp PWB	-

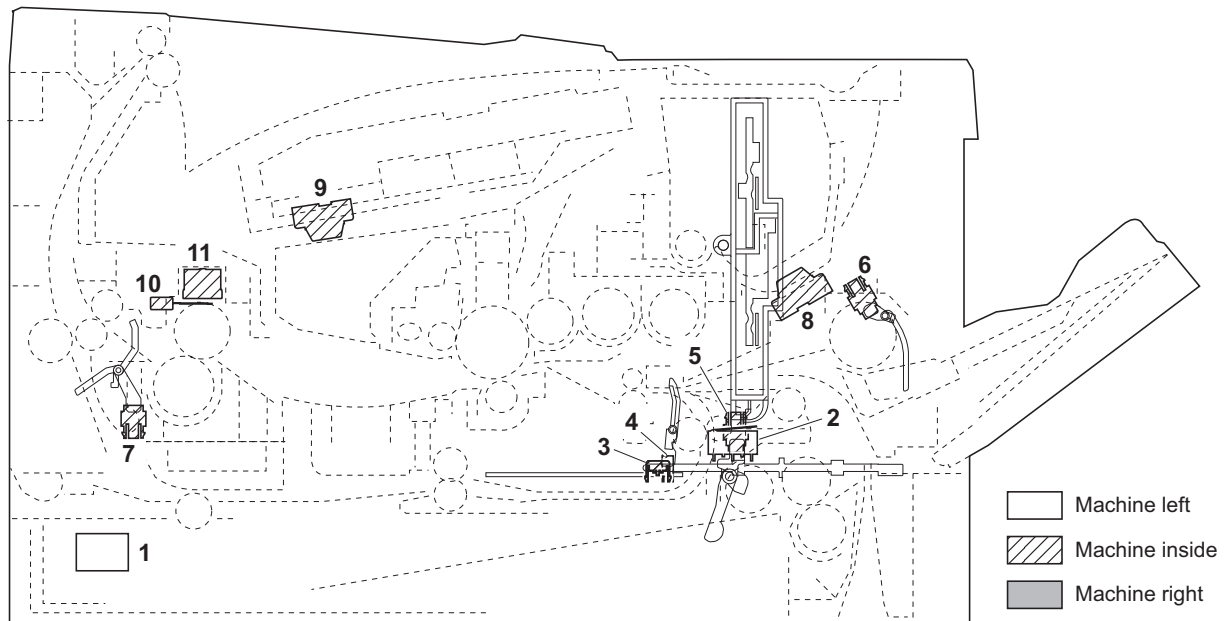**(2) Switches and sensors****Figure 2-2-2 Switches and sensors**

- |                                |  |
|--------------------------------|--|
| 1. Power switch .....          | Turns ON/OFF the AC power source.  |
| 2. Interlock switch .....      | Shuts off 24 V DC power line when the top cover is opened.   |
| 3. Cassette switch .....       | Detects open/close cassette.   |
| 4. Registration sensor .....   | Detects the timing of primary paper feed.  |
| 5. Paper sensor .....          | Detects the presence of paper in the cassette.   |
| 6. MP paper sensor .....       | Detects the presence of paper on the MP tray.  |
| 7. Exit sensor .....           | Detects paper jam in the fuser or duplex conveying section.  |
| 8. Toner sensor .....          | Detects the quantity of toner in a toner container.  |
| 9. Waste toner sensor .....    | Detects when the waste toner reservoir (Drum unit) is full.  |
| 10. Fuser thermistor .....     | Measures the heat roller temperature.  |
| 11. Fuser thermal cutout ..... | Shuts off the power source to the fuser heater lamp when the heat roller reaches extremely high temperature. |

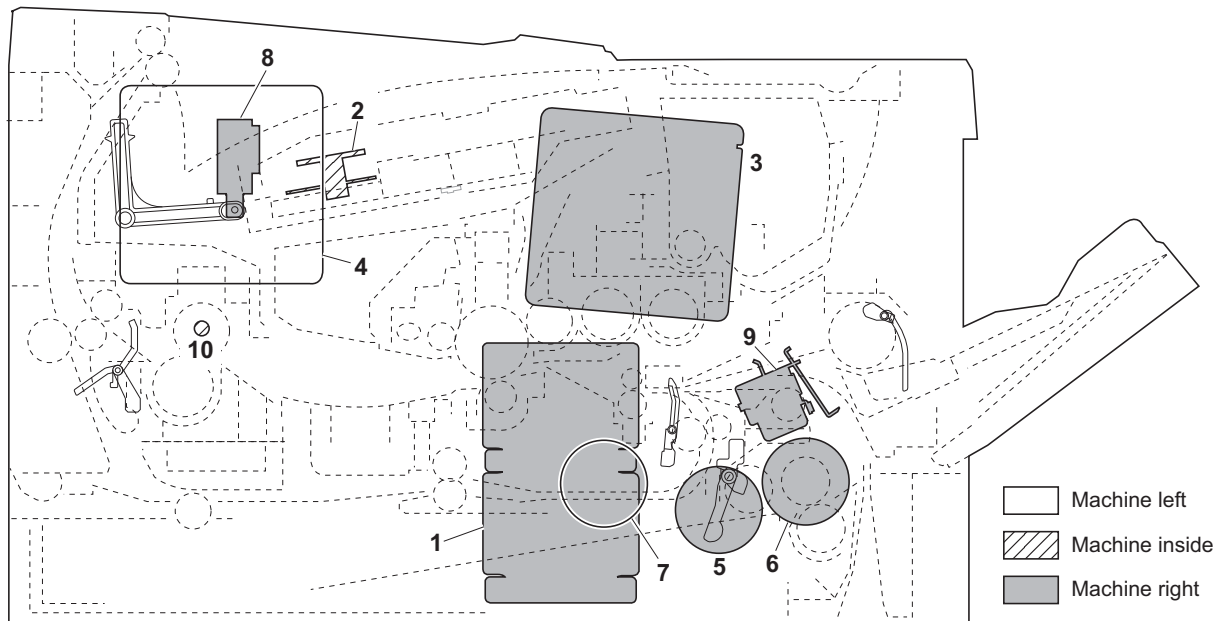**(3) Other electrical components****Figure 2-2-3 Other electrical components**

- |                                  |   |
|----------------------------------|---|
| 1. Main motor .....              | Drives the paper feed/conveying section and fuser unit.       |
| 2. Polygon motor .....           | Drives the polygon mirror.                                    |
| 3. Right cooling fan motor ..... | Cools the interior of machine.                                |
| 4. Left cooling fan motor .....  | Cools the interior of machine.                                |
| 5. Registration clutch .....     | Controls the secondary paper feed.                            |
| 6. Paper feed clutch .....       | Controls the paper cassette paper feed.                       |
| 7. Developing clutch .....       | Controls the toner feed.                                      |
| 8. Duplex solenoid .....         | Controls the paper conveying at the duplex conveying section. |
| 9. MP paper feed solenoid .....  | Controls the MPF bottom plate of the MP tray.                 |
| 10. Fuser heater lamp .....      | Heats the heat roller.  |

This page is intentionally left blank.



### 2-3-1 Power source PWB

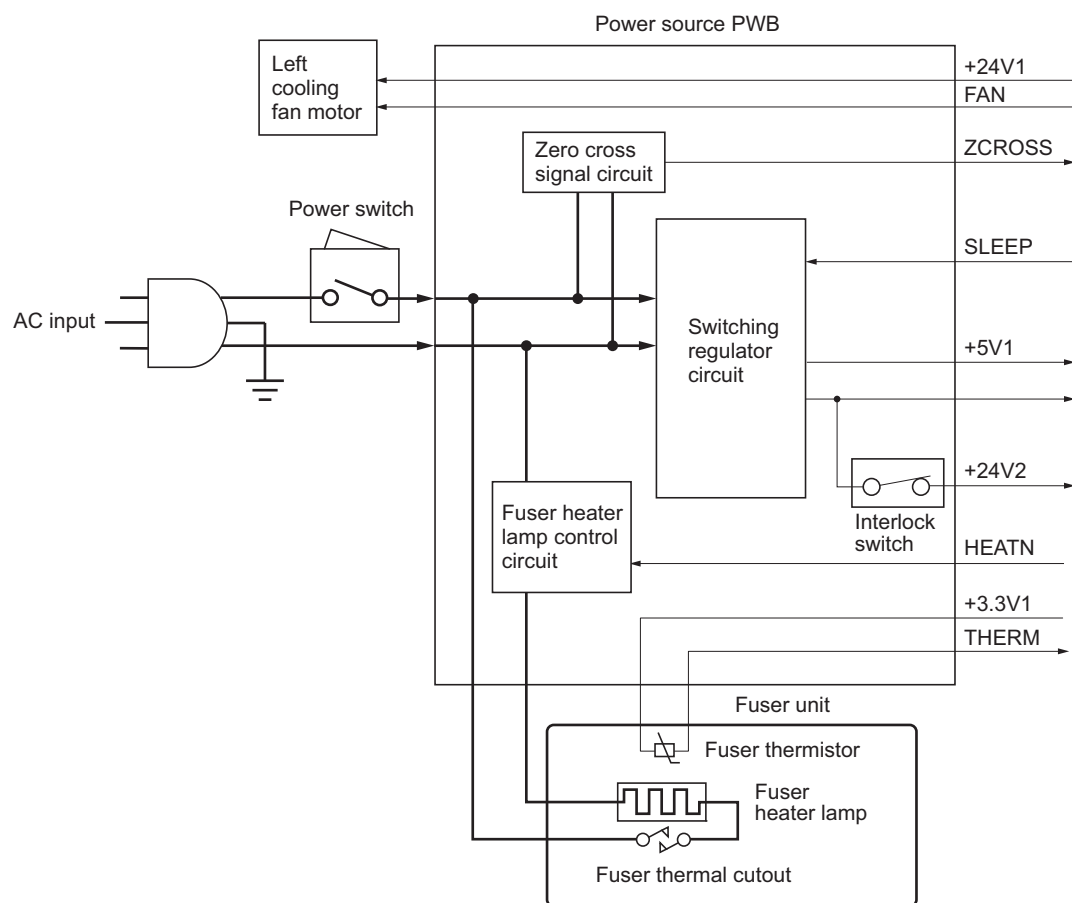


Figure 2-3-1 Power source PWB block diagram

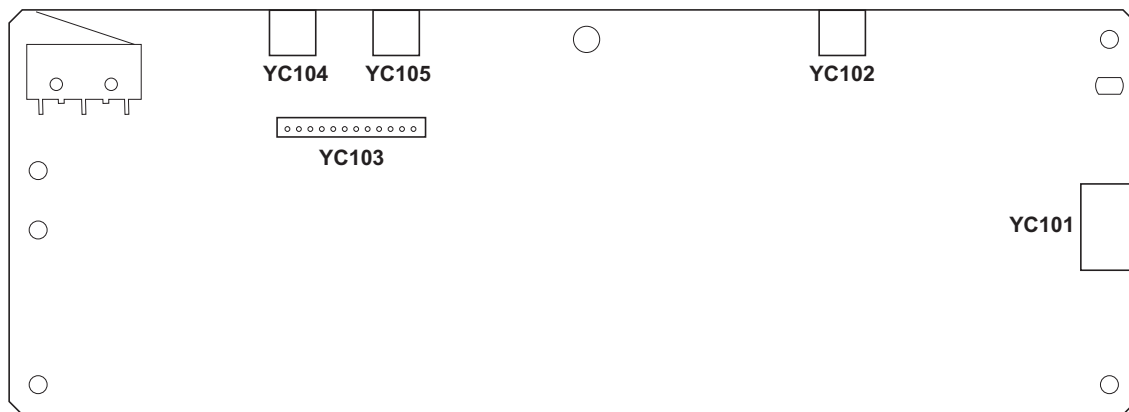


Figure 2-3-2 Power source PWB silk-screen diagram

Connector	Pin No.	Signal	I/O	Voltage	Description
YC101 Connected to the AC inlet	1	LIVE	I	120 V AC 220 - 240 V AC	AC power input
	2	NEUTRAL	I	120 V AC 220 - 240 V AC	AC power input
YC102 Connected to the fuser heater lamp	1	HEATER COM	O	120 V AC 220 - 240 V AC	Fuser heater lamp output
	2	N.C.	-	-	Not used
	3	HEATER LIVE	O	120 V AC 220 - 240 V AC	Fuser heater lamp output
YC103 Connected to the high voltage PWB	1	+24V1	O	24 V DC	24 V DC power source
	2	SGND	-	-	Ground
	3	FAN	I	0/24 V DC	Left cooling fan motor: On/Off
	4	THERM	O	Analog	Fuser thermistor detection voltage
	5	+3.3V	I	3.3 V DC	3.3 V DC power source
	6	HEATN	I	0/3.3 V DC	Fuser heater lamp: On/Off
	7	SLEEP	I	0/3.3 V DC	Sleep mode signal: On/Off
	8	ZCROSS	O	0/3.3 V DC (pulse)	Zero cross signal
	9	+24V2	O	24 V DC	24 V DC power source (via interlock switch)
	10	+24V2	O	24 V DC	24 V DC power source (via interlock switch)
	11	PGND	-	-	Ground
	12	PGND	-	-	Ground
YC104 Connected to the left cooling fan motor	1	+24V1	O	24 V DC	24 V DC power source
	2	FAN	O	0/24 V DC	Left cooling fan motor: On/Off
YC105 Connected to the fuser thermistor	1	+3.3V1	O	3.3 V DC	3.3 V DC power source
	2	THERM	I	Analog	Fuser thermistor detection voltage

## 2-3-2 Control PWB


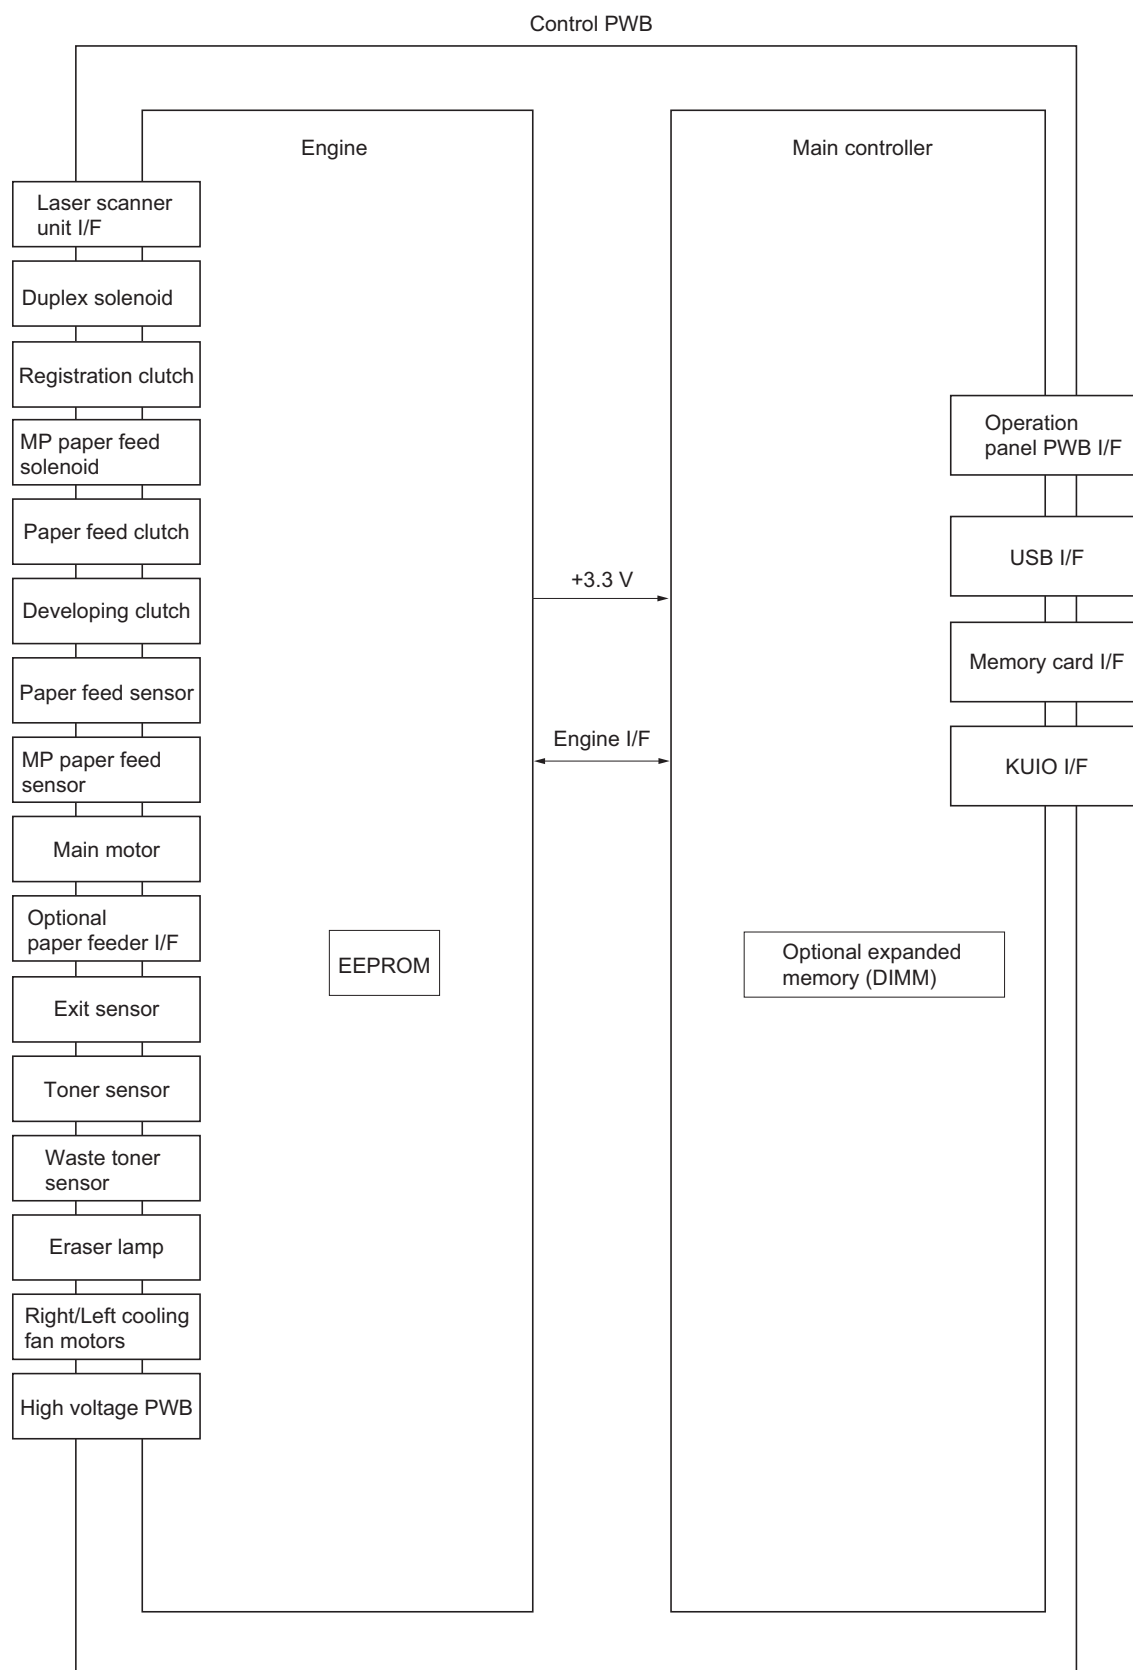


Figure 2-3-3 Control PWB block diagram

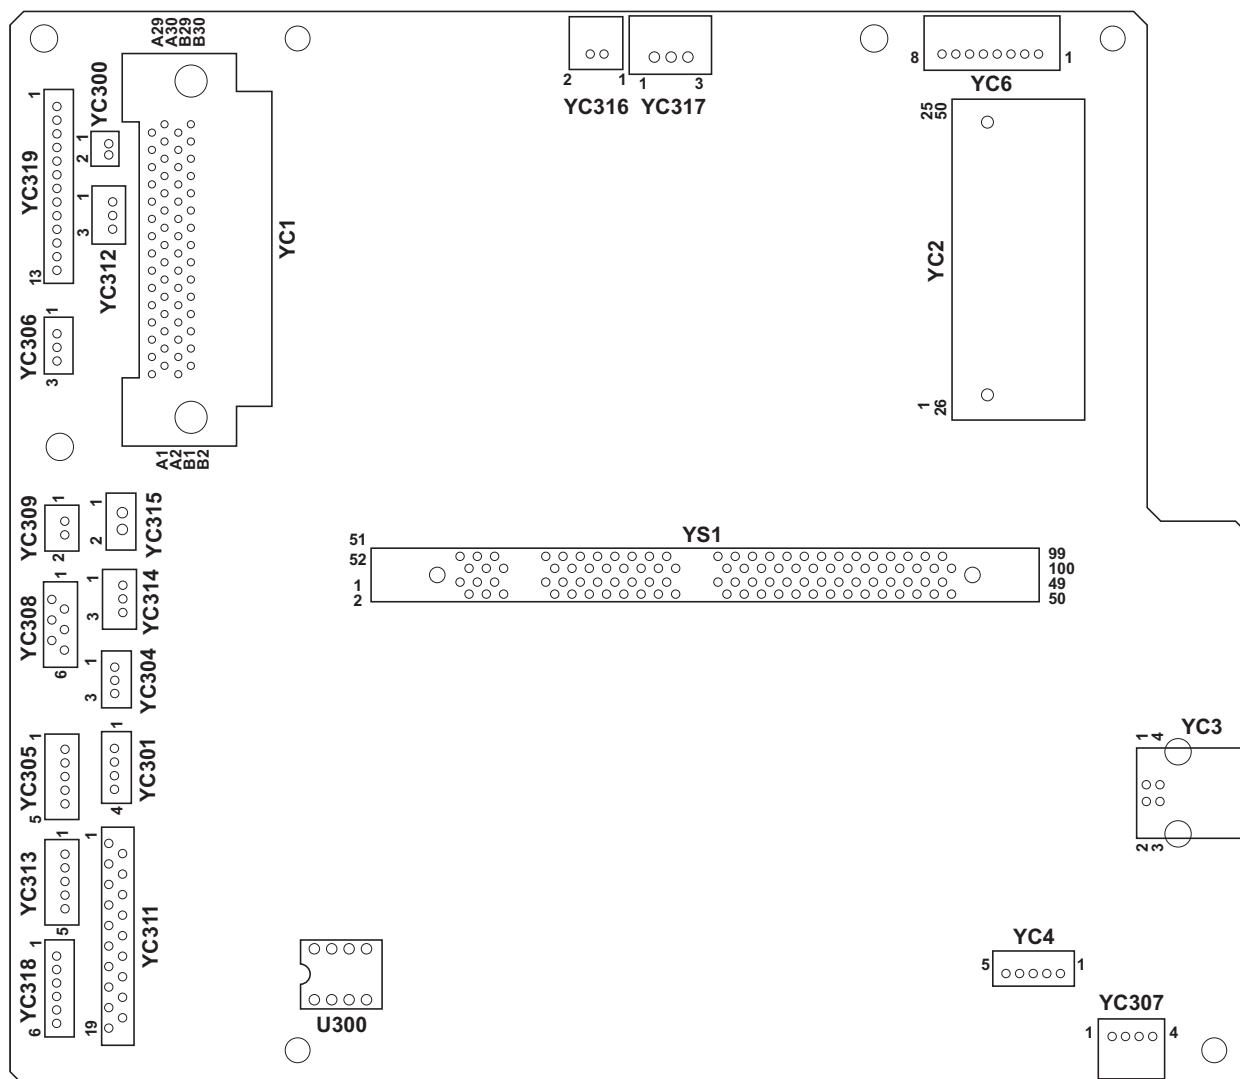

**Figure 2-3-4 Control PWB silk-screen diagram**

Connector	Pin No.	Signal	I/O	Voltage	Description
YC6 Connected to the opera- tion panel PWB	1	LED1	O	3.3/0 V DC	Paper indicator display: On/Off
	2	LED2	O	3.3/0 V DC	Jam indicator display: On/Off
	3	SW	I	Analog	Cancel key/GO key: On/Off
	4	SGND	-	-	Ground
	5	LED3	O	3.3/0 V DC	Ready indicator display: On/Off
	6	LED4	O	3.3/0 V DC	Attention indicator display: On/Off
	7	LED5	O	3.3/0 V DC	Toner indicator display: On/Off
	8	LED6	O	3.3/0 V DC	Data indicator display: On/Off
YC304 Connected to the MP paper sen- sor	1	+3.3V2	O	3.3 V DC	3.3 V DC power source
	2	GND	-	-	Ground
	3	HANDSN	I	0/3.3 V DC	MP paper sensor: On/Off
YC305 Connected to the main motor	1	+24V3	O	24 V DC	24 V DC power source
	2	PGND	-	-	Ground
	3	MMOTRDYN	I	0/3.3 V DC	Main motor ready signal
	4	MMOTCLK	O	0/3.3 V DC (pulse)	Main motor clock signal
	5	REMOTEN	O	0/3.3 V DC	Main motor: On/Off
YC306 Connected to the paper sensor	1	+3.3V2	O	3.3 V DC	3.3 V DC power source
	2	GND	-	-	Ground
	3	PAPER	I	0/3.3 V DC	Paper sensor: On/Off
YC307 Connected to the exit sensor	1	NC	-	-	Not used
	2	+3.3V2	O	3.3 V DC	3.3 V DC power source
	3	SGND	-	-	Ground
	4	EXITN	I	0/3.3 V DC	Exit sensor: On/Off
YC308 Connected to the regis- tration clutch, paper feed clutch and developing clutch	1	+24V3	O	24 V DC	24 V DC power source
	2	REGDRN	O	0/24 V DC	Registration clutch: On/Off
	3	+24V3	O	24 V DC	24 V DC power source
	4	FEDDRN	O	0/24 V DC	Paper feed clutch: On/Off
	5	+24V3	O	24 V DC	24 V DC power source
	6	DLPDRN	O	0/24 V DC	Developing clutch: On/Off
YC309 Connected to the MP paper feed solenoid	1	+24V3	O	24 V DC	24 V DC power source
	2	MPFDRN	O	0/24 V DC	MP paper feed solenoid: On/Off

Connector	Pin No.	Signal	I/O	Voltage	Description
YC311 Connected to the high voltage PWB	1	+24V1	I	24 V DC	24 V DC power source
	2	+3.3V2	O	3.3 V DC	3.3 V DC power source
	3	ZCROSS	I	0/3.3 V DC (pulse)	Zero cross signal
	4	FAN	O	0/24 V DC	Left cooling fan motor: On/Off
	5	HEATN	O	0/3.3 V DC	Fuser heater lamp: On/Off
	6	SLEEP	O	0/3.3 V DC	Sleep mode signal: On/Off
	7	MHVDR	O	0/3.3 V DC	Main charger output signal: On/Off
	8	RTHVDR	O	0/3.3 V DC	Transfer (reverse) bias output signal: On/Off
	9	PSEL1	O	0/3.3 V DC	Transfer (reverse) bias control signal: On/Off
	10	HVCLK	O	0/3.3 V DC (pulse)	Developing bias clock signal
	11	REGN	I	0/3.3 V DC	Registration sensor: On/Off
	12	TCNT	O	PWM	Transfer current control signal
	13	MCNT	O	PWM	Main charger output control signal
	14	THVDR	O	0/3.3 V DC	Transfer bias output signal: On/Off
	15	CASE	I	Analog	Cassette switch: On/Off
	16	THERM	I	Analog	Fuser thermistor detection voltage
	17	+24V3	O	24 V DC	24 V DC power source
	18	SGND	-	-	Ground
YC312 Connected to the waste toner sensor	1	+3.3V1	O	3.3 V DC	3.3 V DC power source
	2	TNFULL	I	0/3.3 V DC	Waste toner full detection signal
	3	SGND	-	-	Ground
YC313 Connected to the high voltage PWB	1	+24V2	I	24 V DC	24 V DC power source
	2	+24V2	I	24 V DC	24 V DC power source
	3	PGND	-	-	Ground
	4	PGND	-	-	Ground
YC314 Connected to the toner sensor	1	+3.3V1	O	3.3 V DC	3.3 V DC power source
	2	EMPTY	I	0/3.3 V DC	Toner quantity detection signal
	3	SGND	-	-	Ground
YC315 Connected to the right cooling fan motor	1	+24V1	O	24 V DC	24 V DC power source
	2	FAN	O	0/24 V DC	Right cooling fan motor: On/Off
YC316 Connected to the eraser lamp	1	ERASER	O	0/24 V DC	Eraser lamp: On/Off
	2	ERASRW	O	24 V DC	24 V DC power source
YC317 Connected to the duplex sole- noid	1	DUDR1	O	0/24 V DC	Duplex solenoid (activate): On/Off
	2	COMMON	O	24 V DC	24 V DC power source
	3	DUDR2	O	0/24 V DC	Duplex solenoid (return): On/Off


Connector	Pin No.	Signal	I/O	Voltage	Description
YC318	1	+24V3	O	24 V DC	24 V DC power source
Connected to the optional paper feeder 1	2	PGND	-	-	Ground
	3	PFSI	I	0/3.3 V DC (pulse)	Serial communication data input signal
	4	PFSO	O	0/3.3 V DC (pulse)	Serial communication data output signal
	5	PFSEL	O	0/3.3 V DC	Paper feeder selection signal
	6	+3.3V1	O	3.3 V DC	3.3 V DC power source
YC319	1	+24V3	O	24 V DC	24 V DC power source
Connected to the laser scanner unit	2	PGND	-	-	Ground
	3	PLGDRN	O	0/3.3 V DC	Polygon motor: On/Off
	4	PLGRDY	I	0/3.3 V DC	Polygon motor ready signal
	5	PLGCLK	O	0/3.3 V DC (pulse)	Polygon motor clock signal
	6	PDN	I	0/3.3 V DC (pulse)	Horizontal synchronizing signal
	7	SGND	-	-	Ground
	8	VDON	O	0/3.3 V DC (pulse)	Video data signal (+)
	9	VDOP	O	0/3.3 V DC (pulse)	Video data signal (-)
	10	OUTPEN	O	0/3.3 V DC	Laser output enable signal
	11	SAMPLEN	O	0/3.3 V DC	Sample/hold timing switching signal
	12	+3.3V1	O	3.3 V DC	3.3 V DC power source


This page is intentionally left blank.



### 2-4-1 Appendixes

**(1) Wiring diagraml**

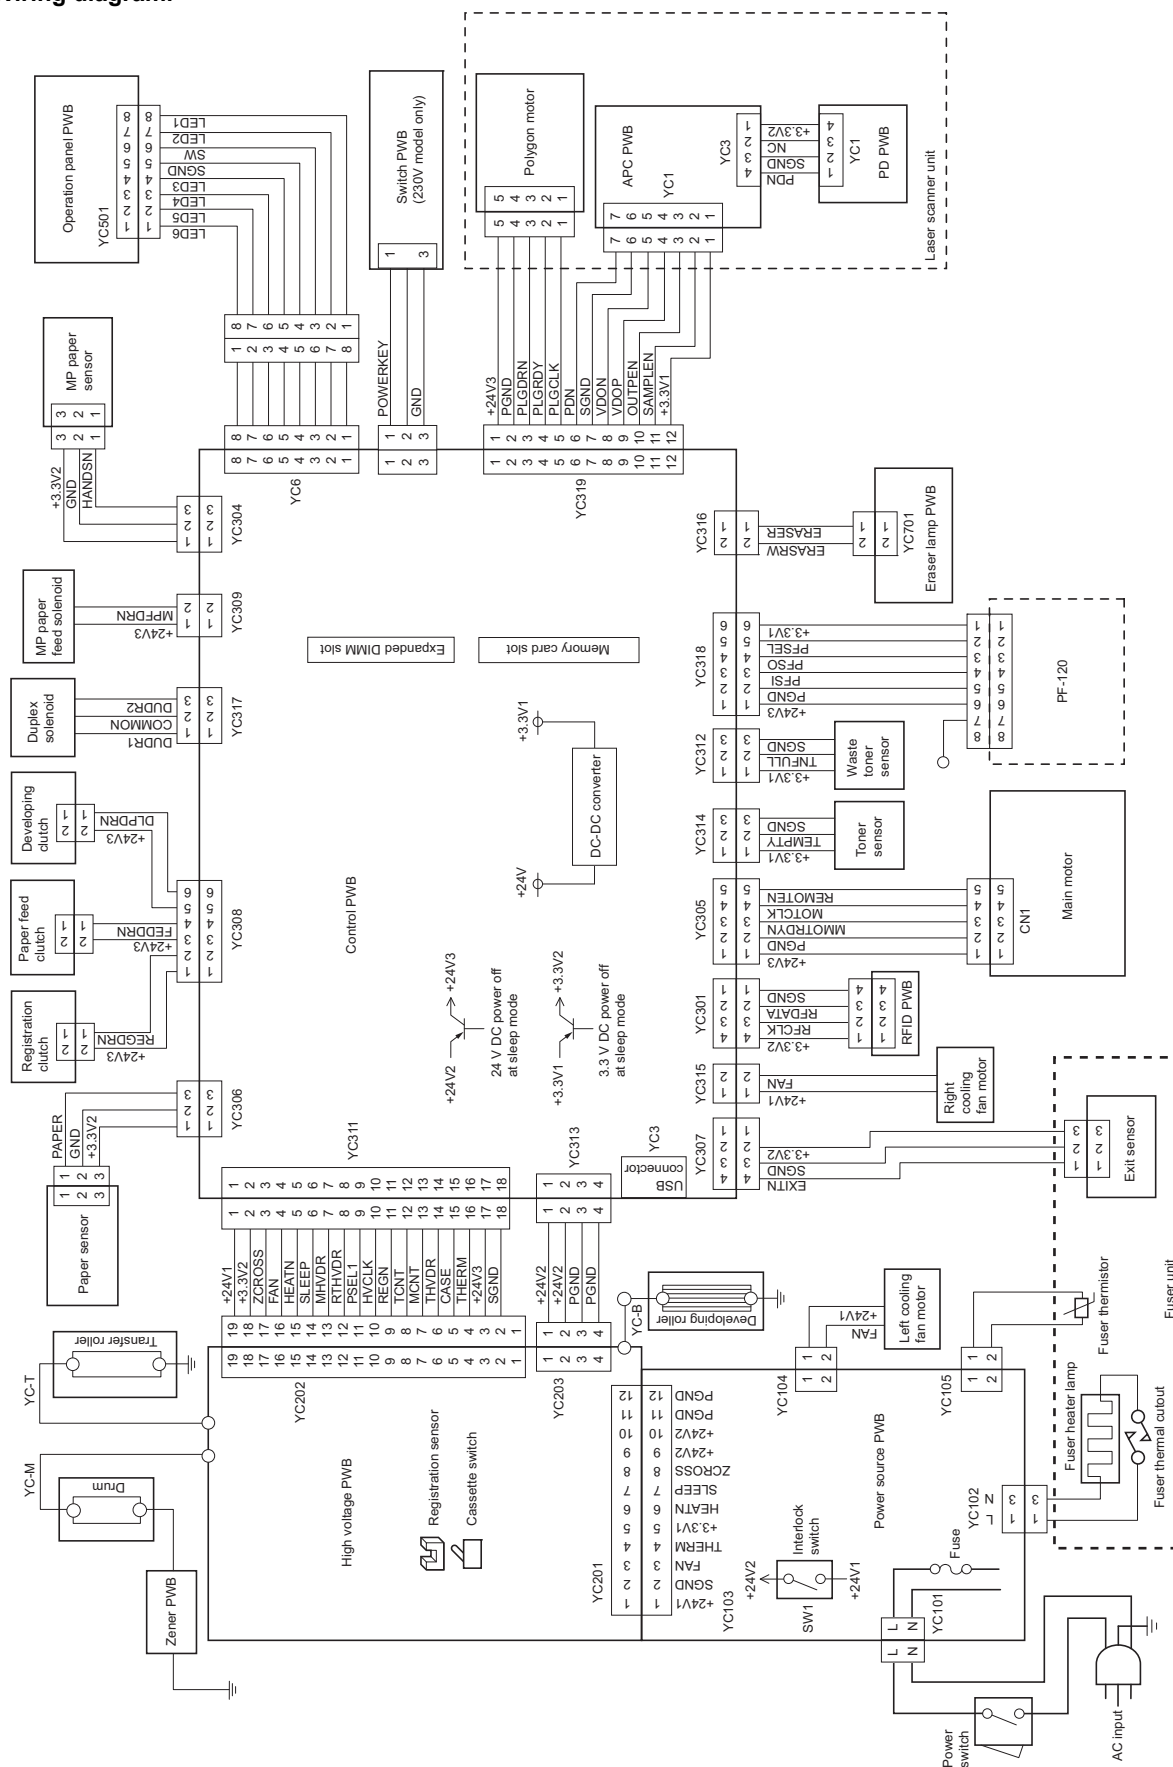
 


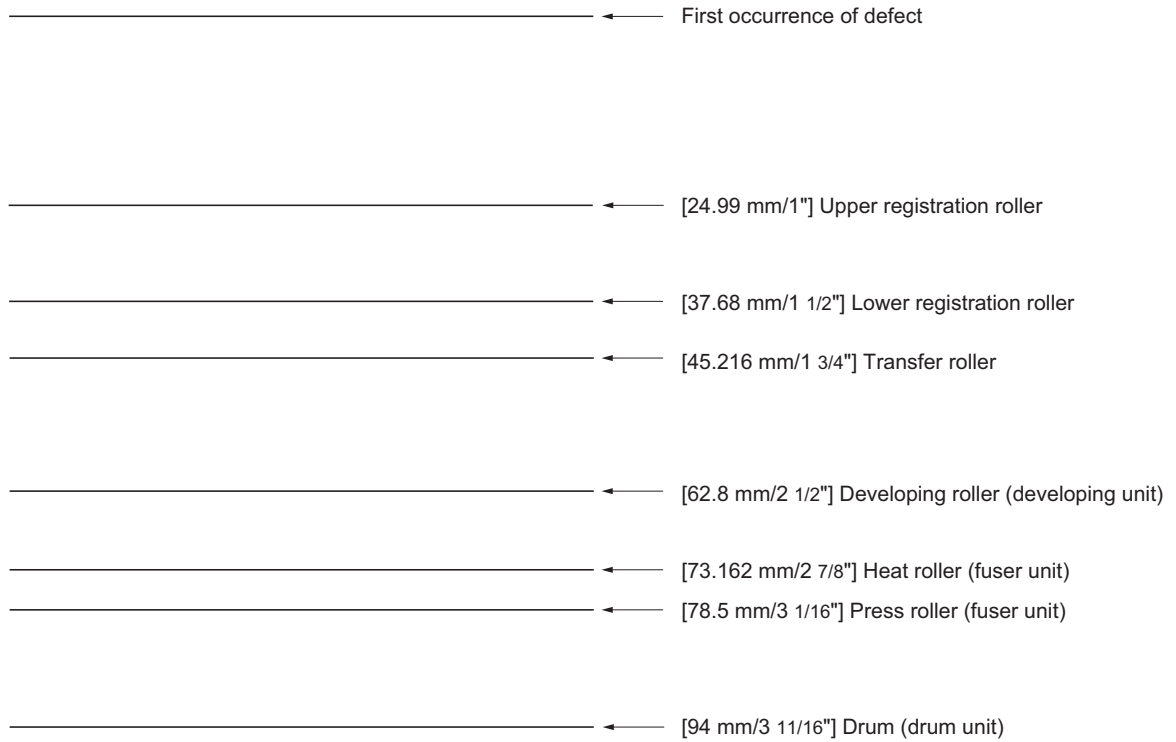





















**(2) Repetitive defects gauge**

**(3) Self diagnostic codes indication (Animation)**

Click the icon  to play the animation of the indicator combinations.

To play the animation, you have to install Adobe Flash Player and Adobe Reader (Version 6.01 or more) to your PC.  
If the animation is not displayed, you should get the latest version from Adobe site (<http://www.adobe.com/downloads/>).

Indication	Contents
 0 1 5 0 	Control PWB EEPROM error
 0 4 2 0 	Paper feeder communication error
 2 0 0 0 	Main motor error
 2 6 1 0 	PF paper feed motor error (Paper feeder 1)
 2 6 2 0 	PF paper feed motor error (Paper feeder 2)
 4 0 0 0 	Polygon motor (laser scanner unit) error
 6 0 0 0 	Broken fuser heater lamp wire
 6 0 2 0 	Abnormally high fuser thermistor temperature

Indication	Contents
 6 0 3 0 	Broken fuser thermistor wire
 6 4 0 0 	Zero cross signal error
 F 0 1 0 	Control PWB checksum error
 F 0 2 0 	Control PWB RAM checksum error
 F 0 3 0 	Control PWB general failure
 F 0 4 0 	Control PWB engine communication error
 F 0 5 0 	Control PWB engine checksum error
 F 2 2 6 	Control PWB video data control error

**(4) Maintenance parts list****Low model**

<b>Maintenance part name</b>		<b>Part No.</b>	<b>Alternative part No.</b>
<b>Name used in service manual</b>	<b>Name used in parts list</b>		
Maintenance kit (120 V specifications)	MK-182/MAINTENANCE KIT DK-150 DV-162(U)	1702PG7US0	072PG7US
Maintenance kit (230 V specifications)	MK-180/MAINTENANCE KIT DK-150 DV-160(E)	1702PG8NL0	072PG8NL
Maintenance kit (240 V specifications)	MK-184/MAINTENANCE KIT DK-150 DV-164(AO)	1702PG8AS0	072PG8AS

**High model**

<b>Maintenance part name</b>		<b>Part No.</b>	<b>Alternative part No.</b>
<b>Name used in service manual</b>	<b>Name used in parts list</b>		
Maintenance kit (120 V specifications)	MK-172/MAINTENANCE KIT DK-170 DV-172(U)	1702LZ7US0	072LZ7US
Maintenance kit (230 V specifications)	MK-170/MAINTENANCE KIT DK-170 DV-170(E)	1702LZ8NL0	072LZ8NL
Maintenance kit (240 V specifications)	MK-174/MAINTENANCE KIT DK-170 DV-174(AO)	1702LZ8AS0	072LZ8AS

This page is intentionally left blank.

**KYOCERA Document Solutions America, Inc.****Headquarters**

225 Sand Road,  
Fairfield, New Jersey 07004-0008, USA  
Phone: +1-973-808-8444  
Fax: +1-973-882-6000

**Latin America**

8240 NW 52nd Terrace Dawson Building, Suite 100  
Miami, Florida 33166, USA  
Phone: +1-305-421-6640  
Fax: +1-305-421-6666

**KYOCERA Document Solutions Canada, Ltd.**

6120 Kestrel Rd., Mississauga, ON L5T 1S8,  
Canada  
Phone: +1-905-670-4425  
Fax: +1-905-670-8116

**KYOCERA Document Solutions  
Mexico, S.A. de C.V.**

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco  
Chapultepec, Delegacion Miguel Hidalgo,  
Distrito Federal, C.P. 11560, México  
Phone: +52-555-383-2741  
Fax: +52-555-383-7804

**KYOCERA Document Solutions Brazil, Ltda.**

Av. Tambore, 1180 Mod.B-09 CEP 06460-000  
Tambore-Barueri-SP, Brazil  
Phone: +55-11-4195-8496  
Fax: +55-11-4195-6167

**KYOCERA Document Solutions  
Australia Pty. Ltd.**

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,  
Australia  
Phone: +61-2-9888-9999  
Fax: +61-2-9888-9588

**KYOCERA Document Solutions  
New Zealand Ltd.**

1-3 Parkhead Place, Albany, Auckland 1330,  
New Zealand  
Phone: +64-9-415-4517  
Fax: +64-9-415-4597

**KYOCERA Document Solutions Asia Limited**

16/F., Mita Centre, 552-566, Castle Peak Road  
Tsuenwan, NT, Hong Kong  
Phone: +852-2610-2181  
Fax: +852-2610-2063

**KYOCERA Document Solutions  
(China) Corporation**

8F, No. 288 Nanjing Road West, Huangpu District,  
Shanghai, 200003, China  
Phone: +86-21-5301-1777  
Fax: +86-21-5302-8300

**KYOCERA Document Solutions  
(Thailand) Corp., Ltd.**

335 Ratchadapisek Road, Bangsue, Bangkok 10800,  
Thailand  
Phone: +66-2-586-0333  
Fax: +66-2-586-0278

**KYOCERA Document Solutions  
Singapore Pte. Ltd.**

12 Tai Seng Street #04-01A,  
Luxasia Building, Singapore 534118  
Phone: +65-6741-8733  
Fax: +65-6748-3788

**KYOCERA Document Solutions  
Hong Kong Limited**

16/F., Mita Centre, 552-566, Castle Peak Road  
Tsuenwan, NT, Hong Kong  
Phone: +852-3582-4000  
Fax: +852-3185-1399

**KYOCERA Document Solutions  
Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd.,  
Zhongshan Dist., Taipei 104, Taiwan R.O.C.  
Phone: +886-2-2507-6709  
Fax: +886-2-2507-8432

**KYOCERA Document Solutions Korea Co., Ltd.**

18F, Kangnam bldg, 1321-1,  
Seocho-Dong, Seocho-Gu, Seoul, Korea  
Phone: +822-6933-4050  
Fax: +822-747-0084

**KYOCERA Document Solutions  
India Private Limited**

First Floor, ORCHID CENTRE  
Sector-53, Golf Course Road, Gurgaon 122 002,  
India  
Phone: +91-0124-4671000  
Fax: +91-0124-4671001

**KYOCERA Document Solutions Europe B.V.**

Bloemlaan 4, 2132 NP Hoofddorp,  
The Netherlands  
Phone: +31-20-654-0000  
Fax: +31-20-653-1256

**KYOCERA Document Solutions Nederland B.V.**

Beechavenue 25, 1119 RA Schiphol-Rijk,  
The Netherlands  
Phone: +31-20-5877200  
Fax: +31-20-5877260

**KYOCERA Document Solutions (U.K.) Limited**

Eldon Court, 75-77 London Road,  
Reading, Berkshire RG1 5BS,  
United Kingdom  
Phone: +44-118-931-1500  
Fax: +44-118-931-1108

**KYOCERA Document Solutions Italia S.p.A.**

Via Verdi, 89/91 20063 Cernusco s/N.(MI),  
Italy  
Phone: +39-02-921791  
Fax: +39-02-92179-600

**KYOCERA Document Solutions Belgium N.V.**

Sint-Martinusweg 199-201 1930 Zaventem,  
Belgium  
Phone: +32-2-7209270  
Fax: +32-2-7208748

**KYOCERA Document Solutions France S.A.S.**

Espace Technologique de St Aubin  
Route de l'Orme 91195 Gif-sur-Yvette CEDEX,  
France  
Phone: +33-1-69852600  
Fax: +33-1-69853409

**KYOCERA Document Solutions Espana, S.A.**

Edificio Kyocera, Avda. de Manacor No.2,  
28290 Las Matas (Madrid), Spain  
Phone: +34-91-6318392  
Fax: +34-91-6318219

**KYOCERA Document Solutions Finland Oy**

Atomitie 5C, 00370 Helsinki,  
Finland  
Phone: +358-9-47805200  
Fax: +358-9-47805390

**KYOCERA Document Solutions****Europe B.V., Amsterdam (NL) Zürich Branch**

Hohlstrasse 614, 8048 Zürich,  
Switzerland  
Phone: +41-44-9084949  
Fax: +41-44-9084950

**KYOCERA Document Solutions****Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,  
Germany  
Phone: +49-2159-9180  
Fax: +49-2159-918100

**KYOCERA Document Solutions Austria GmbH**

Eduard-Kittenberger-Gasse 95, 1230 Vienna,  
Austria  
Phone: +43-1-863380  
Fax: +43-1-86338-400

**KYOCERA Document Solutions Nordic AB**

Esbogatan 16B 164 75 Kista, Sweden  
Phone: +46-8-546-550-00  
Fax: +46-8-546-550-10

**KYOCERA Document Solutions Norge Nuf**

Postboks 150 Oppsal, 0619 Oslo,  
Norway  
Phone: +47-22-62-73-00  
Fax: +47-22-62-72-00

**KYOCERA Document Solutions Danmark A/S**

Ejby Industrivej 60, DK-2600 Glostrup,  
Denmark  
Phone: +45-70223880  
Fax: +45-45765850

**KYOCERA Document Solutions Portugal Lda.**

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,  
Portugal  
Phone: +351-21-843-6780  
Fax: +351-21-849-3312

**KYOCERA Document Solutions****South Africa (Pty) Ltd.**

KYOCERA House, Hertford Office Park,  
90 Bekker Road (Cnr. Allandale), Midrand, South Africa.  
Phone: +27-11-540-2600  
Fax: +27-11-466-3050

**KYOCERA Document Solutions Russia LLC**

Botanichesky pereulok 5, Moscow, 129090,  
Russia  
Phone: +7(495)741-0004  
Fax: +7(495)741-0018

**KYOCERA Document Solutions Middle East**

Dubai Internet City, Bldg. 17,  
Office 157 P.O. Box 500817, Dubai,  
United Arab Emirates  
Phone: +971-04-433-0412

**KYOCERA Document Solutions Inc.**

2-28, 1-chome, Tamatsukuri, Chuo-ku  
Osaka 540-8585, Japan  
Phone: +81-6-6764-3555  
<http://www.kyoceradocumentsolutions.com>