

© ELECTROLUX HOME PRODUCTS ITALY S.p.A. Publication no.
Spares Operations Italy
Corso Lino Zanussi, 30
I - 33080 PORCIA /PN (ITALY)

599 35 90-23

Fax +39 0434 394096

EN

Edition: 2006-02

**Dishwasher with
EDW1100 electronic
control system
(Functionalities)**

“DIVA”

**Production:
ZM - Solaro (IT)**

CONTENTS

1	Purpose of this manual	5
2	PRECAUTIONS	5
3	GENERAL CHARACTERISTICS	5
4	AESTHETIC CHARACTERISTICS:	6
4.1	CONTROL PANEL	7
4.1.1	Control panel	7
4.1.2	ON / OFF button (S0)	7
4.1.3	Programme/Option buttons (S1÷S6)	7
4.1.4	Programme indicator LED	7
4.1.5	Indicator LEDs	8
4.1.6	Display	8
4.2	Options	8
4.2.1	“3 in 1 Tablet”	8
4.2.2	Extra rinse (rinse +)	8
4.2.3	“1/2 load”	8
4.2.4	“Sanitize”	8
4.2.5	Delayed start	9
4.3	Cancelling a programme	10
4.3.1	Reset	10
4.3.2	Interruption of a programme (pause)	10
4.4	Power failure	10
4.5	Sequence of operations	11
5	HYDRAULIC CIRCUIT	12
6	ELECTRICAL COMPONENTS AND THEIR FUNCTIONS	13
6.1	EDW1100 Electronic control system	13
6.1.1	Functions of the circuit board	13
6.1.2	Memory in the control system	13
6.2	Specifications for actuators and sensors	14
6.2.1	Components	14
6.2.2	Sensors	14
6.3	Power supply and programme selection	15
6.4	Fill circuit	16
6.4.1	Level and anti-overflow pressure switch	16
6.4.2	Fill system	16
6.4.3	Anti-flooding device	16
6.4.4	Intervention of the anti-overflow system	16
6.5	Control of water fill phase	17
6.5.1	Static fill	17
6.5.2	Dynamic fill	17
6.5.3	Level stability control	17
6.6	Water fill time	17
6.6.1	Static fill time	17
6.6.2	Dynamic fill time	17
6.6.3	Power supply interruption during water fill	17
6.7	Level stability during washing	18
6.8	Washing system	18
6.8.1	Control of the washing pump	18
6.9	Heating	19
6.10	Integrated detergent dispenser	19
6.11	Disactivating the rinse-aid function	20
6.12	Drain	20
6.13	Regeneration system	21
6.14	Resin washing	21
6.15	Regeneration levels	22
6.15.1	Setting the regeneration level	22
6.15.2	“Blending” function	22
6.15.3	Table of regeneration values	23
7	Drying	23
7.1.1	“Turbo-dry” drying	23
8	Automatic cycle (only on some models)	24
8.1	Turbidity sensor	24
8.1.1	Calculating the degree of soiling	24
8.1.2	Determination of the load	24
8.2	Automatic Programme	24
9	Alarms	25

9.1	Table of alarms	25
10	Diagnostics mode / Options.....	27
10.1	Accessing diagnostics mode	27
10.2	Reading the alarms and activating the individual components	27
10.3	Cancelling alarm codes from memory / Testing the LEDs	28
10.4	Functional testing cycle	28
10.4.1	Selecting the cycle	28
10.4.2	Cycle phases	28
10.5	Options available to Service Engineers.....	29
10.5.1	Selecting the extra cold rinse option	29
10.5.2	Disabling pulse washing	29
10.6	Exiting diagnostics mode	29
11	ELECTRICAL FUNCTIONS.....	30
11.1	Electrical circuit diagram.....	30
11.2	Basic circuit diagram.....	31
11.2.1	Key to circuit diagram	31
12	Table of programmes.....	32
12.1	60cm Dishwashers	32
12.2	45cm Dishwashers	33
14	Checking the efficiency of the components	34
14.1	Measurement points on the board wiring connector.....	34
15	QUICK GUIDE TO THE SPECIAL FUNCTIONS	35

1 Purpose of this manual

The purpose of this Service Manual is to provide Service Engineers, who already have the basic knowledge necessary to repair household dishwashers, with technical information regarding dishwashers featuring the EDW1100 electronic control system. These appliances are manufactured at Solaro (Italy).

The EDW1100 control system consists of a main circuit board and a control/display board. Both boards are housed in a single plastic container. Some versions feature a display with only one digit.

This Manual describes:

- General characteristics
- Control panel and programmes
- Technical characteristics
- Guide to diagnostics

For more detailed information regarding the hydraulic circuits and the structural characteristics of the appliances, refer to the Service Manual for presentation of the "DIVA" structure 599 35 55-25.

As regards the electric/electronic diagrams for a specific model please refer to spare parts list.

2 PRECAUTIONS




- **Electrical appliances must be serviced only by qualified Service Engineers.**
- **Always remove the plug from the power socket before touching internal components.**

3 GENERAL CHARACTERISTICS


Power supply	⇒ 230 V / 50 Hz (limits 187÷254 V)
Total power absorption	⇒ 2300 W
Mains water supply	⇒ Pressure Min. / Max. 5 – 80 N/cm ²
Capacity	⇒ 9/12 place settings
Consumption (Energy Label):	
↳ Water	⇒ Lt. 14
↳ Energy	⇒ KWh 0,8
↳ Duration of Cycle	⇒ Min. 170
Controls	
- ON/OFF	⇒ Vertical on upper edge of the door
- Selection of programmes/options	⇒ Two-pole switch (separate from the electronic board)
- Displaying	⇒ Button-actoned (min. 3, max. 6)
	⇒ Display with one digit and/or LED
Washing system	⇒ Combined / Pulse
Control of water level	⇒ Pressure switch + Software
Water heating	⇒ Tube-enclosed heating element
Temperature control	⇒ NTC temperature sensor
Type of drying	⇒ Active / Turbo
Safety devices / Alarms	⇒ Total protection (hydraulic + Software)

4 AESTHETIC CHARACTERISTICS:


Control panel with the maximum configuration: - VERTICAL Version

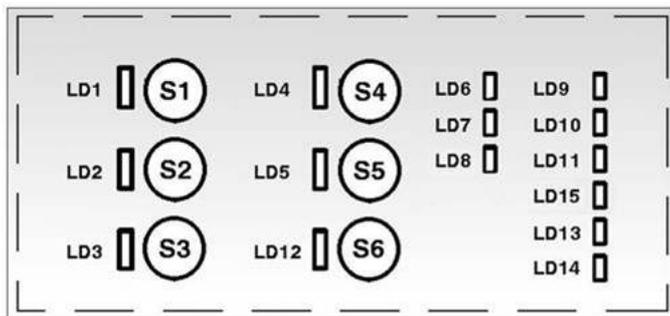


Control panel with the maximum configuration: - HORIZONTAL Version

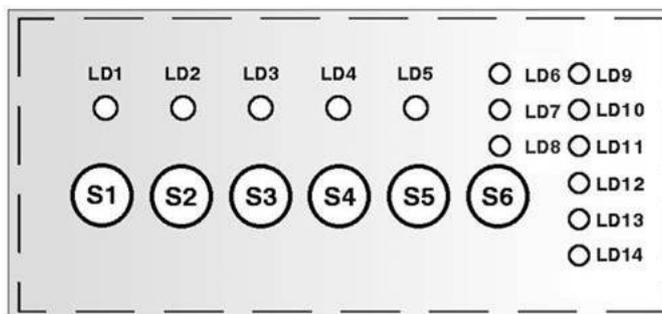

Control panel with the maximum configuration with display: - VERTICAL Version

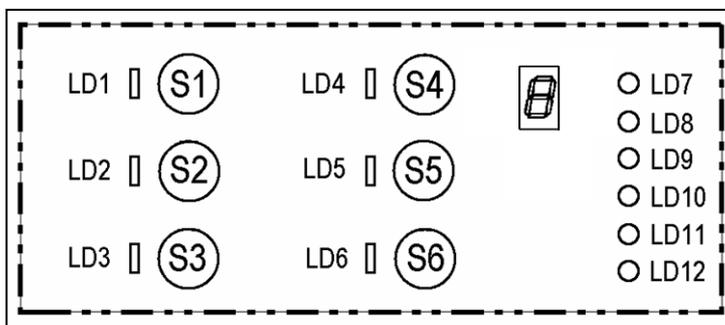

Control panel with the maximum configuration with display: - HORIZONTAL Version

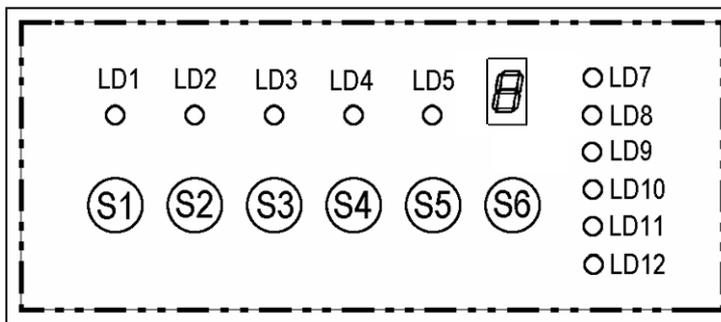

4.1 CONTROL PANEL

4.1.1 Control panel

The configuration of the control panel depends on the following:

- Number of programme selection buttons (from a minimum of 3 to a maximum of 6)
- Number of LEDs or presence of the one-digit display

[S0] - ON/OFF button

[S1] ... ⇒ [S3] - PROGRAMME SELECTION buttons

[S4] ... ⇒ [S6] – PROGRAMME SELECTION and/or OPTIONS buttons

[LD1] ... ⇒ [LD3] - “PROGRAMMES” INDICATORS Leds

[LD4] [LD5] [LD12] - “PROGRAMMES and/or OPTIONS” INDICATORS Leds

[LD6] ... ⇒ [LD8] - “DELAYED START TIME” INDICATORS Leds

[LD9] ... ⇒ [LD11] - “CYCLE PHASES” INDICATORS Leds ([LD7] ⇒ [LD9] in the version with 1 digit)

[LD13] [LD14] - “SALT / RINSE-AID” INDICATORS Leds

4.1.2 ON / OFF button (S0)

The ON/OFF button is featured on all models in the range, and is used to switch the appliance on and off. Switching off does not cancel the programme being executed.


4.1.3 Programme/Option buttons (S1÷S6)

These buttons are used to select the washing programme:

- Press one of the buttons to select a washing programme
- Within 3 seconds after selecting the programme, the user can enter the desired option(s) or select the delayed-start function (if featured)
- A specific LED is associated with each button
- The dishwashers may have from a minimum of 3 to a maximum of 6 buttons
- The following options may be featured:
 - *Delayed-start (3/6/9 hours in the versions without display and from 1 to 9 hours in the versions with display)*
 - *Half-load*
 - *3 in 1 tablet*
 - *Extra rinse*
 - *Sanitize*
- Buttons **S1**, **S2**, **S3** are featured on all models; these are also used for certain Servicing functions

The functions of the various buttons depend exclusively on the software configuration of each appliance. For more detailed information, refer to the table of programmes relative to the specific model.

4.1.4 Programme indicator LED

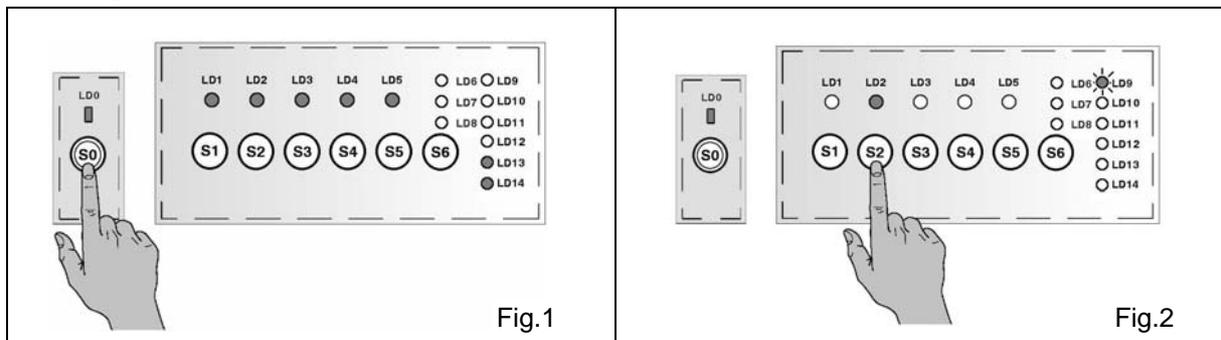

1. When the appliance is switched on with S0 button (fig.1) the pre-selection phase is indicated
2. Pushing a programme button, the corresponding Led remains lit and, while the other switch off, the Led of the current phase flashes (fig.2).

4.1.5 Indicator LEDs

The indicator LEDs provide the user with the following information:

- **End of cycle:** this LED is featured on all models.
- **Salt:** indicates that the salt reservoir is empty. If the level of regeneration is set to “1” (no regeneration), this LED remains unlit at all times.
- **Rinse-aid:** indicates that the rinse-aid reservoir is empty.
- **Delay time:** LEDs LD7, LD8, LD9 provide a sequential indication of the time to elapse before a delayed start (3-6-9 hours)

4.1.6 Display

The one-digit display, if featured, shows only the delay time at the start: at every pressure of the corresponding button the time increases by one hour till max. 9 hours.

The functions of the various LEDs depend on the software configuration of each appliance.

4.2 Options

4.2.1 “3 in 1 Tablet”

This option can be selected by pressing the corresponding button, and remains in memory until the same button is pressed again. This option modifies the phases of the programme in order to optimize performance when “3 in 1” detergent tablets are used:

- ↪ variation of the duration of the programme and the temperatures required to dissolve the detergent tablets.
- ↪ reduction of water exchange (partial drain phases)
- ↪ exclusion of introduction of rinse-aid
- ↪ exclusion of regeneration / resin washing

4.2.2 Extra rinse (rinse +)

This option may be selected temporarily by pressing the button (if featured), or in “Service” mode. If this option is set by the service engineer, it remains in memory until deactivated (see relative section).

- ↪ This option adds one cold rinse (with pulse washing) with a duration of about 5 minutes.

4.2.3 “1/2 load”

The 1/2 load option optimizes the washing cycle when only a small load is placed in the appliance.

• 1/2 load button

When this button is pressed, certain parameters of the selected washing cycle are modified:

- ↪ Exclusion of Pre-wash (if featured)
- ↪ Reduction of the washing temperature
- ↪ Reduction of the duration of the programme

• Automatic ½ load

When this button is not featured on the control panel, certain programmes may feature automatic detection of the half load. This system measures variations in the temperature during the initial heating phase. The temperature and the duration of the wash are both reduced.

This option is not available in the following cycles: “Intensive”, “Short 30 minutes”, “Soak”, “Heating plates” and “Glassware”.

4.2.4 “Sanitize”

This is a special option used to sanitize the dishes/cutlery. However, it is NOT compatible with the “Glassware” programme.


- ↪ During the final rinse, the temperature is maintained at 68°C for 10 minutes.
- ↪ If used together with the SOAK option, the system performs a special sanitizing programme which lasts approximately 46 minutes (1 hot rinse followed by 10 minutes at a constant temperature of 68°C)

4.2.5 Delayed start


To select the delayed-start time:

1. Press button **S0** to switch on the appliance.
2. Press a button to select the desired programme: the corresponding LED lights: for ex. S2, the relative LED lights up.
3. Press the button repeatedly to select the delayed-start time:
 - Version with LED:
 - The Led LD8 lights to indicate that the function is active and that a 3 hour time has been set (LD8 ⇨ 3; LD7 ⇨ 6; LD6 ⇨ 9 ore).
 - Press the button once again to cancel the delayed-start time: the LEDs LD6÷LD8 switch off.
 - The delayed-start countdown begins when the door is closed:
 - ⇒ When the countdown is at 9 hours, LED LD6 remains lit.
 - ⇒ When the countdown reaches 6 hours, LED LD7 remains lit.
 - ⇒ When the countdown reached 3 hours, LED LD8 remains lit.
 - ⇒ When the countdown time has elapsed (0 hours), LEDs LD6 – LD8 switch off and the cycle starts.
 - Version with display:
 - The display lights up and shows “1” to indicate that the function is active and that a 1 hour time has been set.
 - Pressing the button once again the time increases every hour till max. 9 hours and then it resets.
 - The countdown starts when the door is closed: the display indicates the hours till “0” and the programme starts.

Version with Led

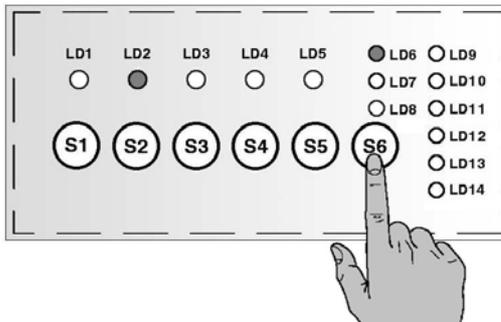

Version with Display

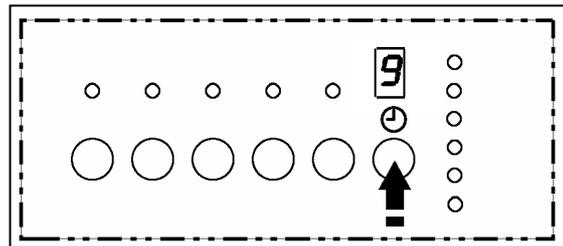


4.3 Cancelling a programme

4.3.1 Reset

To cancel a programme that has already started:

1. Open the door carefully and press buttons **S2 - S3** together for approximately 2 seconds.
2. The salt and rinse-aid LEDs light: the programme is cancelled and the appliance is in pre-selection mode.
3. Set the new cycle.

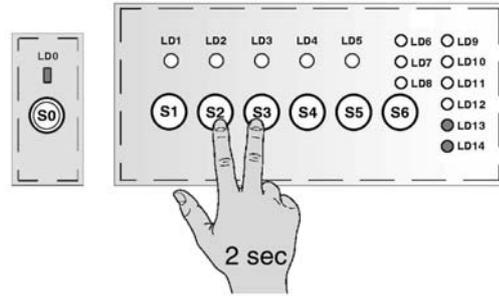

4.3.2 Interruption of a programme (pause)

- ✱ If the button [**S0**] is pressed the power supply is cut and the appliance switches off.
 - ↳ By pushing the button [**S0**] again, the appliance starts and the cycle starts from the point at which it was interrupted.
- ✱ If the door is opened, the appliance is powered (the power loads are deactivated).
 - ↳ The LED [**LD...**] of the selected programme and the Option LED remain lit.
 - ↳ Closing the door again the cycle restarts with a little delay from the point at which it was interrupted.

Important! If the appliance is switched off or if the door is opened for more than 30 seconds during the drying phase, the cycle is considered to have been terminated after the regeneration phase; when the appliance is switched on again, it returns to programme selection mode.

4.4 Power failure

The Power Failure function maintains the information relative to the cycle status even in the even of a power outage; when the power supply is restored, the cycle resumes from the point at which it was interrupted. If the power failure occurs during the drying phase, the cycle is considered to have been terminated after the regeneration phase.


The power failure condition has been defined as follows:

- ↳ During a Power Fail all the loads are off in order to enable, through the energy stored in the power capacitor of the control board, to save the data in the EEPROM and therefore when the power is restored the cycle can restart from the point at which it was interrupted.

4.5 Sequence of operations

SELECTING THE CYCLE	<p>1. Press S0 to switch the appliance on.</p> <p>↳ All the LEDs corresponding to the programme/option buttons light.</p>	
	<p>2. Press the button corresponding to the desired programme.</p> <p>↳ The corresponding LED remains lit and the relative cycle phase LED starts flashing.</p>	
	<p>3. If desired, select the delayed-start function or other options (if featured).</p>	
START	<p>4. The settings entered can be modified before closing the door.</p>	
EXECUTION OF THE CYCLE	<p>5. During the execution of the cycle, the relative LED remains lit and the LED of the current phase flashes.</p>	
	<p>6. To interrupt the current programme: ↳ Open the door and, if necessary, press S0 to switch off the appliance. ↳ To re-start the appliance, press S0 again and re-close the door.</p>	
	<p>7. To cancel the current programme: ↳ Press S2 – S3 buttons at the same time for about 2 seconds. ↳ The salt and rinse-aid LEDs light. ↳ Press the desired programme button again.</p>	
END	<p>8. At the end of the programme: ↳ The END OF CYCLE LD11 LED lights; to switch off the LED, open and re-close the door.</p>	
	<p>9. Press S0 to switch the appliance off.</p>	

5 HYDRAULIC CIRCUIT

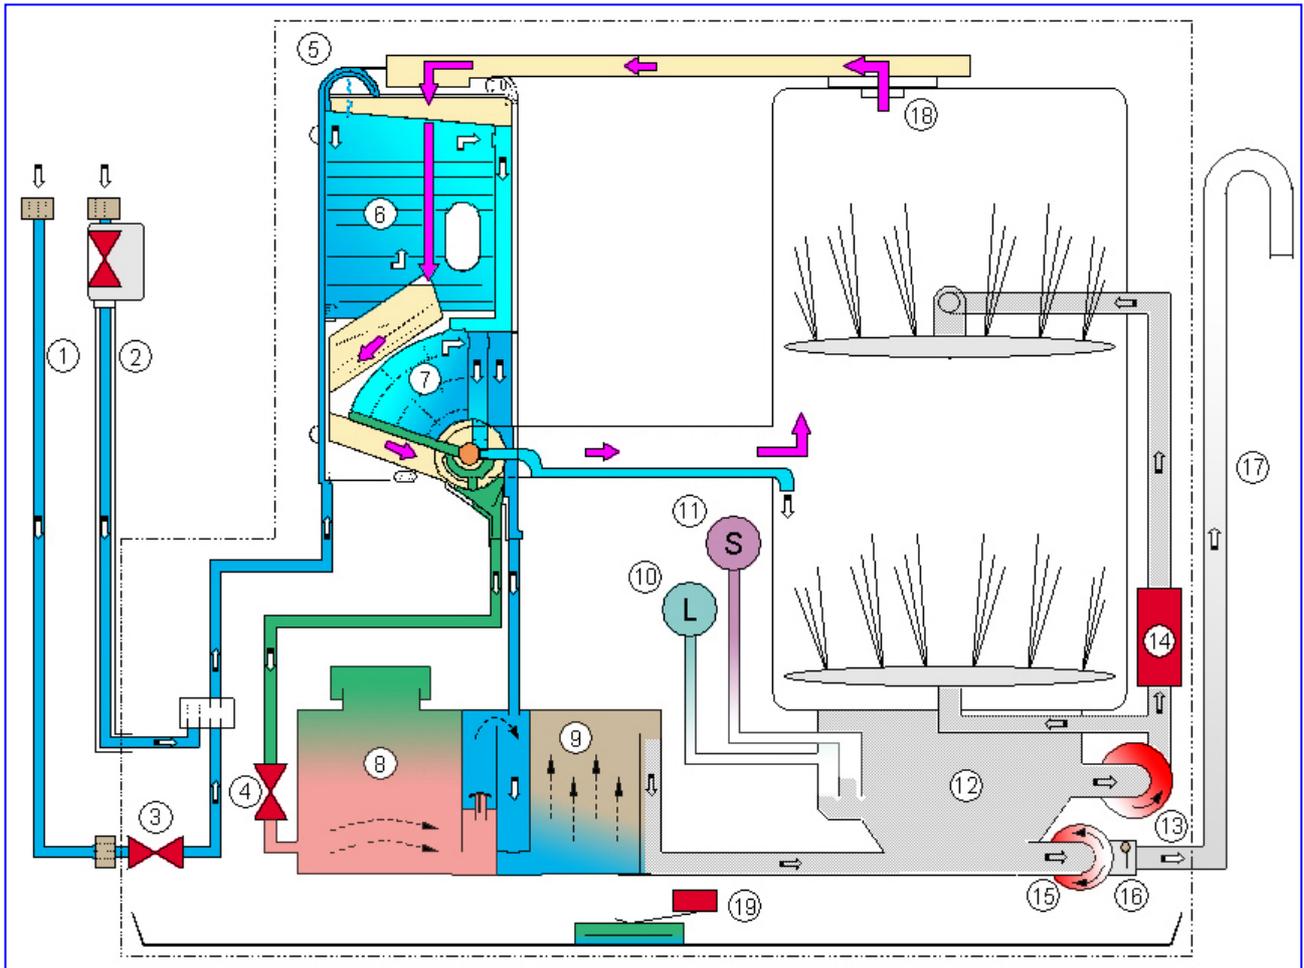




KEY

1 - Fill hose	11 - Anti-overflow pressure switch
2 - Fill hose with "Aquacontrol" device	12 - Sump assembly
3 - Fill solenoid	13 - Washing pump
4 - Regeneration solenoid	14 - Tube-enclosed heating element
5 - Air-Break	15 - Drain pump
6 - Steam condenser	16 - Non-return valve
7 - Regeneration chamber	17 - Drain hose
8 - Salt reservoir	18 - Drying Duct / Fan
9 - Resin reservoir	19 - Anti-flooding device
10 - Level pressure switch	


6 ELECTRICAL COMPONENTS AND THEIR FUNCTIONS

6.1 EDW1100 Electronic control system

The EDW1100 control system consists of a main circuit board and a control/display board. Both boards are housed in a plastic container.

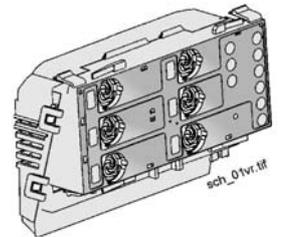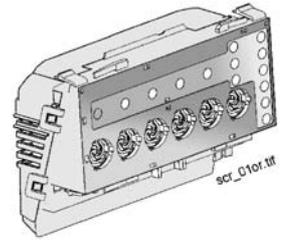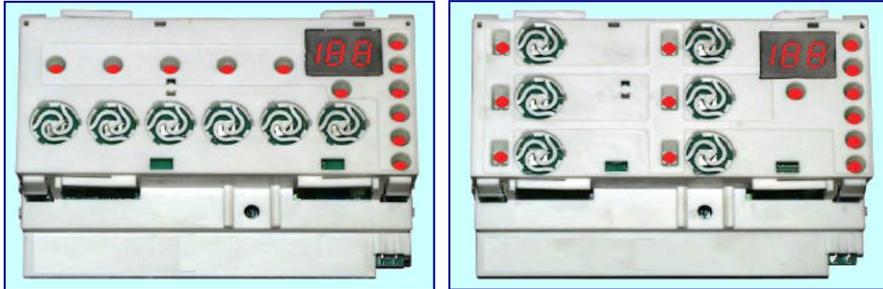


6.1.1 Functions of the circuit board

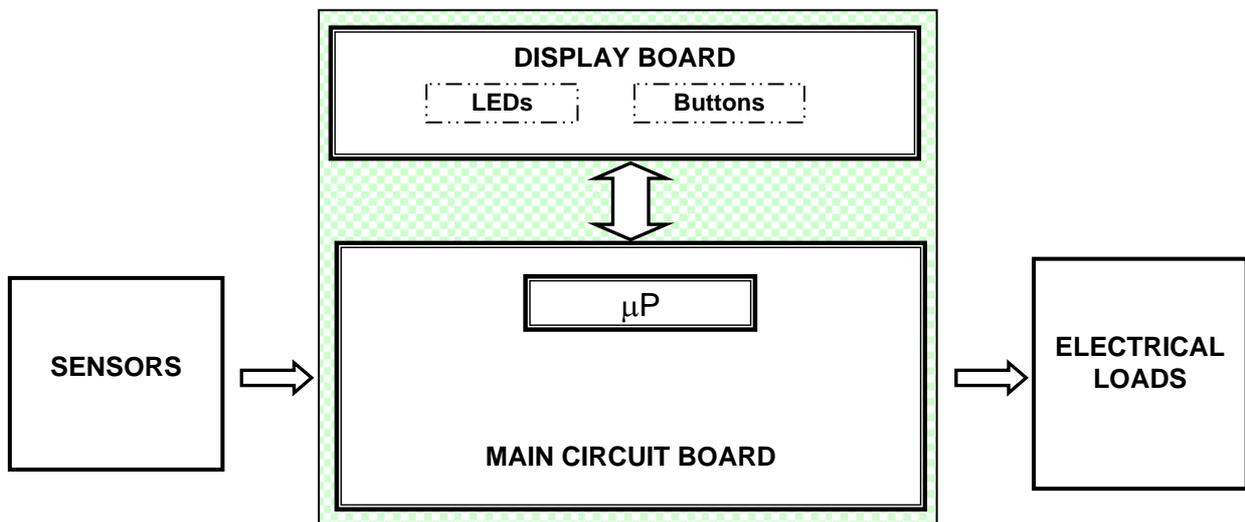

- ⇒ The circuit board receives signals relative to the cycle settings via the control/display board. The buttons and LEDs are also mounted on this board.
- ⇒ The board also powers all the electrical components (solenoid valves, washing pump, detergent/rinse-aid dispenser, drain pump, heating element, fan motor).
- ⇒ The board controls the temperature of the washing water via an NTC sensor, as well as the speed of rotation of the washing pump according to the signal received from the tachymetric generator.
- ⇒ The circuit board monitors the status of the pressure switch and the rinse-aid/salt sensors.

6.1.2 Memory in the control system

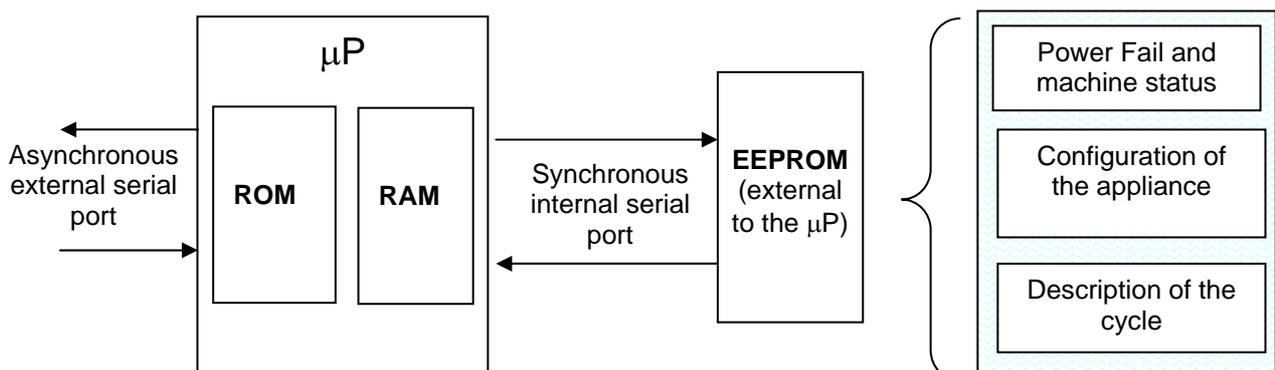

The main circuit board features an EEPROM memory (external to the microprocessor) which stores in memory data relative to the configuration, description of the cycle, cycle status in case of a power failure, and any alarm conditions.

The configuration data (entered in the factory using a computer with a DAAS interface) determine the functionalities of the appliance (number and type of programmes, options, LEDs etc.).

6.2 Specifications for actuators and sensors

6.2.1 Components

TYPE OF COMPONENT	POWER AVAILABLE	TYPE OF ELECTRONIC CONTROL
Wash pump	Max 250W	Triac
Drain pump	Max 100W	Triac
Heating element	Max 2100W	Relay
Water fill solenoid	Max 10W	Triac
Regeneration solenoid	Max 10W	Triac
Detergent and Rinse-aid solenoid	Max 10W	Triac
Fan motor	Max 10W	Triac

6.2.2 Sensors

TYPE OF SENSOR	TYPE OF ELECTRONIC SIGNAL	TYPE OF COMPONENT
Salt sensor	Digital 5 Volt	Reed
Rinse-aid sensor	Digital 5 Volt	Reed
Temperature sensor	Analogue 5 Volt	* NTC
Turbidity sensor (certain models only)	Analogue 5 Volt	Opto-electronic
Tachymetric sensor	Frequency	Tachymetric generator
Level sensor	Digital - High voltage	Pressure switch
Door closure sensor	Digital - High voltage	Switch
Anti-flooding sensor	Digital - High voltage	Switch

* NTC Temperature sensor

* NTC COMPARATIVE VALUES		
Temperature °C	⇒	Nominal value Ω
10	⇒	9655
25	⇒	4850
60	⇒	1205
90	⇒	445


6.3 Power supply and programme selection

The main board is powered by the closure of contacts 1-5 and 2-4 of the ON/OFF button (PU). The connectors used in this case are A2 (neutral) and B1 (line).

The control/display board (user interface) is powered at 5V by the main board, making programme selection possible.

When the door is closed, the main board detects the closure of the contacts of the switch (IP) across connectors B2-D1, and starts the washing programme. The same switch powers the electrical components.

When the door is opened, the power loads are disconnected from the power supply and the cycle is paused.

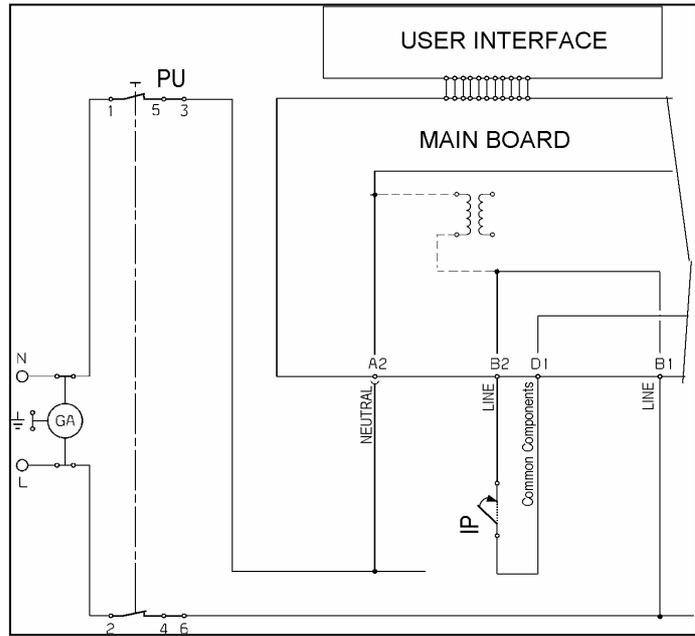

6.4 Fill circuit

6.4.1 Level and anti-overflow pressure switch


- The level of water introduced into the appliance is determined by the level pressure switch
- The anti-overflow pressure switch ensures that the level of water does not exceed the safety threshold (causing overflow from the door).

6.4.2 Fill system

The water fill solenoid valve is powered by triac TY2 on the electronic board (connector C7), by the door switch (IP) and by the anti-flooding microswitch (DA).

The level of water in the sump is monitored by the pressure switch (RL). The electronic board constantly monitors the status of the pressure switch via a "sensing" line connected to connector C5:

- ⇒ EMPTY if the contacts are closed on 1-2
- ⇒ FULL if the contacts are closed on 1-3

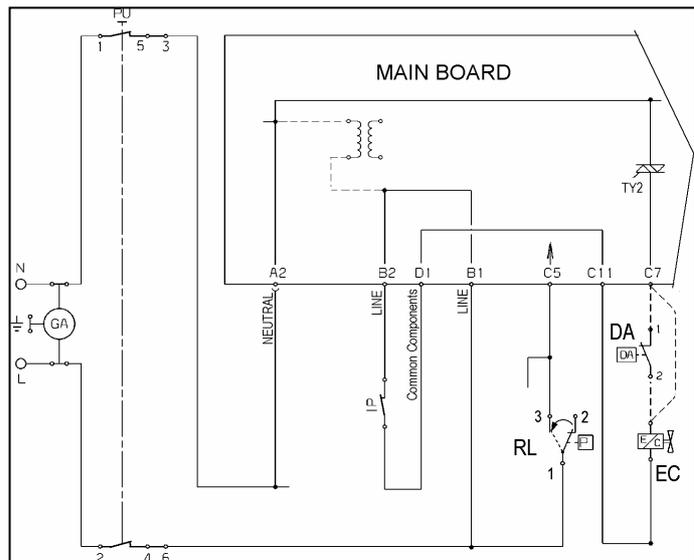

6.4.3 Anti-flooding device


Intervention of the anti-flooding device causes the contacts of the microswitch (DA) to open, thus disconnecting the solenoid valve from the power supply.

6.4.4 Intervention of the anti-overflow system

If the anti-overflow pressure switch (PA) should intervene, the closure of the contact on FULL (1-3) powers the drain pump (PS). The pump remains in operation until the contact returns to EMPTY (1-2).



If the door is opened or the appliance is switched off, the drain pump is deactivated.

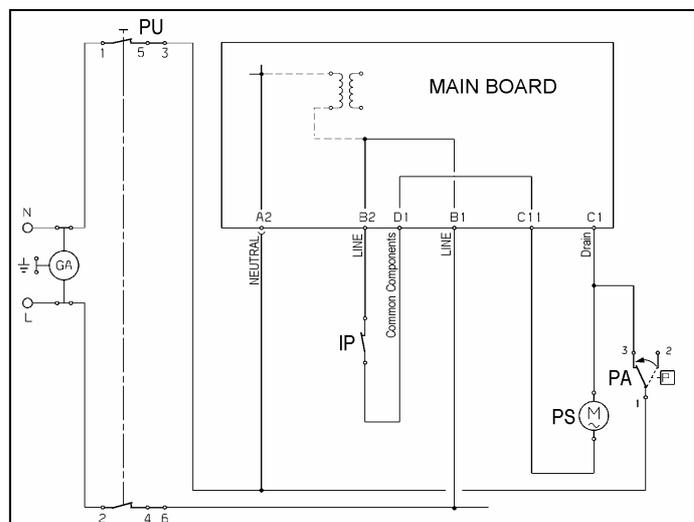

6.5 Control of water fill phase

The quantity of water necessary to carry out the washing cycle is determined exclusively by the closure of the electrical contact of the pressure switch, which changes from EMPTY to FULL. This system ensures that, if the pressure switch re-opens on EMPTY, further water is introduced until it returns to FULL. The water fill phase consists of the following sub-phases:

6.5.1 Static fill

With the motor switched off, the fill solenoid valve is energized and water is introduced into the appliance until the pressure switch signal switches to FULL.

6.5.2 Dynamic fill

The dynamic fill is obtained by switching on the washing pump whose rotation causes the pressure switch to switch to EMPTY. Subsequently, the fill solenoid valve is energized and water is introduced until the switch returns to FULL.

The speed of rotation of the motor determines the quantity of water introduced, since the electronic control system switches on the washing pump at a variable speed which depends on the washing system that will be performed in the phases subsequent to the water fill:

- ⇒ In the case of "ctrl" washing (at constant speed), the speed of rotation increases gradually to **2800 rpm**
- ⇒ In the case of "pw" (pulse) washing, the speed of rotation increases gradually to **1900 rpm**

N.B.- Refer to the Table of Programmes for the definition of the washing system.

6.5.3 Level stability control

The hydraulic circuit operates with maximum efficiency when the pressure switch signal remains stable on FULL. In practise, the quantity of water circulating in the sump allows the motor to run without speed fluctuations caused by cavitation.

When the pressure switch signals FULL, the fill solenoid valve switches off.

6.6 Water fill time

The aperture of the solenoid valve has a pre-set overall duration, which is subdivided into the various sub-phases of the fill:

6.6.1 Static fill time

T.S. = max 90 seconds: This is the maximum time within which the pressure switch must switch to FULL. If the FULL signal is not received from the pressure switch within this time, the electronic control system interrupts the washing cycle and the appliance enters alarm condition [**1 0**].

6.6.2 Dynamic fill time

T.D. = T.S. x 3: This is the maximum time allowed for the entire fill phase within which the pressure switch signal must stabilize on FULL.

- If the pressure switch signal does not stabilize on FULL within this period (T.S. x 3), the electronic control system switches off the fill solenoid (and the heating element, if switched on), and then allows the washing cycle to proceed until it is completed. In this situation, the alarm condition [**F 0**] is not displayed to the user, but may be accessed by the Service Engineer using a specific procedure.
- If, during a 2800 rpm dynamic fill, the pressure switch never closes on FULL during the initial 60 seconds, the electronic control system interrupts the washing cycle and the appliance enters alarm condition [**1 0**].

6.6.3 Power supply interruption during water fill

If the water fill phase is interrupted by opening the door or due to a power failure, the contents of the counters are stored in memory; when the door is re-closed or when the power supply is restored, the water fill resumes from the point at which it was interrupted; the new counter values are added to those previously memorized.

6.7 Level stability during washing

Once the fill phase has been completed, the cycle proceeds to the washing phase. The washing phase is carried out using cold or heated water, and the status of the pressure switch is monitored constantly to ensure that the hydraulic system functions correctly. Water replenishment cycles may be performed if necessary.

If the pressure switch returns to EMPTY during the washing phase, the fill solenoid is energized for a maximum time equivalent to **T.S. x 3** (maximum allowable total fill time).

If this time is exceeded, the washing cycle is completed, but no further supplementary fills are performed. In this situation, alarm condition **[F 0]** is stored in memory. This alarm code is not displayed to the user, but can be accessed by the Service Engineer using a specific procedure.

6.8 Washing system

The appliance features the classic washing system in which the mechanical washing action is obtained by the rotation of the washing pump which, by ducting water into the hydraulic circuit, actions the two spray arms simultaneously.

The washing pump is actioned by an asynchronous motor with a start-up capacitor (3 μ F - 450VL). The washing pump rotates in a counter-clockwise direction (seen from the impeller side) and is fitted with a tachymetric generator.

In order to optimize the washing programmes, two washing systems can be applied:

- “ctrl” ⇒ Washing at constant speed (2800 rpm) (maximum speed of the motor).
- “pw” ⇒ Pulse washing at 1600 - 2800 rpm. This washing system is controlled by the electronic control system, which actions the washing pump alternately at two speeds (minimum and maximum speed) for short periods.

MOTOR SPEED		PERIOD OF OPERATION	
Maintenance	1600 rpm	⇒	4 sec
PW1 Pulses	2800 rpm	⇒	0.8 sec

The **ctrl** and **pw** speeds are configurable. For further details, refer to the cycles tables relative to the specific model.


6.8.1 Control of the washing pump

The washing pump (PL) is powered by triac TY4 on the circuit board (connector C3), by the door switch (IP) and by the ON/OFF switch (PU).

The main circuit board controls the speed of rotation according to the signal received from the tachymetric generator (T) connected to connectors E1-E2.

This signal is used for:

- ↪ Control of the washing system (**ctrl** or **pw**)
- ↪ Control of the pump motor safety devices and the relative alarms
- ↪ Control of the dynamic fill

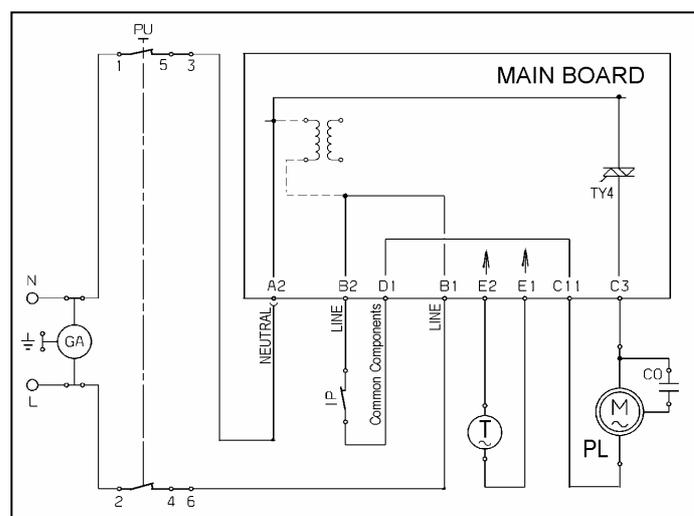

6.9 Heating


The heating element is enclosed in a protective tube, and is used to heat the washing water (but does not switch on during the drying phase). The heating element is fitted to the outlet of the washing pump and connected to the duct which feeds the upper spray arm.

The heating element (RR) is powered by relay RL1 on the circuit board (connector A1), by the ON/OFF switch (PU) and by the level pressure switch (RL), which must be set to "FULL" (contact closed on 1-3).

Two safety thermostats are fitted to the heating element:

- an automatic-reset thermostat which intervenes at 98°C
- a thermostat with a thermal fuse (206°C).

The temperature of the water is controlled by the main circuit board via an NTC sensor (ST) which is connected to connectors G5-G6.

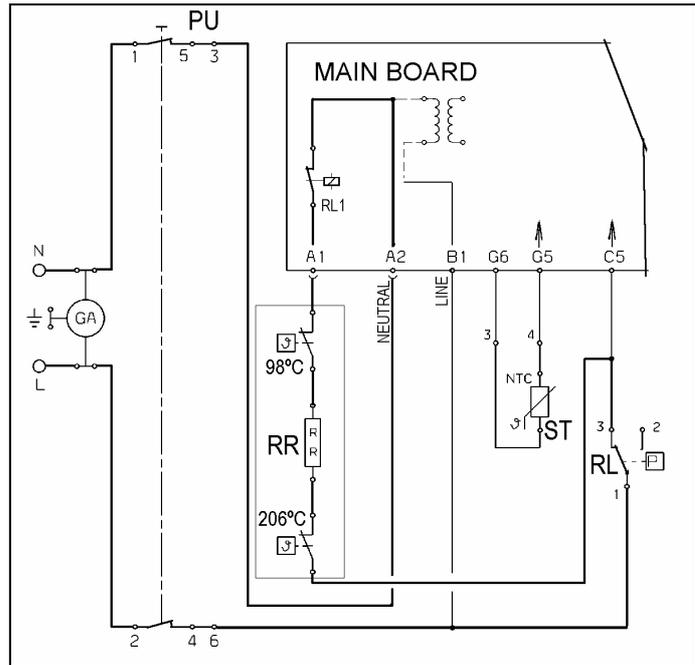


6.10 Integrated detergent dispenser

The detergent dispenser is a plastic container consisting of two separate sections. The first (A) contains the detergent; the second (B) contains the Rinse-aid.

The dispenser is of the single-coil type, and uses a single electrical coil, connected to a mechanical system, for both functions.

When the coil is energized, it actions the mechanism via a series of levers to introduce detergent in a determined sequence (first detergent, then rinse-aid).

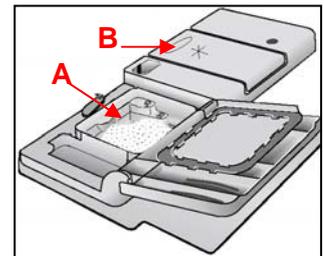


The coil of the detergent dispenser (DD) is powered by the circuit board via triac TY5 (connector D7) at certain points during the cycle, thus ensuring correct dosage.

The circuit is closed by the contacts of the ON/OFF switch (PU) and the door switch (IP).




Some models feature a rinse-aid sensor whose reed contact (SB) is connected to connectors F3-F4 on the circuit board.

The absence of rinse-aid causes the contact to close, which lights the corresponding LED (on the display board).

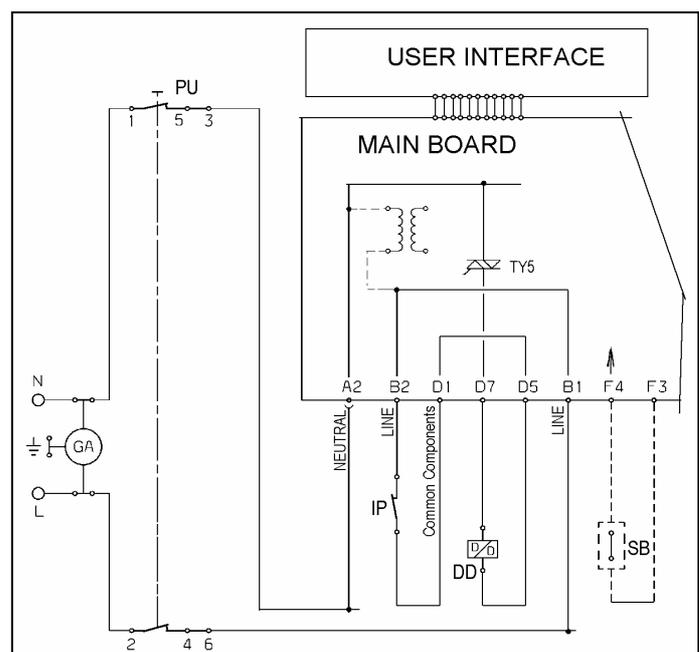

6.11 Deactivating the rinse-aid function

Introduction of rinse-aid may be deactivated by the user by pressing a combination of buttons. In this case, the Rinse-aid LED (if featured) will also be deactivated.

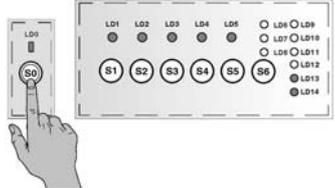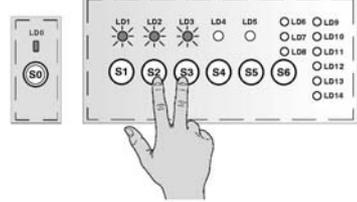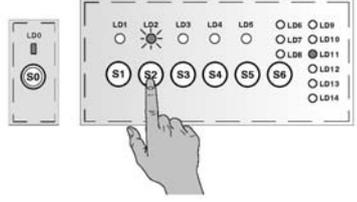
<ol style="list-style-type: none"> 1. Cancel any cycles that may have been selected (see 4.3.1). 2. Press S0 to switch the appliance on. <ul style="list-style-type: none"> ↳ The programme LEDs and the salt and rinse-aid LEDs must be <u>on</u> to indicate the pre-selection phase. 	
<ol style="list-style-type: none"> 3. Press buttons S2-S3 simultaneously and hold down until LEDs LD1, LD2 and LD3 begin to flash. 	
<ol style="list-style-type: none"> 4. Press button S2: LEDs LD1 and LD3 switch off, while LD2 continues to flash. <ul style="list-style-type: none"> ↳ The End of cycle LED remains lit that the rinse-aid function is operative. 5. Press button S2 again to deactivate the rinse-aid. <ul style="list-style-type: none"> ↳ The end of cycle LED switches off to indicate that the rinse-aid function is inoperative. 	
<ol style="list-style-type: none"> 6. To store this setting in memory: press button S0 and switch the appliance off; alternatively, wait for 60 seconds (LD1 - LD6 light) 	

6.12 Drain

The drain pump (PS) is powered by triac TY3 (connector C1) and via the contacts of the ON/OFF switch (PU) and the door switch (IP).

At the end of the drain phase, a control procedure is performed to check that the contact of the level pressure switch is open on EMPTY. If this is the case, the appliance proceeds to the subsequent phase.

If, as a result of a problem in the drain phase, the pressure switch contact remains closed on FULL (i.e. if there is water in the hydraulic circuit), the drain phase is repeated. On completion of this second drain phase, the status of the pressure switch is again checked. If it is still closed on FULL, alarm [i20] is generated (failure to drain). The time-out for each of these two phases is 120 seconds.

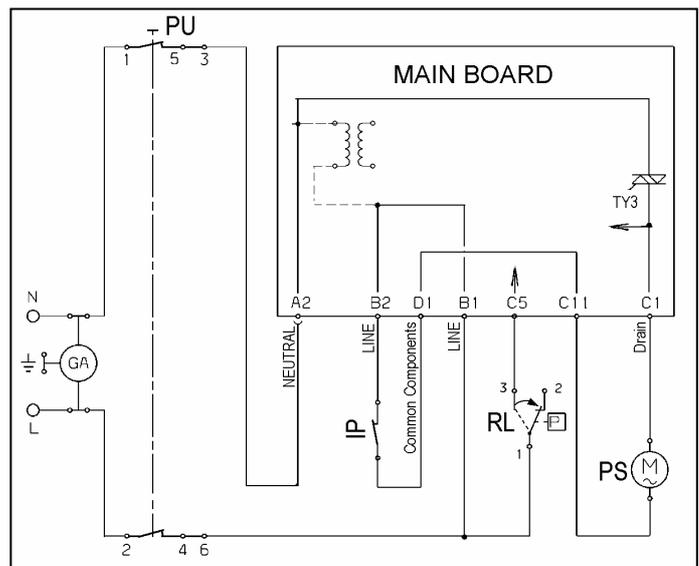

N.B. The washing programmes always begin with a drain phase.

6.13 Regeneration system

Regeneration of the softening system, whose duration is approximately 4 minutes, is normally performed at the beginning of the drying phase.

Each time regeneration is performed (the regeneration solenoid **4** is energized), the chamber is completely emptied (about 230 cc of water).


Regeneration is controlled by the electronic control system "Ad Hoc", i.e. not at each washing cycle, but rather at intervals determined by the level of regeneration selected.

- ↪ If level **[1]** is selected, regeneration is never performed and the SALT LED (if featured) always remains unlit.
- ↪ If level **[10]** is selected, regeneration is performed twice during each cycle; first at the end of the washing phase, and then at the beginning of the drying phase.

The regeneration solenoid (ER) is powered by triac TY1 (connector C9 on the circuit board) and by the contacts of the ON/OFF switch (PU) and the door switch (IP).

Some models feature a salt sensor whose reed contact (SS) is connected to connectors F1-F2 on the circuit board.

The absence of salt causes the contact to close, which lights the corresponding LED (on the display board).

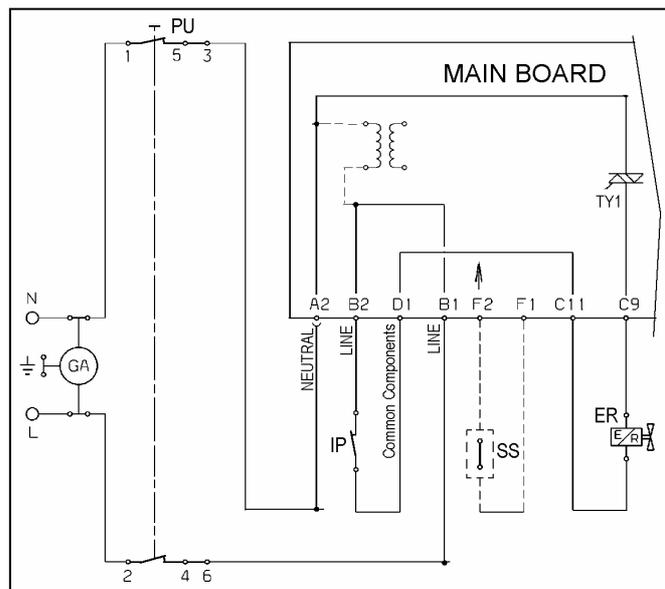

6.14 Resin washing

Washing of the resins contained in the softening system is performed at the beginning of each washing cycle. In practise, the solution of salty water (regeneration water) remains deposited in the resin container from the end of the last completed cycle until the subsequent cycle.

If the regeneration level is set to **[10]**, washing of the resins is performed once at the beginning of the washing cycle and then again immediately after the regeneration process performed at the end of the washing phase.

The regeneration sequence is as follows:




- a. Drain (30 seconds)
- b. Water fill to correct level
- c. Drain (10 seconds)
- d. Water fill (15 seconds)
- e. Complete drain

6.15 Regeneration levels

The counter for execution of the “Ad Hoc” regeneration process is governed by the electronic control system on the basis of the duration of the fill phases (i.e. the quantity of water introduced), and NOT on the number of cycles.

Regeneration can be set to one of 10 levels. If regeneration is set to level [1], the procedure is not performed and the Salt LED remains unlit.

6.15.1 Setting the regeneration level
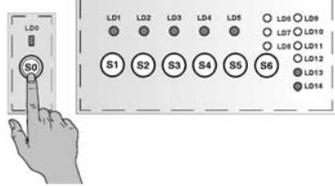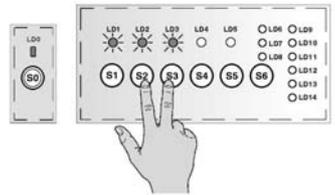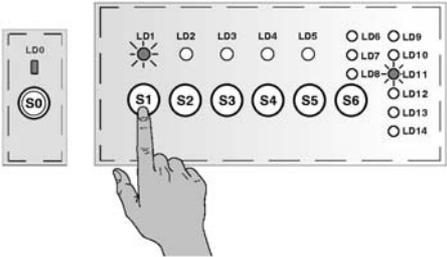
<ol style="list-style-type: none"> 1. Cancel any cycles that may have been selected (see 4.3.1) 2. Press button S0 to switch the appliance on. ↳ The programme LEDs and the salt and rinse-aid LEDs must be <u>on</u> to indicate the pre-selection phase. 	
<ol style="list-style-type: none"> 3. Press buttons S2-S3 simultaneously and hold down until LEDs LD1, LD2, LD3 start to flash. 	
<ol style="list-style-type: none"> 4. Press button S1: the LEDs LD2, LD3 switch off, while LD1 continues to flash. ↳ The End of cycle LED emits sequences of flashes, whose no. indicate the regeneration level, separated by a pause. <i>NB:</i> Press button S1 again to increase the regeneration by one level. When the 10th level has been reached (10 flashes), press S1 again to pass to 1st level. 	
<ol style="list-style-type: none"> 5. To store this setting in memory: press button S0 and switch the appliance off or wait 60 seconds (LD1÷LD6 switch on) 	

6.15.2 “Blending” function

This function is performed inside the fill tank during the water fill phase which, depending on the position of the selector, automatically blends the softened water with the unsoftened water present in the appliance.

In practice, the softened water is introduced into the appliance through the softening system, while the unsoftened water flows via an open by-pass duct directly through the steam venting ring.

If the level of regeneration is set to between **1** and **4**, it is advisable to activate the BLENDING function to mix softened water with unsoftened water.


This function optimizes the consumption of salt thus preventing the possibility of corrosion of glass recipients due to excessively soft water.

When the BLENDING function is activated, the percentage of unsoftened water introduced into the dishwasher is **15%**.

The BLENDING function is activated using the selector knob located inside the tub, on the left side, in the vicinity of the steam venting grille.

Position of selector

- ⇒ pos.1 = blending ACTIVATED.
- ⇒ pos.2 = blending DISACTIVATED.

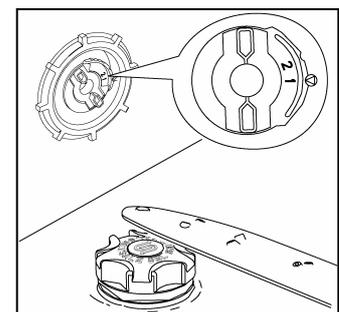

6.15.3 Table of regeneration values

Level	Number of "end of cycle" LED flashes	Water introduced between regeneration cycles	Aperture of regeneration solenoid	Position of selector in the tub	Hardness of the water	
	n°	Litres	sec	n°	° F (TH)	° D (dH)
1	1	---	0	1	0 > 8	0 > 4
2	2	130	240	1	9 > 14	5 > 8
3	3	94	240	1	15 > 20	9 > 11
4	4	70	240	1	21 > 30	12 > 17
* 5	5	53	240	2	31 > 40	18 > 22
6	6	37	240	2	41 > 50	23 > 28
7	7	20	240	2	51 > 60	29 > 33
8	8	15	240	2	61 > 70	34 > 39
9	9	10	240	2	71 > 80	40 > 45
10	10	3	2x240	2	81 > 90	46 > 50

* "5" = factory-set level Position of selector in tub "2"


7 Drying

In these dishwashers, the dishes are dried by means of a steam condensation process. The drying system is based on the circulation of the hot air produced during the hot rinse, in which the steam circulates inside the condenser of the fill tank.

The condenser is a condensation chamber filled with water (cold wall); contact between the hot air and the cold wall results in the condensation process.

Depending on the type of appliance, one of two drying systems is used:

- "ACTIVE - DRY" drying
- "TURBO - DRY" drying.

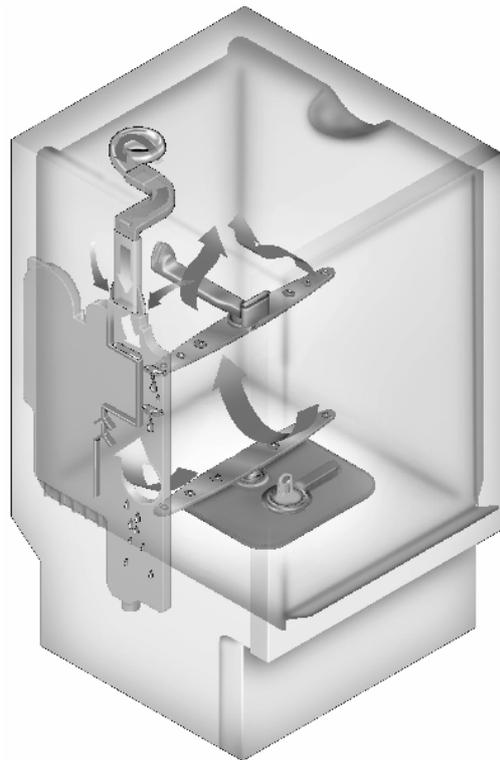

7.1.1 "Turbo-dry" drying


Certain models feature a forced-air drying system.

The steam is drawn in by the fan located inside the upper duct and routed towards the condenser in the fill tank, from which it returns to the tub through the steam venting ring.

The fan motor (MV) is powered by triac TY6 (connector D3 on the circuit board) and by the contacts of the ON/OFF switch (PU) and the door switch (IP).

The drying time is variable and pre-defined for each washing cycle.

In some programmes, the fan remains in operation for about 20 minutes after the end of the cycle; if the door is opened, the fan switches off.

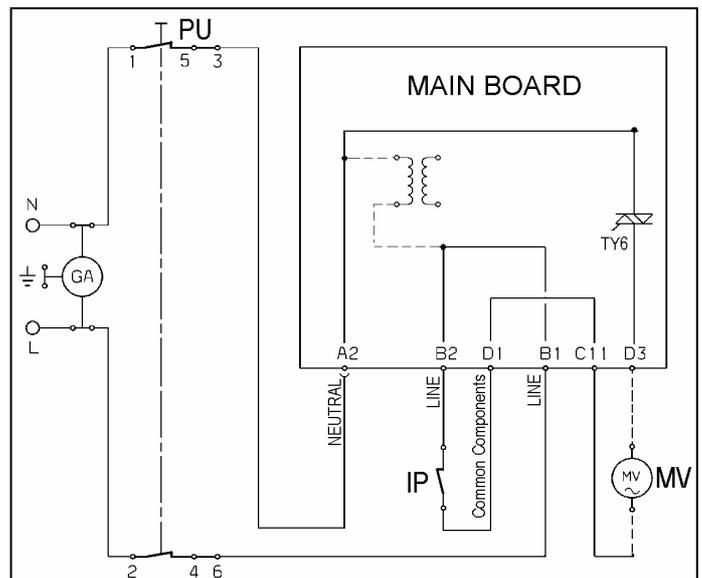


8 Automatic cycle (only on some models)

8.1 Turbidity sensor


Certain models which feature the turbidity sensor may also feature a special “automatic” programme which optimizes the cycle according to the size of the load and the degree of soiling. This sensor is positioned externally to the sump, in direct contact with the water.

A single container houses the NTC sensor (for control of the washing temperature) and the infra-red opto-electronic sensor, which controls the turbidity of the water and therefore the degree of soiling that it contains.

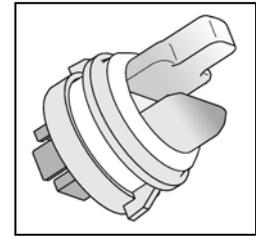

8.1.1 Calculating the degree of soiling


Measurement of the level of turbidity is performed during the cold pre-wash. The photoemitting diode, which is powered by the circuit board (connector G7), transmits a beam of light to the photoreceiver. The circuit of the photoreceiver (connector G8 on the circuit board - G6 is the common contact) is traversed by a certain current whose intensity is proportional to the quantity of light received (i.e. inversely proportional to the level of turbidity). The microprocessor measures the signal present in the circuit, and can thus determine the most appropriate cycle according to the quantity of soiling present in the water.

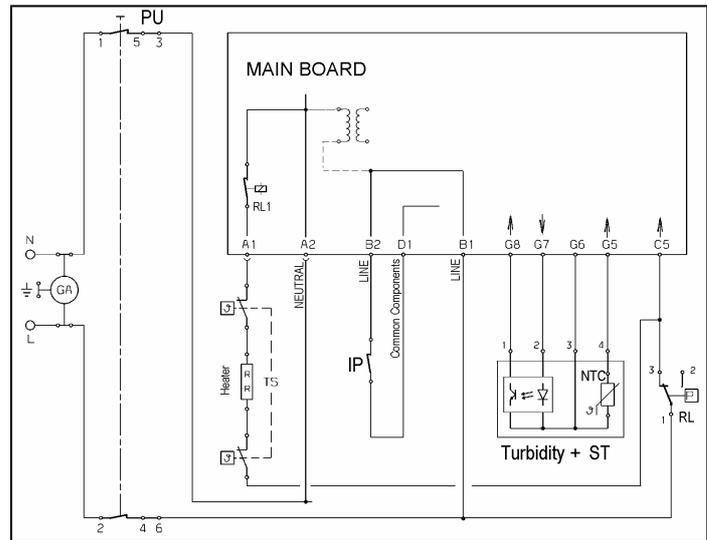

8.1.2 Determination of the load

The quantity of dishes in the load (full load or 1/2 load) is determined during the initial heating phase during washing by controlling the rate at which the temperature of the water increases (NTC sensor, connector G5).

- ↪ **Full load:** when the inclination of the curve is below a certain threshold which is memorized as standard
- ↪ **Half load:** when the inclination of the curve is above the standard threshold

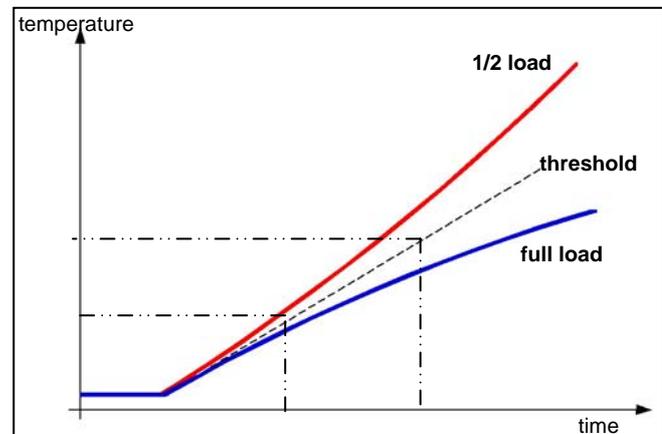

8.2 Automatic Programme

The table below shows the variations in the programme phases according to the type of soiling and the size of the load.

Type		Programme phases					
Load	Heavy soil	Pre-wash	Wash	First rinse	Second rinse	Hot rinse	Drying
Full	Yes	Cold	68° C	Cold	Cold	68° C	24 min.
Full	No		55° C		no		
Half	Yes		55° C				
Half	No		50° C				

9 Alarms

In the event that an abnormal situation should occur which might affect the correct operation of the appliance, the circuit board causes a safety system to intervene. In most cases, this interrupts the washing cycle. The last three alarm conditions are stored in memory.

Using a special procedure available only to Service Engineers, it is possible to read all the alarms stored in memory. However, only four current alarm conditions are displayed to the user.

The alarms are displayed by means of a sequence of flashes of the END OF CYCLE LED: the **display does not indicate any alarm condition**.

9.1 Table of alarms

Type of alarm	No. flashes of end-of-cycle LED and "beeps"	Displayed to the user	Description of the alarm condition	Machine status	Possible causes
i10	1	YES	Water fill time-out (The pressure switch does not close on FULL after 90 sec. static fill, or never closes on "FULL" during the initial 60 sec of the dynamic fill at 2800 rpm)	The drain pump switches on, then the cycle stops	Tap closed; water mains pressure too low; fill solenoid / wiring faulty; hydraulic circuit of pressure switch obstructed; level pressure switch / wiring faulty; circuit board faulty (solenoid triac short-circuited)
i20	2	YES	Water drain time-out (The pressure switch does not return to EMPTY after two drain phases lasting 120 seconds) (**)	The drain pump switches on, then the cycle stops	Drain circuit obstructed/blocked; drain pump interrupted or jammed (foreign bodies); level pressure switch blocked on FULL (1-3); hydraulic circuit of pressure switch obstructed; wiring faulty; circuit board faulty
i30	3	YES	Intervention of Anti-flooding system (the drain pump switches on)	The cycle is interrupted and the drain pump switches on	Water leakage from the tub - sump and various connections (pump, upper spray arm duct etc.); floating sensor blocked mechanically; microswitch faulty; fill solenoid blocked mechanically; circuit board faulty (solenoid triac short-circuited); wiring faulty
i50	5	YES	Motor triac short-circuited (the washing pump runs uncontrolled at maximum speed)	Water fill to level (if necessary), deactivation of the other actuators, cycle interrupted. The washing motor runs at maximum speed and the alarm is displayed.	Circuit board faulty
i60	6	YES	Overheating Temperature higher than 78°C	The cycle stops and the drain pump switches on.	Heating element faulty; Safety thermostats (open); Wiring faulty; NTC-sensor (thermal contact faulty); Scarce circulation of water in the tub; Wash pump faulty (damaged impeller) Main electronic board faulty

(**) If inside the appliance there is no water at all (correct drain) but this alarm is displayed, check the heater (possible dispersion) and the anti-interference suppressor.

Type of alarm	No. flashes of end-of-cycle LED and "beeps"	Displayed to the user	Description of the alarm condition	Machine status	Possible causes
i60	6	NO	Heating Time-out (the check takes place every 3 minutes: the temperature must increase by a certain amount at each step)	The programme continues to the end without heating (the washing result will probably be unsatisfactory)	Heating element faulty; intervention of safety thermostats (open); wiring faulty; NTC sensor (poor thermal contact); insufficient water circulating in the tub; washing pump faulty (impeller stripped); circuit board faulty.
i70	7	NO	NTC sensor short-circuited or open	The programme continues to the end without heating (the washing result will probably be unsatisfactory)	NTC sensor faulty; wiring short-circuited / open; circuit board faulty.
i80	8	NO	Communication error between the microprocessor and the EEPROM	Machine inoperative: no selection possible (*)	Circuit board faulty.
i90	9	NO	Problems with software configuration	The fault occurs when switching on: no selection possible (*)	Circuit board faulty (configuration software incorrect).
ib0	11	NO	Problems with the turbidity meter [if featured] (Calibration Time-out)	The programme continues as if a "heavy soiling" condition had been detected.	Turbidity sensor faulty; sensor wiring faulty; circuit board faulty.
id0	13	NO	Problems with the washing motor: no signal from the tachymetric generator (washing pump powered, but no signal from the generator)	The heating element is switched off. If the fault persists after the Time-out, the washing pump operates at maximum speed and the alarm code is stored in memory (the cycle continues)	Motor winding interrupted / short-circuited; motor jammed (foreign bodies); wiring to washing motor faulty; motor capacitor faulty; Tachymetric generator interrupted / short-circuited; circuit board faulty.
iF0	15	NO	Water replenishment Time-out (3 times during the T.S. Time-out)	The cycle continues until the next phase without supplementary fills and without heating. The error is cancelled on completion of a drain phase.	Dishes upside-down; central filter clogged; excessive foam; leaks from the sump-pressure switch coupling; pressure switch faulty / false contacts.

(*) If it is not possible to access diagnostics mode, switch the appliance off and then on again to check that this is not caused by a temporary fault. Before replacing the circuit board, check that it is correctly powered by controlling the following


- ↻ Continuity of the power cable
- ↻ Correct operation of the suppressor
- ↻ Closure of the door switch contacts
- ↻ Continuity of the wiring between connectors A2/B1 on the circuit board and the suppressor.

10 Diagnostics mode / Options



A single procedure can be used by Service Engineers to access the diagnostics system. After accessing diagnostics mode, the Engineer can:

- Read / cancel the alarms
- Check for correct operation of the various components of the appliance
- Start the diagnostics cycle
- Select the options available to Service Engineers

10.1 Accessing diagnostics mode
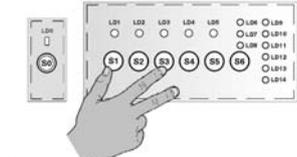
<p>1. Switch off the appliance, press buttons S1-S3 simultaneously.</p>	
<p>2. Press button S0 to switch the appliance on, <u>holding buttons S1-S3 down</u>, till the LEDs LD1, LD2, LD3 start to flash (about 4 sec.)</p>	


10.2 Reading the alarms and activating the individual components
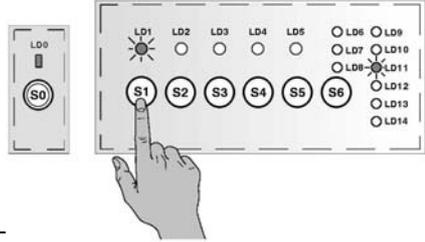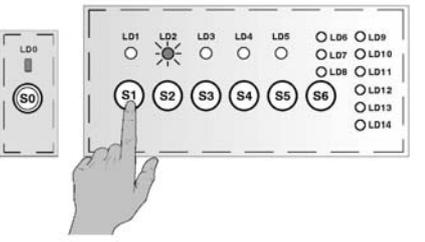
<p>1. Access diagnostics mode (see 10.1)</p> <p>2. Press button S1 to start the function:</p> <ul style="list-style-type: none"> ↪ LEDs LD2 and LD3 switch off; LD1 continues to flash. ↪ The first memorized alarm is displayed: the End of cycle LED starts to flash, with pauses between each series of flashes, to indicate the alarm. (for the decodification see summary table of alarms – pages. 25, 26). <p>3. Press button S1 again to display the second alarm.</p> <p>4. Press button S1 again to display the third alarm</p>	
<p>5. Press button S1 for the fourth time: the system proceeds to the activation of the various actuators.</p> <ul style="list-style-type: none"> ↪ The LD2 LED flashes to indicate that the alarm reading has been completed and the components are now being tested. <p>6. Press button S1 to activate the following:</p> <ul style="list-style-type: none"> ↪ 4th pressing: regeneration solenoid valve ↪ 5th pressing: drain pump ↪ 6th pressing: water fill solenoid to level ↪ 7th pressing: heating (only if water level is OK) ↪ 8th pressing: washing pump ↪ 9th pressing: detergent/rinse-aid dispenser ↪ 10th pressing: drying fan (if turbo-dry) <p>7. Each of the above steps may be repeated by pressing button S1 sequentially.</p>	
<div style="display: flex; align-items: center;">  <p><i>The components are powered when the door is closed: open the door to select a different component, then re-close the door. If button S1 is not pressed for 60 seconds, the system automatically exits diagnostics mode.</i></p> </div>	

10.3 Cancelling alarm codes from memory / Testing the LEDs

It is good practise to cancel the alarm codes:


- after reading the alarm code, to check whether it is repeated during the diagnostics test.
- after effecting repairs, to check whether it is repeated during testing.
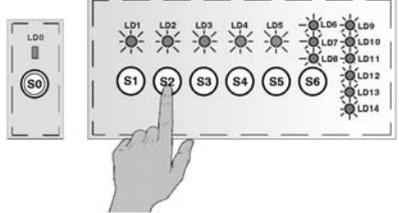
<ol style="list-style-type: none">1. Access diagnostics mode (see 10.1)2. Press button S2 to cancel the alarms<ul style="list-style-type: none">↳ All the LEDs and the display, if featured, flash for about 30 seconds and the buzzer sounds. The function terminates automatically and the machine enters pre-selection mode.	
---	--

10.4 Functional testing cycle

This is an abbreviated washing programme (15 min) which allows the Service Engineer to test all the functions that comprise a traditional washing cycle; in effect, the system simulates a normal cycle.

10.4.1 Selecting the cycle
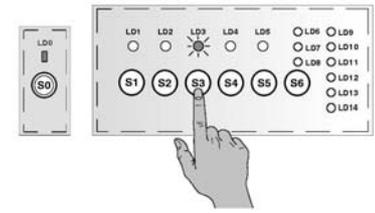
<ol style="list-style-type: none">1. Access diagnostics mode (see 10.1)2. Press button S3 to start the cycle.<ul style="list-style-type: none">↳ LED LD3 flashes for the entire duration of the cycle.↳ During the course of the test cycle, the programme behaves as in a normal cycle; the PAUSE and CANCEL options are accessible.	
--	---

10.4.2 Cycle phases

The test cycle consists of:

- A cold rinse phase
- A warm washing phase lasting 12 minutes

N.B.: At the beginning of the subsequent programme (i.e. after the test cycle), the resins are washed.


 
10.5 Options available to Service Engineers

In particular circumstances, i.e. if the user reports unsatisfactory washing results, a special procedure, available only to Service Engineers, can be used to select two supplementary options designed to improve performance:

- Extra cold rinse.
- Disabling of pulse washing (**PW**), replaced by continuous washing (**Ctrl**).



10.5.1 Selecting the extra cold rinse option

Using the procedure described below, it is possible to add a supplementary cold rinse in all the washing programmes. This improves the quality of the rinse in case of necessity.

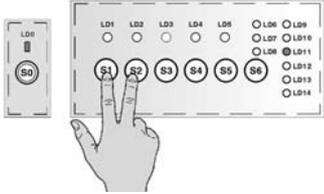
<ol style="list-style-type: none"> 1. Access diagnostics mode (see 10.1) 2. Press buttons S1-S2 simultaneously: <ul style="list-style-type: none"> ↳ The end of cycle LED indicates the status of the function: <ul style="list-style-type: none"> • If the end of cycle LED is switched off, the extra rinse is not selected. • If the end of cycle LED is lit, the extra rinse has been selected. 	
<ol style="list-style-type: none"> 3. Press button S1 to activate and deactivate this function. 	
<ol style="list-style-type: none"> 4. To store the operation in memory: press button S0 and switch the appliance or wait 60 seconds. 	

10.5.2 Disabling pulse washing

 Certain programmes use the pulse washing system (**PW**). Using the procedure described below, the Service Engineer can modify this system so that **Ctrl** (continuous) washing is used in all those programme which normally use the **PW** system. This intensifies the washing action even in delicate programmes.

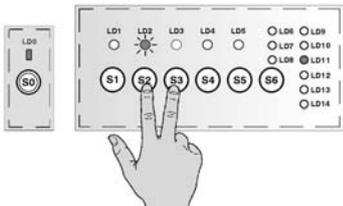
<ol style="list-style-type: none"> 1. Access diagnostics mode (see 10.1) 2. Press buttons S2-S3 simultaneously till LD2 starts flashing: <ul style="list-style-type: none"> ↳ The End of cycle LED indicates the status of the function: <ul style="list-style-type: none"> • If the end of cycle LED is switched off, the continuous washing system is used. • If the end of cycle LED is lit, the pulse washing system is used. 	
<ol style="list-style-type: none"> 3. Press button S2 to activate and deactivate this function. 	
<ol style="list-style-type: none"> 4. To store the operation in memory: press button S0 and switch off the appliance or wait 60 second (LD1 ÷ LD6 light) 	

 10.6 Exiting diagnostics mode


<ol style="list-style-type: none"> 1. To exit the diagnostics cycle press button S0 and switch off the appliance or wait 60 seconds: the LEDs LD1÷LD6 light and the appliance sets in selection mode. 	
--	---

11 ELECTRICAL FUNCTIONS

11.1 Electrical circuit diagram

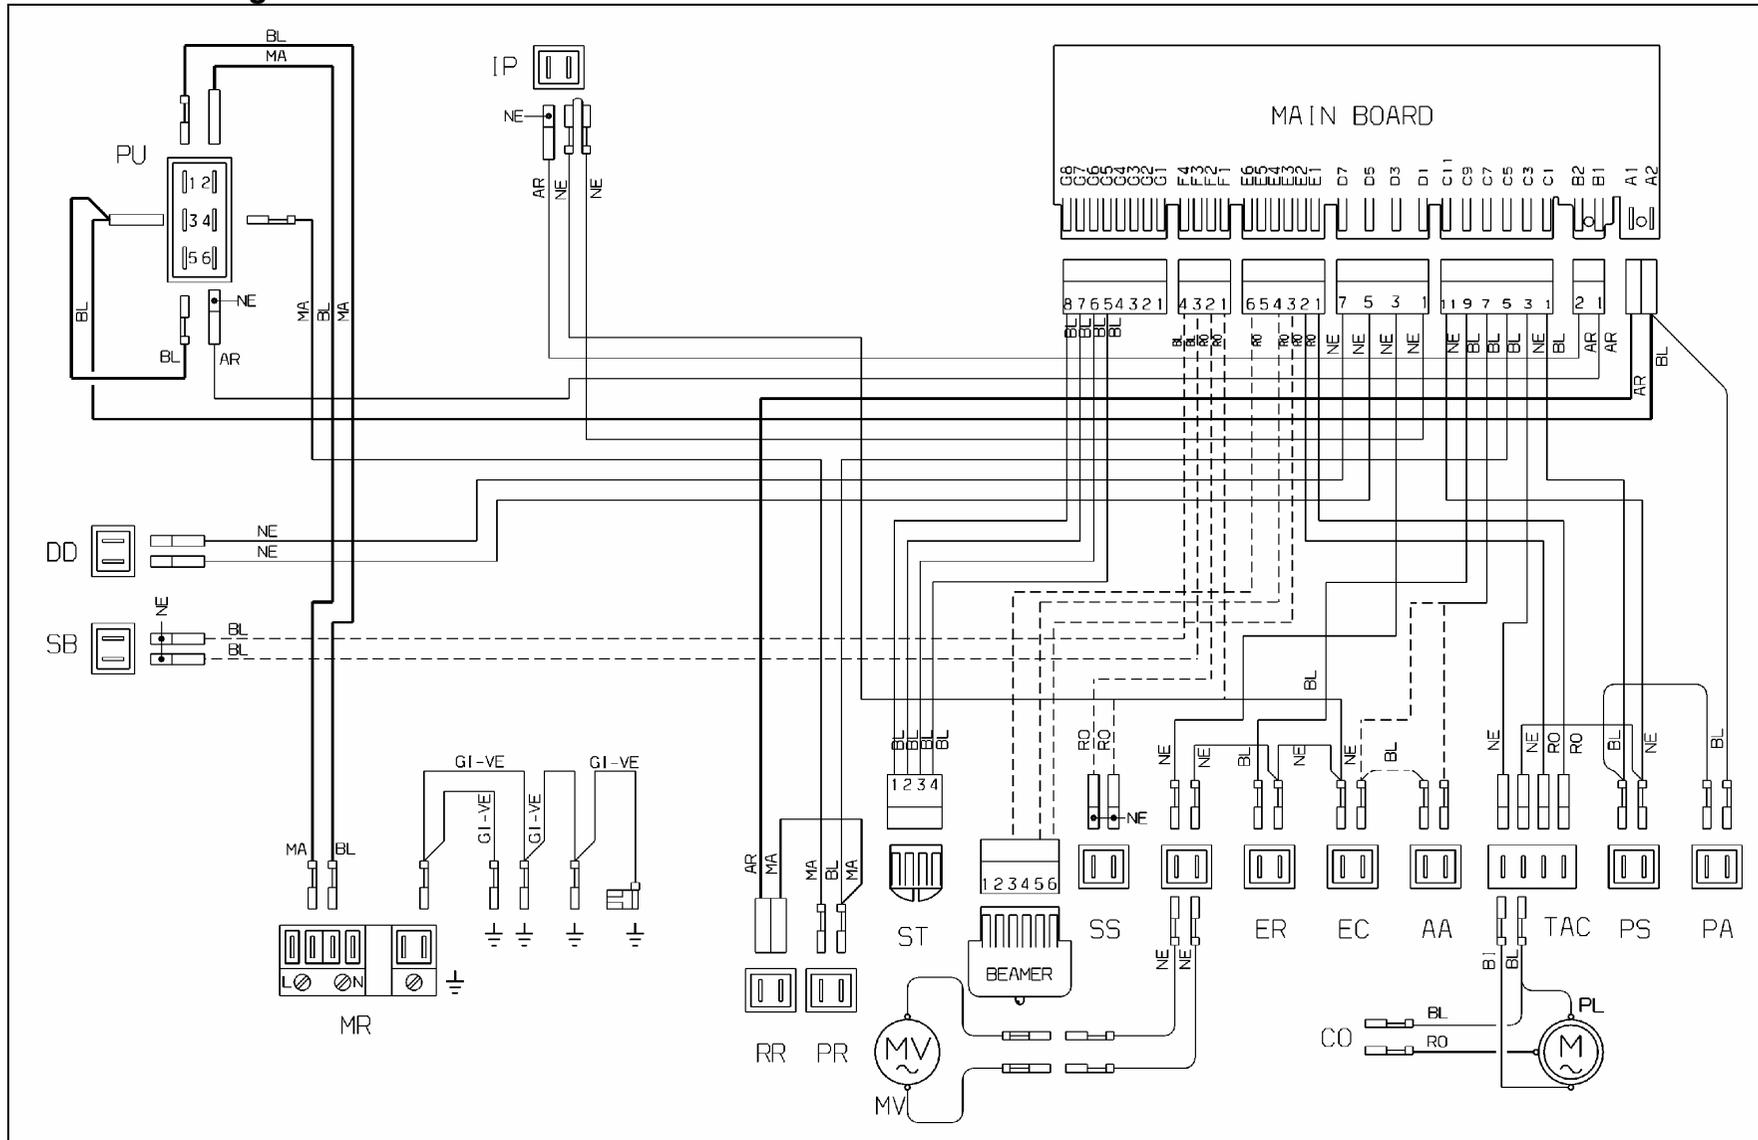

11.2 Basic circuit diagram

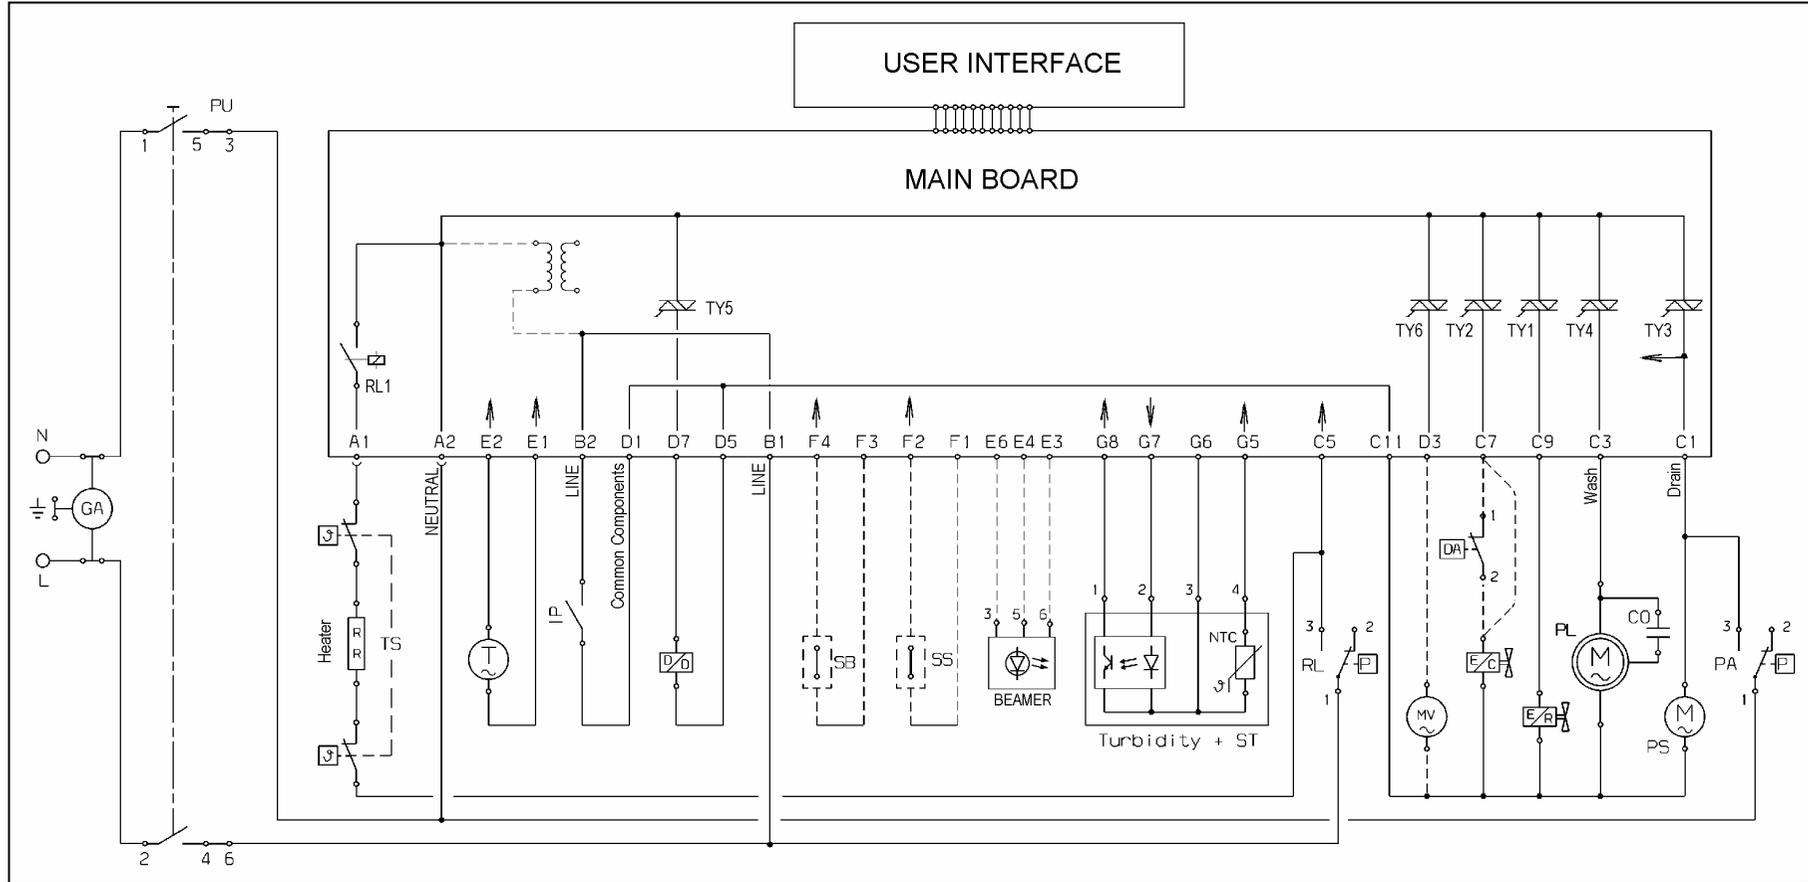

11.2.1 Key to circuit diagram

AR = Orange	NE = Black	CO = Capacitor	MR = General terminal block	PA = Anti-overflow pressure switch	TAC/T = Tachymetric generator
BI = White	RO = Pink	DD = Detergent/ Rinse-aid dispenser	MV = Fan motor	RR = Heating element	TS = Safety thermostat
BL = Blue	VI = Lilac	EC = Fill solenoid	PL = Washing pump	SS = Salt sensor	Main Board = Main board
CE = Light blue	AA/DA = Anti-flooding device	ER = Regeneration solenoid	PS = Drain pump	Turbidity = Turbidity sensor	User Interface = Display board
GI-VE = Yellow-Green	Beamer = Beamer	GA = Suppressor	PU = Pushbutton array	ST = Temperature sensor	
MA = Brown		IP = Door switch	PR/RL = Level pressure switch		

12 Table of programmes

12.1 60cm Dishwashers

The table below lists the phases of the programmes for this type of appliance: 60cm dishwashers. As these can be configured differently, refer to the relative documentation for the specific cycles available for each model.

Programmes		Prewash			Wash					Cold rinse			Extra rinse		Hot rinse			Dry.	
Type	Programme	Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	1st Heating (Temperature °C)	Wash time after heating (min.)	2nd Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	Wash time (min.)	Wash time (min.)	Type of wash	Wash time (min.)	Type of wash	Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	Drying (min.)	Cycle time (min.)
I2	Intensive	55°C	10'	ctrl	55°C	5'	68°C	14'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	120'
I3	Intensive short	50°C	2.5'	ctrl	50°C	10'	68°C	---	ctrl	2x5' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	6'	88'
I4	Intensive delicate	55°C	10'	ctrl	55°C	5'	68°C	14'	ctrl	2x3' (<68°C)	---	ctrl	5'	PW1	69°C	11'	ctrl	24'	131'
N2	Normal	---	6'	ctrl	50°C	4'	68°C	8'	ctrl	---	4'	ctrl	5'	PW1	69°C	---	ctrl	24'	100'
N3	Delicate	---	6'	PW1	50°C	2'	55°C	12'	PW1	---	4'	PW1	5'	PW1	69°C	1'	PW1	24'	98'
N4	Delicate (no prewash)	---	---	---	50°C	2'	55°C	12'	PW1	---	4'	PW1	5'	PW1	69°C	1'	PW1	24'	89'
N5	Normal (3 rinses)	---	6'	ctrl	50°C	4'	68°C	8'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	102'
N6	Normal (3 rinses)	---	---	---	50°C	4'	68°C	8'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	93'
E1	Energy label Axx	---	10'	PW5	15.5' <62°C	42'	---	---	PW5	5'	---	PW1	4'	PW5	16' <69°C	2'	PW2/PW5	54'	162'
E4	Energy label (Short)	---	6'	PW1	50°C	2'	55°C	12'	PW1	---	4'	PW1	5'	PW1	16' <69°C	2'	PW1	54'	134'
E5	Energy label (Auto)	---	8'	PW1	14-16.5' <65°C	37'	---	---	PW1	5' (<60°C)	---	PW1	2'	3x5" (2800)	15-17' <69°C	2'	PW1	44'	141'
E6	Energy label	---	7'	ctrl	15.5' <69°C	26'	---	---	ctrl	5' (<60°C)	---	PW1	2'	3x3" (2800)	16' <69°C	---	PW1	45'	120'
E7	Energy label	---	34'	ctrl	525" <37°C	10'	---	---	ctrl	---	---	---	---	---	615" <43°C	4'	ctrl	24'	101'
Auto2	Auto 50-65°C S2	---	8'	ctrl	50°C	4'	68°C	8'	ctrl	---	4'	ctrl/PW1	5'	PW1	69°C	1'	ctrl/PW1	24'	92-115'
Q1	Short	---	---	---	50°C	---	---	---	PW1	---	4'	PW1	5'	PW1	69°C	2'	PW1	---	52'
Q4	Soak	---	8'	PW1	---	---	---	---	---	---	---	---	---	---	---	---	---	---	12'
Q5	Short 30 min.	---	---	---	14.5' <65°C	---	---	---	ctrl	---	---	---	5'	PW1	9' <69°C	---	ctrl	---	31'
Q6	Heat plates	---	---	---	---	---	---	---	---	---	---	---	---	---	69°C	2'	PW1	---	30'
Q7	Glassware	---	---	---	45°C	9'	---	---	PW1	5' (<60°C)	---	PW1	3'	PW1	55°C	---	PW1	24'	71'

12.2 45cm Dishwashers

The table below lists the phases of the programmes for this type of appliance: 45cm dishwashers. As these can be configured differently, refer to the relative documentation for the specific cycles available for each model.

Programmes		Prewash			Wash					Cold rinse			Extra rinse		Hot rinse			Dry.	
Type	Programme	Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	1st Heating (Temperature °C)	Wash time after heating (min.)	2nd Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	Wash time (min.)	Wash time (min.)	Type of wash	Wash time (min.)	Type of wash	Heating (Temperature °C)	Wash time after heating (min.)	Type of wash	Drying (min.)	Cycle time (min.)
I2	Intensive	55°C	10'	ctrl	55°C	5'	68°C	14'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	116'
I3	Intensive short	50°C	2.5'	ctrl	50°C	10'	68°C	---	ctrl	2x5' (<68°C)	---	ctrl	5'	PW1	69°C	---	ctrl	6'	85'
N2	Normal	---	6'	ctrl	50°C	4'	68°C	8'	ctrl	---	4'	ctrl	5'	PW1	69°C	---	ctrl	24'	100'
N3	Delicate	---	6'	PW1	50°C	2'	55°C	12'	PW1	---	4'	PW1	5'	PW1	69°C	1'	PW1	24'	96'
N4	Delicate (no prewash)	---	---	---	50°C	2'	55°C	12'	PW1	---	4'	PW1	5'	PW1	69°C	1'	PW1	24'	86'
N5	Normal (3 rinses)	---	6'	ctrl	50°C	4'	68°C	8'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	99'
N6	Normal (3 rinses)	---	---	---	50°C	4'	68°C	8'	ctrl	2x3' (<65°C)	---	ctrl	5'	PW1	69°C	---	ctrl	24'	90'
E1	Energy label Axx	---	10'	PW1	11' <62°C	47'	---	---	PW1	5' (<60°C)	---	PW1	4'	PW1	10' <69°C	---	PW1	76'	171'
E5	Energy label (Auto)	---	8'	PW1	11-12.5' <65°C	41'	---	---	PW1	5' (<60°C)	---	PW1	2'	3x5" (2800)	10-11.5' <69°C	2'	PW1	64'	150'
Auto2	Auto 50-65°C S2	---	8'	ctrl	50°C	4'	68°C	8'	ctrl	---	4'	ctrl/PW1	5'	PW1	69°C	1'	ctrl/PW1	24'	85-110'
Q1	Short	---	---	---	50°C	---	---	---	PW1	---	4'	PW1	5'	PW1	69°C	2'	PW1	---	48'
Q4	Soak	---	8'	PW1	---	---	---	---	---	---	---	---	---	---	---	---	---	---	12'
Q5	Short 30 min.	---	---	---	14,5' <65°C	---	---	---	ctrl	---	---	---	5'	PW1	9' <69°C	---	ctrl	---	31'
Q6	Heat plates	---	---	---	---	---	---	---	---	---	---	---	---	---	69°C	2'	PW1	---	29'
Q7	Glassware	---	---	---	45°C	9'	---	---	PW1	5' (<60°C)	---	PW1	3'	PW1	55°C	---	PW1	24'	69'


N.B.: The overall times for the programmes (duration) are approximate, and do not take into consideration the extra rinse, which may be selected as an option. The various phases do not include the times for regeneration/washing of the resins which, being performed "Ad Hoc", are not carried out at every cycle (see sections 6.12 and 6.13)

ctrl ⇒ Continuous washing at 2800 rpm. **PW** ⇒ Pulse washing at 1600 > 2800 rpm.

14 Checking the efficiency of the components

In order to facilitate the control procedure for the components to be tested, a TEST PROCEDURE has been created which indicates the point to which the probes of the tester should be applied and the correct theoretical value for each component tested.

- ↪ Remove the door and detach all the connectors from the main board.
- ↪ Connect the probes of the tester to the appropriate points on the connector. Compare the ohmic reading with the theoretical value.

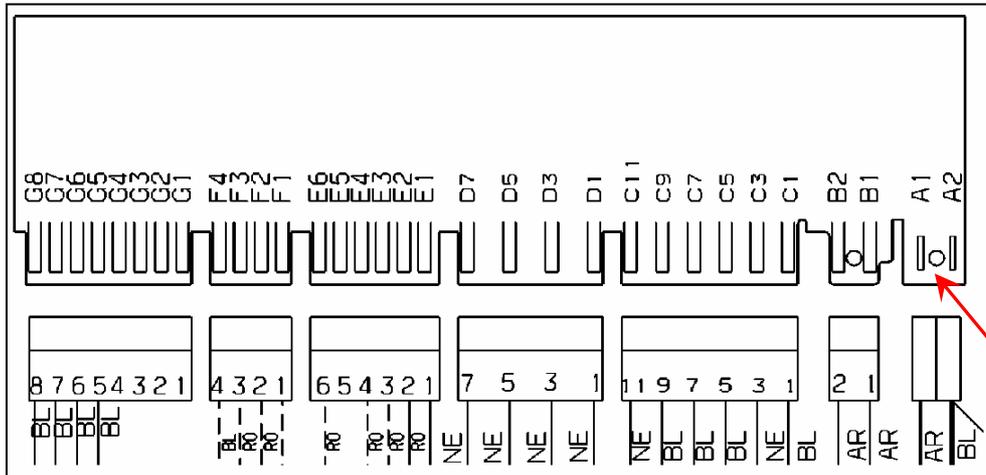

Care should be taken relative to the position of connector "A1" - "A2": if this connector is replaced in the incorrect position (back-to-front), the appliance will not function. The board will not accept any commands since the power supply will be disconnected.

14.1 Measurement points on the board wiring connector

LIST OF COMPONENTS	PROBE CONTACTS	CORRECT VALUES	NOTES
* POWER CABLE & (PU) - ON/OFF SWITCH	L ↔ B1	⇒ 0 Ω	with ON/OFF key pressed
	N ↔ A2	⇒ 0 Ω	
(RR) - HEATING ELEMENT + (TS) - SAFETY THERMOSTAT	A1 ↔ C5	⇒ 25 Ω ± 8%	connected in series (2100W)
(PR) - LEVEL PRESSURE SWITCH	B1 ↔ C5	⇒ INFINITE	on "EMPTY" (1-2)
		⇒ 0 Ω	on "FULL" (1-3)
(PA) - ANTI-FLOODING PRESSURE SWITCH	C1 ↔ A2	⇒ INFINITE	on "EMPTY" (1-2)
		⇒ 0 Ω	on "FULL" (1-3)
(IP) - DOOR MICROSWITCH	B2 ↔ D1	⇒ 0 Ω	Door closed
(DD/DB) - INTEGRATED DISPENSER	D5 ↔ D7	⇒ 1.500 Ω ± 8%	OK
(SB) - RINSE-AID SENSOR	F3 ↔ F4	⇒ INFINITE	with Rinse-aid
		⇒ 0 Ω	without Rinse-aid
(SS) - SALT SENSOR	F1 ↔ F2	⇒ INFINITE	with salt
		⇒ 0 Ω	without salt
(ST) - TEMPERATURE SENSOR	G5 ↔ G6	⇒ 4850 Ω ± 5%	(at 25°C)
		⇒ 1205 Ω ± 5%	(at 60°C)
(GT) - TACHYMETRIC SENSOR	E1 ↔ E2	⇒ 210 Ω ± 8%	OK
(MV) - FAN MOTOR	D1 ↔ D3	⇒ 7750 Ω ± 8%	OK
(ER) - REGENERATION SOLENOID	D1 ↔ C9	⇒ 6 KΩ ± 8%	OK
(EC) - FILL SOLENOID + (AA) - ANTI-FLOODING DEVICE	D1 ↔ C7	⇒ 3.800 Ω ± 8%	connected in series
(PL) - WASH MOTOR	C11 ↔ C3	⇒ 50 Ω ± 8%	start-up winding
	To the two motor wires (blue) / (red)	⇒ 180 Ω ± 8%	auxiliary winding
(PS) - DRAIN MOTOR	C11 ↔ C1	⇒ 180 Ω ± 8%	OK

N.B.: - *) = Measurement points L and N refer to the pins of the plug fitted to the power cable.

15 QUICK GUIDE TO THE SPECIAL FUNCTIONS

The table below briefly describes how each of the special functions available to the user and to the Service Engineer can be used. The display does not indicate any function neither of Service nor User.

	Function	Activation of the function		Starting the function		Brief description / Comments
	↓	Buttons	Led(s)	Buttons	Led(s)	↓
USER (*)	Select regeneration	S0 (On/Off) ↓ [S2 + S3]	→ LD1 + LD2+ LD3 flash	→ S1	→ LD1 flashes	→ (description on page 22 / chapter 6.15) Level L1 L2 L10 N° of flashes of LED End of cycle ... 1 2 10 ex. level 3: 3 flashes, pause repeated for 1 minute
	Deactivate rinse-aid	S0 (On/Off) ↓ [S2 + S3]	→ LD1 + LD2+ LD3 flash	→ S2	→ LD2 flashes	→ (description on page 20 / chapter 6.11) Press key S2 and press again: the end of cycle LED lights then switches off. (LED lit = function activated)
SERVICE	Accessing diagnostics mode, alarm display and activation of actuators	[S1 + S3] ↓ S0 (On/Off)	→ LD1 + LD2 + LD3 flash	→ S1	→ LD1 flashes LD2 flashes	→ (description on page 27 / chapter 10) The end of cycle LED emits a series of flashes which correspond to the type of alarm The last 3 alarms can be displayed by pressing S1 When pressed from the 4 th to the 10 th time, the individual components are actioned (description on page 27 / chapter 10)
	Cancel alarms stored in memory	[S1 + S3] ↓ S0 (On/Off)	→ LD1 + LD2 + LD3 flash	→ S2	→ All LEDs flash	→ (description on page 28 / chapter 10.3) All the LEDs flash for 30 seconds.
	Test cycle	[S1 + S3] ↓ S0 (On/Off)	→ LD1 + LD2 + LD3 flash	→ S3	→ LD3 flashes	→ (description on page 28 / chapter 10.4) The cycle starts automatically signalling the various current phases with the lightning of the corresponding LEDs.
	Extra rinse	[S1 + S3] ↓ S0 (On/Off)	→ LD1 + LD2 + LD3 flash	→ [S1 + S2] ↓ S1	→ LD1 flashes LD11 On/Off	→ (description on page 29 / chapter 10.5.1) Press key S1 and press again: the end of cycle LED lights then switches off (Led on = active function)
	Disable buttons	[S1 + S3] ↓ S0 (On/Off)	→ LD1 + LD2 + LD3 flash	→ [S2 + S3] ↓ S2	→ LD2 flashes LD11 On/Off	→ description on page 29 / chapter 10.5.2) Press key S2 and press again: the end of cycle LED lights then switches off (Led on = pulse; Led off = continuous)
	Exit / Memorize	In order to memorize the functions or exit diagnostics mode, press key S0 to switch the appliance off. In most cases, memorization / exit take place automatically after 60 seconds (in which case the appliance returns to pre-selection mode).				

(*) To activate the functions available to the user, no cycles must be selected: to cancel them see 4.3.1 (i.e. the appliance must be in pre-selection mode).