


DISASSEMBLY


1. TILT/SWIVEL REMOVAL

- ① Set the monitor faces bottom.
- ② Remove two screws (a).
- ③ Pressing the latch (b), carefully remove the Tilt/swivel by pulling it upward.

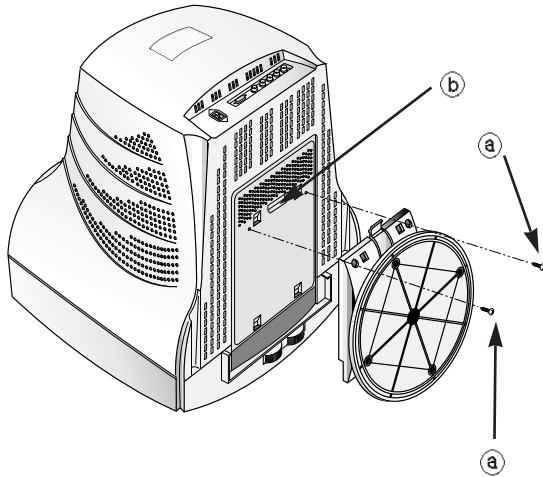


3. TOP SHIELD REMOVAL

- ① Remove four screws (a).
- ② Remove four screws (b).
- ③ Remove four screws (c).

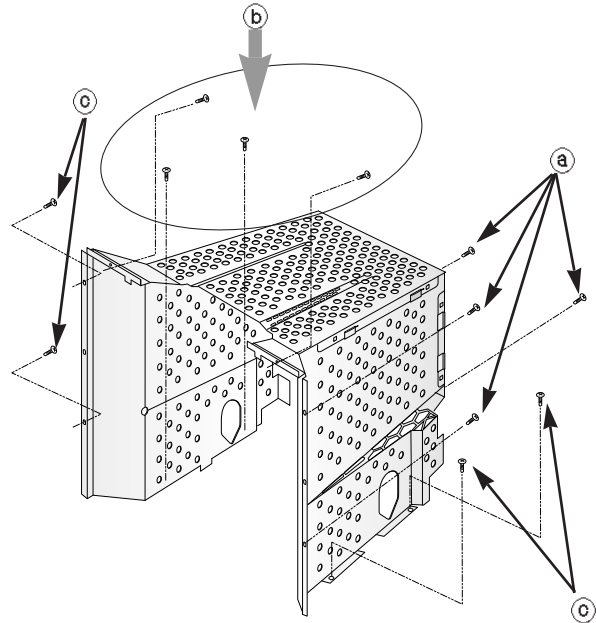


2. BACK COVER REMOVAL

- ① Remove two screw covers (a).
- ② Remove four screws (b) from the Back Cover.
- ③ Slide the Back Cover away from the Front Cabinet of the monitor.

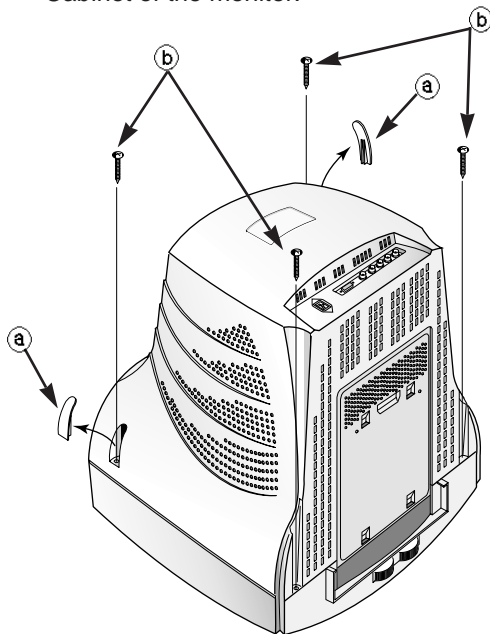


4. FRONT CABINET & VIDEO ASSEMBLY REMOVAL

- ① Remove four screws (a).
- ② P605 and P606(pin) from the Main PCB.
- ③ Remove two screws (b) from the Main Bracket to separate it from the Chassis Assembly and Front Cabinet.
- ④ Discharge the remaining static electricity by shorting between the Anode Cap and the CRT ground.
- ⑤ Disconnect the Anode Cap from the CRT.
- ⑥ Carefully separate the CRT Assembly from the CRT neck.

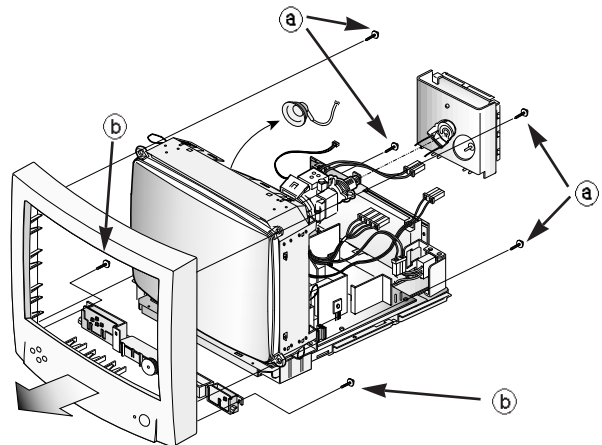


5. CRT & CRT FRAME ASSEMBLY REMOVAL

- ① Disconnect P902 (Degaussing pin) and P701(DY pin) from the Main PCB.
- ② Carefully separate the CRT Assembly from the Main Bracket.
- ③ Remove five screws (a).
- ④ Remove the CRT Frame from the Main Bracket.

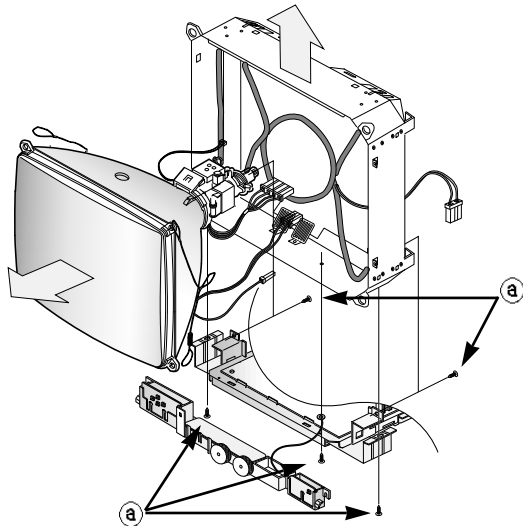


7. BOTTOM BRACKET REMOVAL

- ① Remove four screws (a).
- ② Remove four screws (b).
- ③ Remove the Bottom Bracket from the Main Bracket.

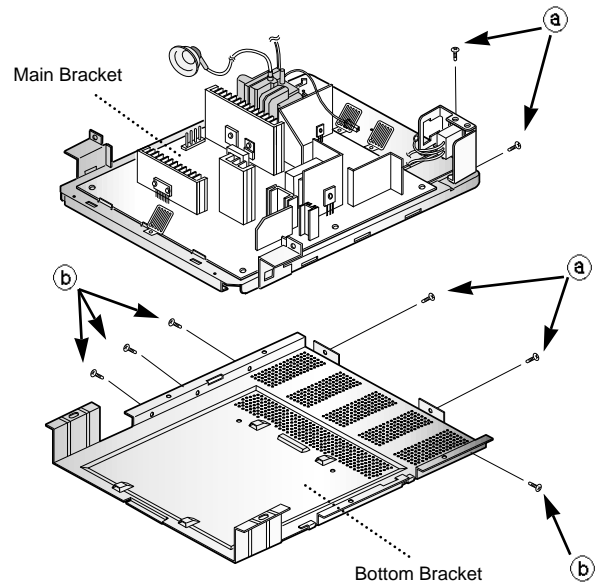

6. INTERFACE PCB ASSEMBLY REMOVAL

- ① Disconnect P551, P552 and P553 from the Interface PCB assembly.
- ② Remove four screws (a).
- ③ Remove the Interface PCB assembly from the Bottom Bracket.
- ④ Remove six screws (b).
- ⑤ Disconnect remaining connectors from the Interface PCB assembly.

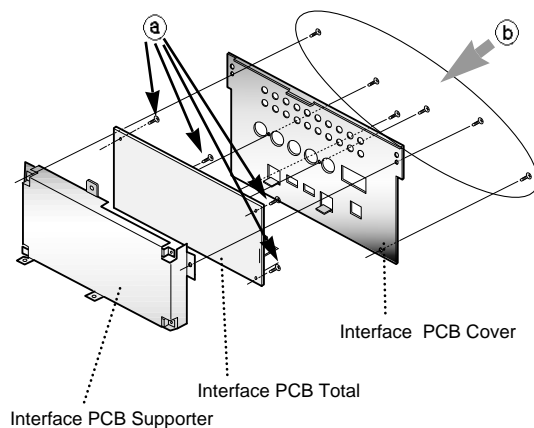

8. MAIN PCB ASSEMBLY REMOVAL

- ① Remove six screws (a).
- ② Remove the Main PCB from the Main Bracket.

