
ADP-1 CONNECTION INSTRUCTIONS

The ADP-1 is a Telephone Line Simulator used for On-Site (local) programming between a Paradox control panel and the Paradox WinLoad [™] and Espload softwares.

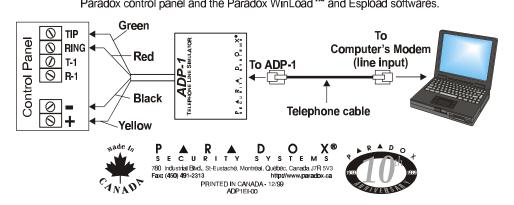

The quick function keys that force the control panel to answer or cancel a call coming from WinLoad/Espload.

///ESPRIT

- 1. Press [ENTER].
- 2. Enter the [INSTALLER/MASTER CODE].
- 3. Press the [AWAY] button to force answer, press the [STAY] to cancel communication.

SPECTRA

- 1. Press [ENTER].
- 2. Enter the [INSTALLER/MASTER CODE].
- 3. Press the [FORCE] button to force answer, press the [STAY] to cancel communication.

DIGIPLEX

- 1. Press and hold the [0] KEY.
- 2. Enter the [INSTALLER/MASTER CODE].
- 3. Press the [ARM] button to force answer, press the [DISARM] to cancel communication.