
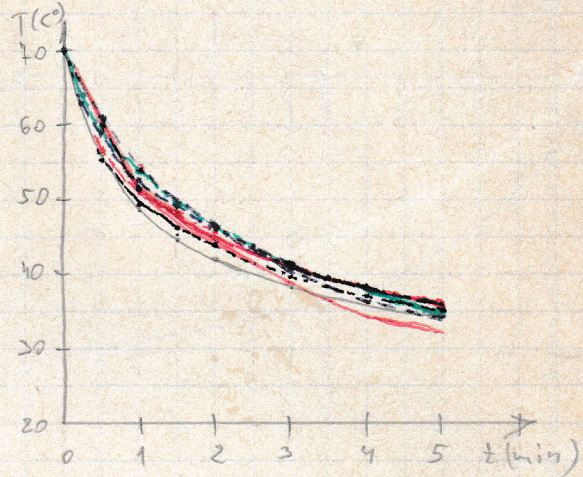
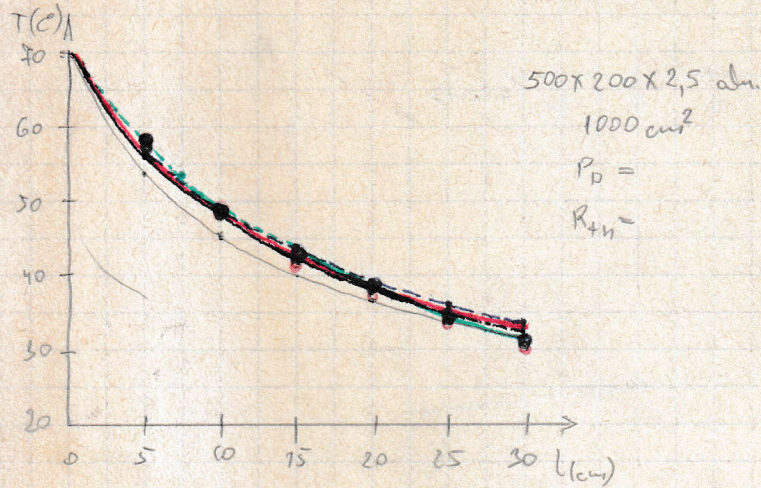
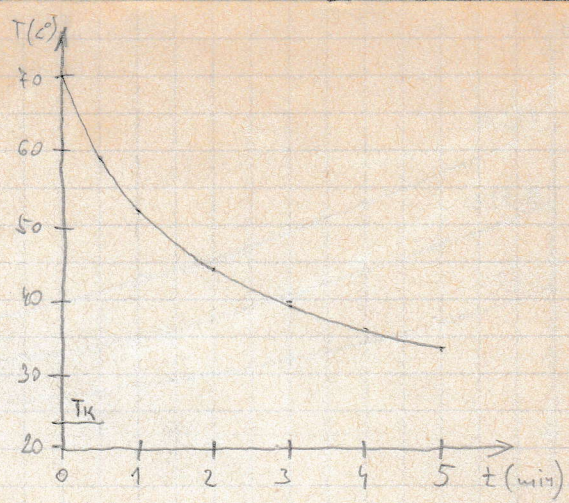


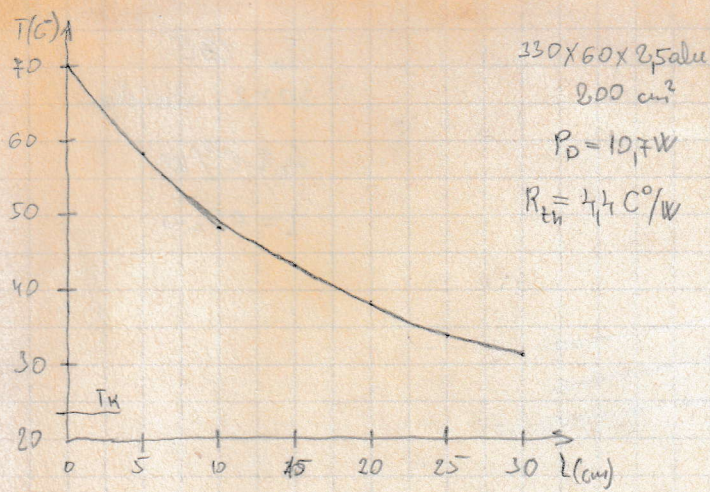

$500 \times 200 \times 2,5$
 $F = 1000 \text{ cm}^2$
 $P_D = 22,5 \text{ W}$
 $R_{th} = 1,88 \text{ } ^\circ\text{C/W}$

$500 \times 150 \times 2,5$
 750 cm^2
 $19,8 \text{ W}$
 $2,37 \text{ } ^\circ\text{C/W}$

$500 \times 120 \times 2,5$
 600 cm^2
 $17,7 \text{ W}$
 $2,64 \text{ } ^\circ\text{C/W}$


$500 \times 100 \times 2,5$
 500 cm^2
 $16,7 \text{ W}$
 $2,8 \text{ } ^\circ\text{C/W}$

$500 \times 80 \times 2,5$
 400 cm^2
 12 W
 $3,9 \text{ } ^\circ\text{C/W}$

$500 \times 40 \times 2,5$
 $F = 200 \text{ cm}^2$
 $P_D = 3 \text{ W}$
 $R_{th} = 5,2 \text{ } ^\circ\text{C/W}$

$500 \times 30 \times 2,5$
 150 cm^2

$500 \times 20 \times 2,5$
 100 cm^2

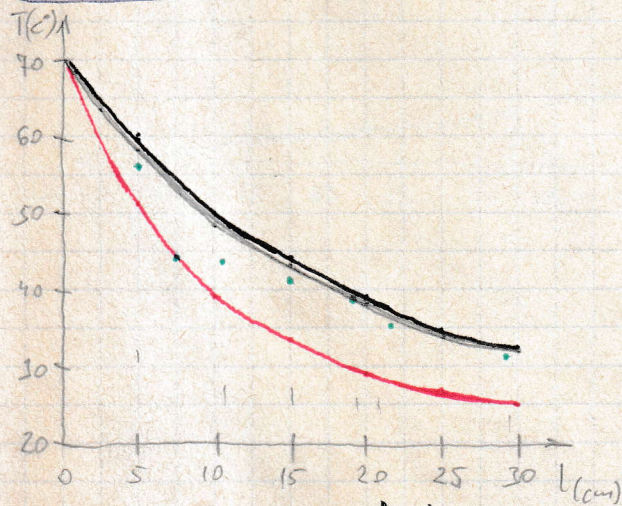

$65 \times 400 \times 2,5$
 11 W
 $4 \text{ } ^\circ\text{C/W}$

$65 \times 400 \times 2$
 $13,5 \text{ W}$
 $3,4 \text{ } ^\circ\text{C/W}$

$65 \times 400 \times 1$
 7 W
 $6,7 \text{ } ^\circ\text{C/W}$

$60 \times 400 \times 4$
 $17,2 \text{ W}$
 $2,78 \text{ } ^\circ\text{C/W}$

