




Emergency disarming DEFA Patriot 500/700 series.*

1. Unlock the car and open the door. The alarm will trigger!
2. Switch ON ignition and leave this ON.
3. Open the hood and wait until the siren has stopped (30 sec.).
4. Enter your Emergency disarming code on the siren.
5. The alarm system is now disarmed and the LED will flash slowly.

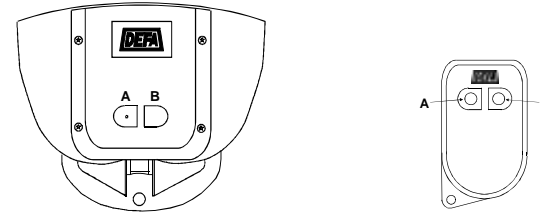

Initialisation of new remote controls DEFA Patriot 500/700 series. Version B, C and D.*

1. Be sure that the alarm is disarmed and that the LED **not** is blinking slowly. If it does use the Emergency disarming procedure (above) to disarm or to stop the LED!
2. Switch ON ignition and leave this ON.
3. Push A button on siren and keep it depressed until you get sound / light confirmation.
4. Push 3 short depressions on A button on the siren. Sound / light confirmation for each depression.
5. Push 1 short depressions on B button on the siren. 3 Sound / light confirmations.
6. Enter your Emergency disarming code on the siren. Sound confirmation for each depression. 3 Sound / light confirmations when correct Emergency code has been entered.
7. Push 1 short depression on A button on all remotes that shall be initialised to the alarm. Sound / light confirmation for each depression. Maximum numbers of transmitters that can be initialised is 4. All old transmitters will be erased from the memory.
8. Switch of ignition.

**To perform Emergency disarming or Initialisation of new remote controls must Emergency disarming code to the alarm system be available. Emergency disarming code is printed on the Emergency disarming card witch follows the alarm. The Emergency disarming card is the owners personal belonging and shall be protected against unauthorised copying.*