

4 Operating Instructions

4-1 Front View and Control

4-1-1 Front View

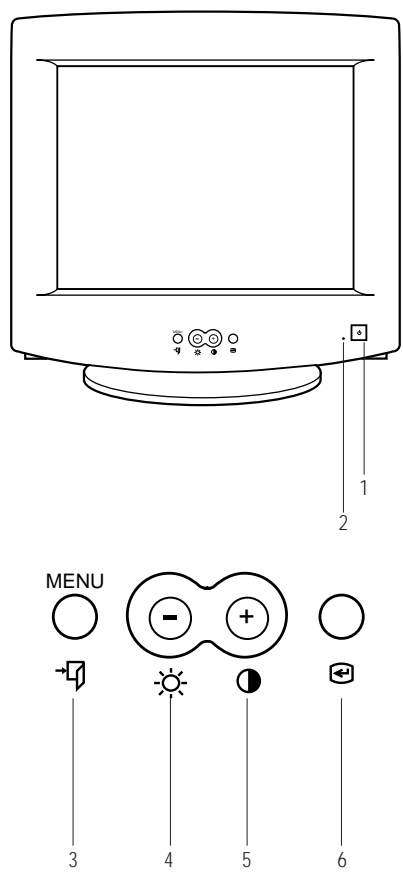


Figure 4-1. Front Control Panel

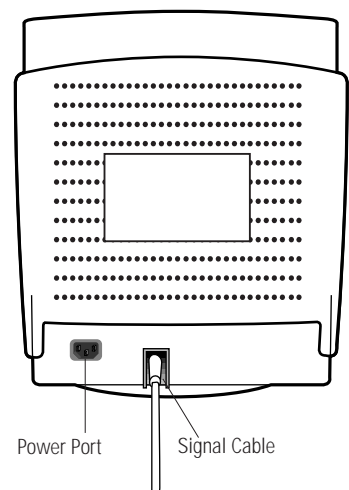


Figure 4-2. Rear View

Table 4-1. Front Panel Controls

Location	Symbol	Description
1		Power Button
2		Power Indicator LED (Dual Color)
3		Menu Display & Menu Exit
4		Down Button & Brightness
5		Up Button & Contrast
6		Menu Selector Enter Key

Note 1: This monitor requires a cable adapter for use with a Macintosh computer. The MacMaster Cable Adapter supports all monitors and all Macintosh, Centris, Quadra, Duo Dock, and Power Macintosh computers. If you do not already have a cable adapter, check with your computer dealer.

Note 2: When used with a computer equipped with VESA DPMS functions, this monitor is EPA Energy Star compliant and NUTEK compliant.

Table 4-2. Display Power Management Signaling (DPMS)

State Items	Normal Operation	Power saving function EPA/NUTEK		
		Stand-By Mode	Suspend Mode Position A	Power Off Mode Position B
Horizontal Sync	Active	Inactive	Active	Inactive
Vertical Sync	Active	Active	Inactive	Inactive
Video	Active	Blanked	Blanked	Blanked
Power Indicator	Green	Green Blinking (0.5 sec)	Green Blinking (0.5 sec)	Green Blinking (1 sec)
Power Consumption/hr (17")	90 W (max.) 78 W (nominal)	40 W (nominal)	Less than 15 W	Less than 5 W
Power Consumption/hr (16"/15")	80 W (max.) 70 W (nominal)	40 W (nominal)	Less than 15 W	Less than 5 W