




# ***LAW 420***

# ***LAW 520***

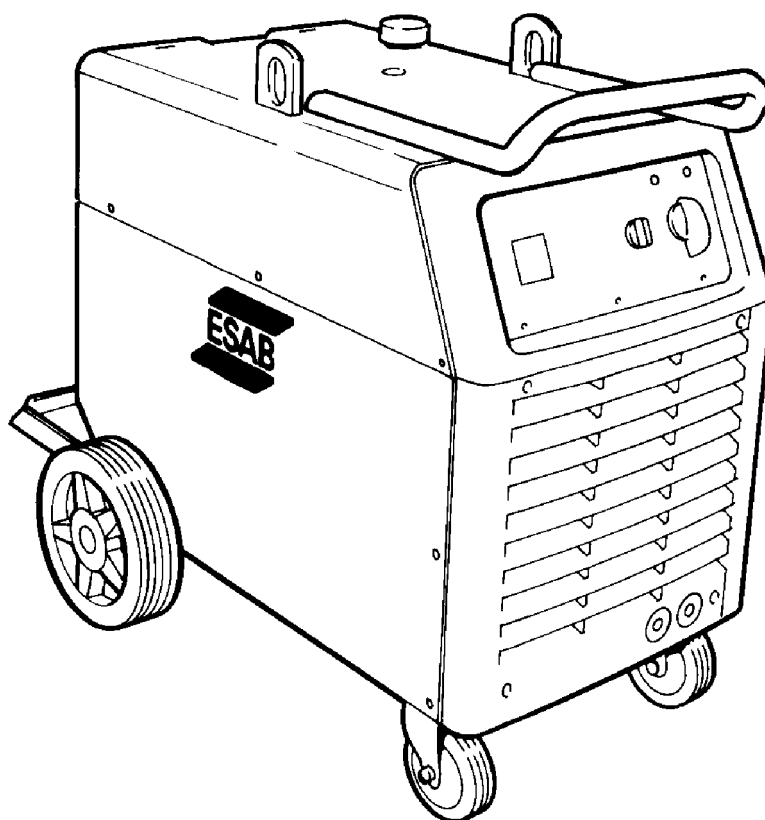

## **Service manual**

<b>LIST OF CONTENTS</b>	<b>Page</b>
<b>READ THIS FIRST</b> .....	<b>3</b>
<b>COMPONENT DESCRIPTION</b> .....	<b>4</b>
<b>CONNECTION DIAGRAM LAW 420/520; 400-415 V</b> .....	<b>6</b>
<b>CONNECTION DIAGRAM LAW 420/520; 230-500 V</b> .....	<b>8</b>
<b>DESCRIPTION OF OPERATION</b> .....	<b>11</b>
1 Power supply, circuit board AP1 .....	11
2 Display output .....	12
3 Machine type / Test input .....	13
4 Fixed / controlled firing angle .....	13
5 Synchronising .....	14
6 Thermal overload switch .....	14
7 Arc voltage input .....	15
8 Shunt input .....	16
9 Voltage reference .....	16
10 Crater filling .....	17
11 Start / Stop .....	17
12 Thyristor circuits .....	18
13 Processor .....	19
14 Presetting .....	20
15 Pulse welding .....	21
Component positions, circuit board AP1 .....	22
<b>SUPPRESSION CIRCUIT BOARD AP2</b> .....	<b>23</b>
<b>TEST ROUTINE</b> .....	<b>24</b>
<b>FITTING INSTRUCTIONS, THYRISTOR MODULES LAW 520</b> .....	<b>26</b>
<b>FITTING INSTRUCTIONS, THYRISTOR MODULES LAW 420</b> .....	<b>27</b>
<b>LOAD CHARACTERISTIC</b> .....	<b>28</b>
<b>TECHNICAL DATA</b> .....	<b>29</b>
<b>PRIMARY CONNECTIONS LAW 420/520 230 - 500 V</b> .....	<b>30</b>
<b>CONTROL PANEL AND CONNECTIONS</b> .....	<b>31</b>
<b>MAINTENANCE</b> .....	<b>31</b>
<b>LIFTING INSTRUCTION</b> .....	<b>31</b>
<b>ACCESSORIES</b> .....	<b>32</b>
<b>SPARE PARTS LIST</b> .....	<b>33</b>
<b>NOTES</b> .....	<b>44</b>

Rights reserved to alter specifications without notice.

---

## READ THIS FIRST

---

Maintenance and repair work should be performed by an experienced person, and electrical work only by a trained electrician. Use only recommended replacement parts.

This service manual is intended for use by technicians with electrical/electronic training for help in connection with fault-tracing and repair.

Use the connection diagram as a form of index for the description of operation. The circuit board is divided into numbered blocks, which are described individually in more detail in the description of operation. All component names in the connection diagram are listed in the component description.

This manual contains details of all design changes that have been made up to and including October 2001.

**The LAW 420 and LAW 520 are designed and tested in accordance with European standard EN 60974-1 and EN 50199.**  
**On completion of service or repair work, it is the responsibility of the person(s) etc. performing the work to ensure that the product does not depart from the requirements of the above standard.**



## WARNING



**ARC WELDING AND CUTTING CAN BE INJURIOUS TO YOURSELF AND OTHERS. TAKE PRECAUTIONS WHEN WELDING. ASK FOR YOUR EMPLOYER'S SAFETY PRACTICES WHICH SHOULD BE BASED ON MANUFACTURERS' HAZARD DATA.**

**ELECTRIC SHOCK - Can kill**

- Install and earth the welding unit in accordance with applicable standards.
- Do not touch live electrical parts or electrodes with bare skin, wet gloves or wet clothing.
- Insulate yourself from earth and the workpiece.
- Ensure your working stance is safe.

**FUMES AND GASES - Can be dangerous to health**

- Keep your head out of the fumes.
- Use ventilation, extraction at the arc, or both, to keep fumes and gases from your breathing zone and the general area.

**ARC RAYS - Can injure eyes and burn skin.**

- Protect your eyes and body. Use the correct welding screen and filter lens and wear protective clothing.
- Protect bystanders with suitable screens or curtains.

**FIRE HAZARD**

- Sparks (spatter) can cause fire. Make sure therefore that there are no inflammable materials nearby.

**NOISE - Excessive noise can damage hearing**

- Protect your ears. Use ear defenders or other hearing protection.
- Warn bystanders of the risk.

**MALFUNCTION - Call for expert assistance in the event of malfunction.**

**READ AND UNDERSTAND THE INSTRUCTION MANUAL BEFORE INSTALLING OR OPERATING.**

**PROTECT YOURSELF AND OTHERS!**

---

## COMPONENT DESCRIPTION

---

The LAW welding rectifiers are 6-pulse thyristor rectifier units intended for semi-automatic welding. They are available for different mains voltages and with or without integral cooling units: see the table in the spare parts list on page NO TAG. The component description below refers to the electrical circuit diagrams on page 6 to 9.



### WARNING !

**STATIC ELECTRICITY can damage circuit boards and electronic components.**

- Observe precautions for handling electrostatic sensitive devices.
- Use proper static-proof bags and boxes.


<b>AP1</b>	Circuit board with control electronics: see the description on page 11.
<b>AP2</b>	Suppression circuit board, see circuit diagram on page 23.
<b>C1</b>	Capacitor, 3 $\mu$ F 400 V. Start and run capacitor for fan motor EV1.
<b>C2-C4</b>	Suppression capacitors 0.1 $\mu$ F 250 V.
<b>C5</b>	Capacitor, 5 $\mu$ F 400 V. Start and run capacitor for pump motor M1. Only machines with water cooler.
<b>C6</b>	Capacitor, 6 $\mu$ F 400 V. For speed reduction of the cooling fan.
<b>EV1</b>	Fan
<b>FU1</b>	Circuit breaker, 10 A. Protects the 42 V supply to the wire feed unit.
<b>HL1</b>	Indicating lamp, 42 V, white. Lights when switch QF1 is in the ON position.
<b>KM2</b>	Contactor 42 V 50 Hz. For speed control of the fan: see ST2 below.
<b>L1</b>	Interphase transformer. <b>When connecting the interphase transformer to the inductor, it is important that all parts are fitted exactly as shown in Figure A on page 39.</b>
<b>L2</b>	Inductor. <b>When connecting the inductor, it is important that all parts are fitted exactly as shown in Figures A, C and D on page 39.</b>
<b>M1</b>	Pump motor, 230 V 50 Hz 0.2 kW. Only machines with water cooler.
<b>P1</b>	Digital display. Accessory, see the list on page 32. The instrument is described in the service manual for the wire feeder MEK 4.
<b>QF1</b>	Main ON/OFF switch.
<b>QF2</b>	Cooling water pump switch. Only on machines with water cooler.
<b>RS1</b>	Shunt, 60 mV / 600 A
<b>ST1</b>	Thermal switch. Protects the machine against excessive temperature. See the function description, item 6, on page 14.

**ST2** Thermal switch. Controls the speed of fan motor EV1. The switch closes when the temperature exceeds 80 °C, energising contactor KM2. This short-circuits capacitor C6, allowing the fan to run at full speed. The switch opens when the machine temperature has fallen to 60 °C.


LAW 420: ST2 is fitted in the interphase transformer winding, L1.

LAW 520: ST2 is fitted in the inductor winding, L2.

**TC1** Control power supply transformer for LAW with 400-415V mains voltage. Transformer with fuses introduced from ser. no. 912-031-xxxx.

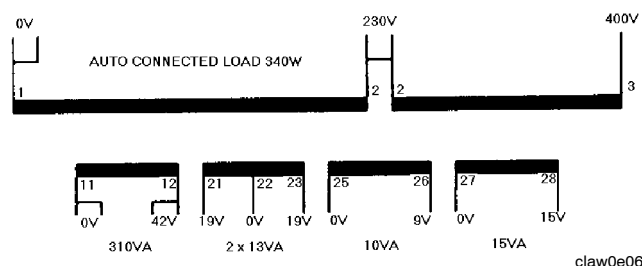

**TC1** Control power supply transformer for LAW with 230-500V mains voltage. Transformer with fuses introduced from ser. no. 912-031-xxxx.

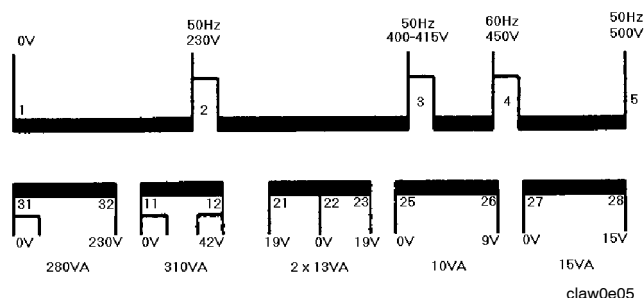

**TM1** Main transformer. Connection instructions for the LAW 420 and LAW 520 with 230 - 500 V mains connection are on page 30.

**V1-V6** Thyristor module. See the fault-tracing instructions on page 18 and the fitting instructions on page 26.

**V7** LED, yellow. Lights to indicate operation of the thermal cutouts.

**XS1** Connector, 23-pole. For connection to/from the wire feed unit.

**XS2-XS4** Main welding current contact, single-pole.

**XS5-XS8** Sleeve contacts

**XS9** 4-pole contact. Only on the LAW 520.


**XS10-XS15** Sleeve contacts

**XT1** 9-pole terminal block. Only on machines with 230 - 500 V mains connection. See the connection instructions on page 30.

**XT2** 3-pole terminal block.

**Z1-Z6** RC filter.


# CONNECTION DIAGRAM LAW 420/520; 400-415 V

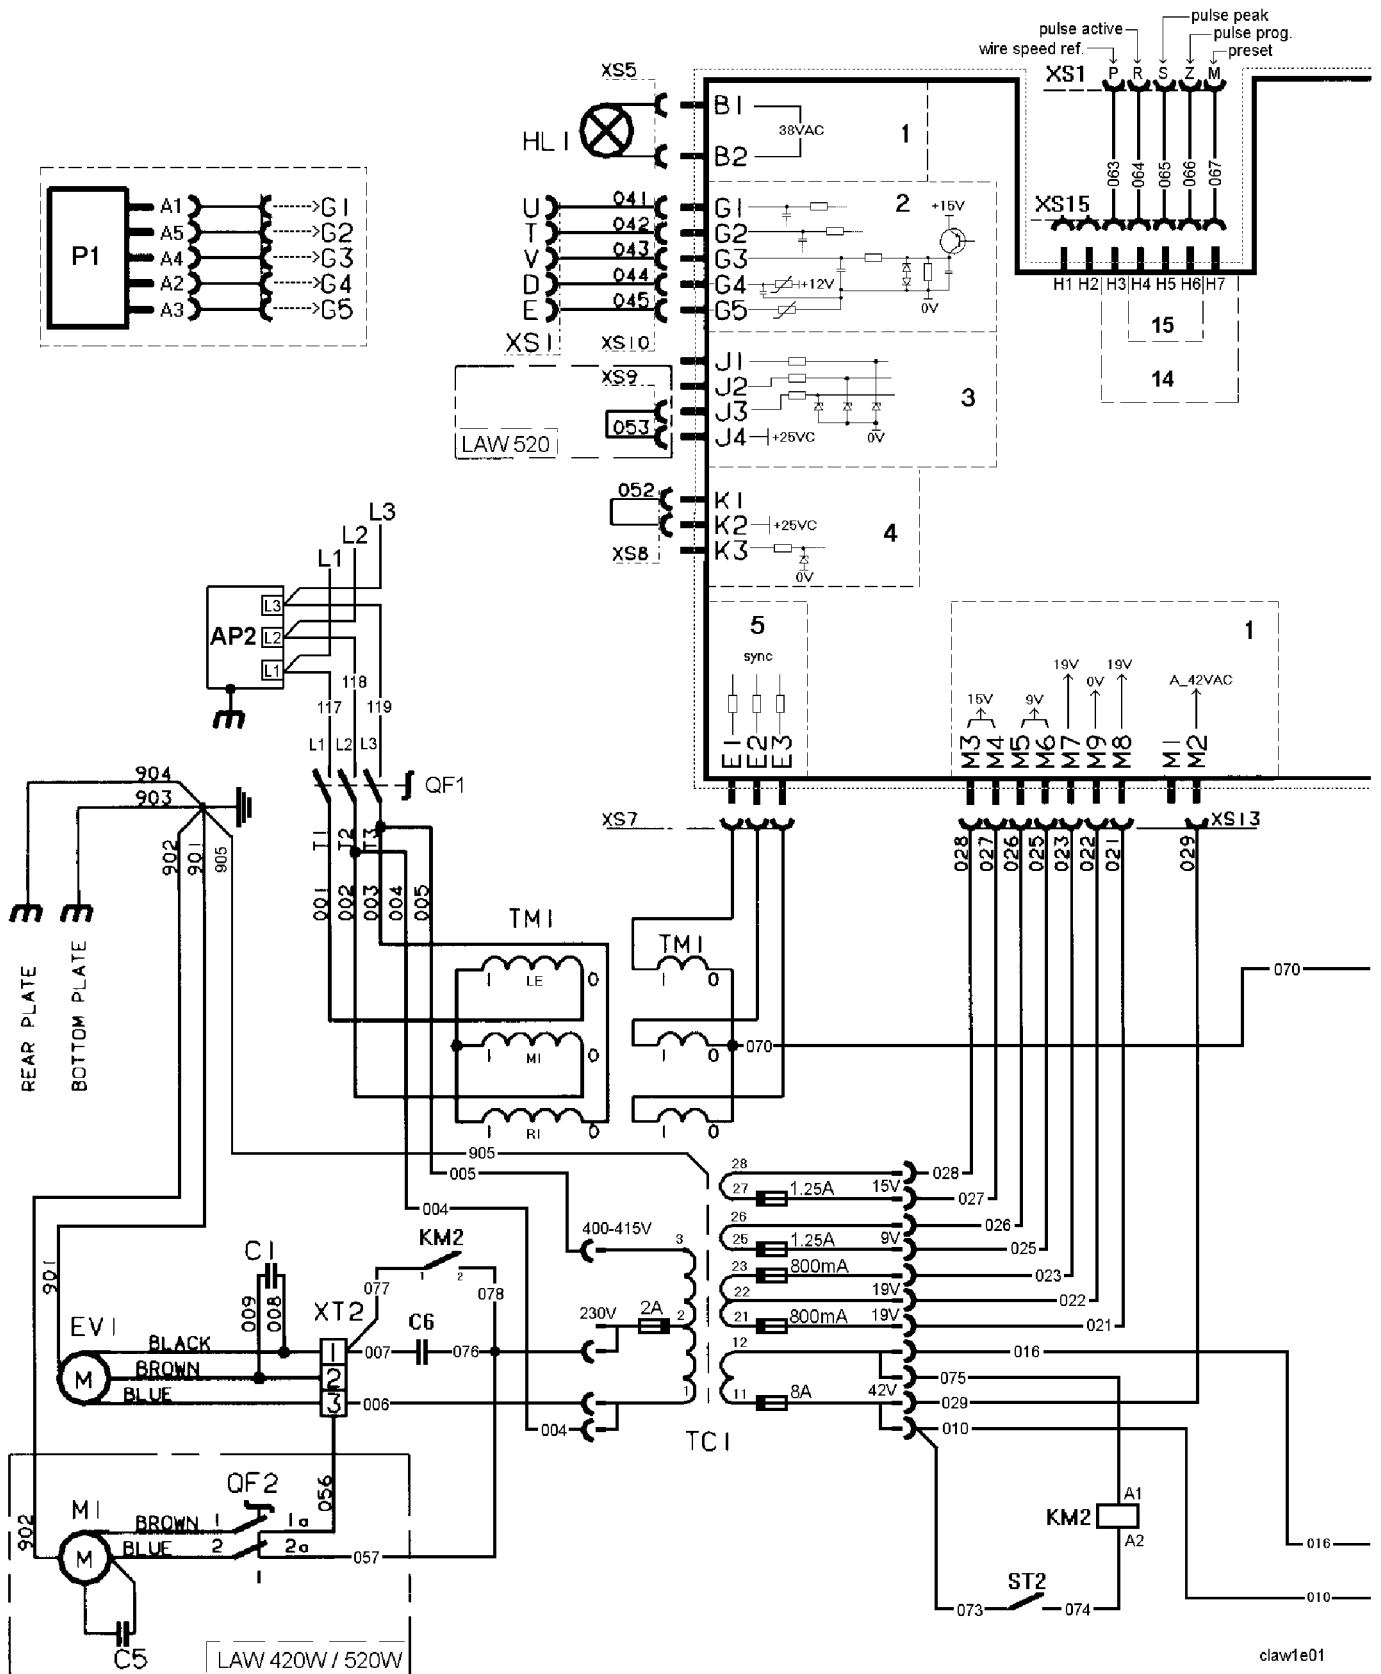

claw1e01




## CONNECTION DIAGRAM LAW 420/520; 230-500 V

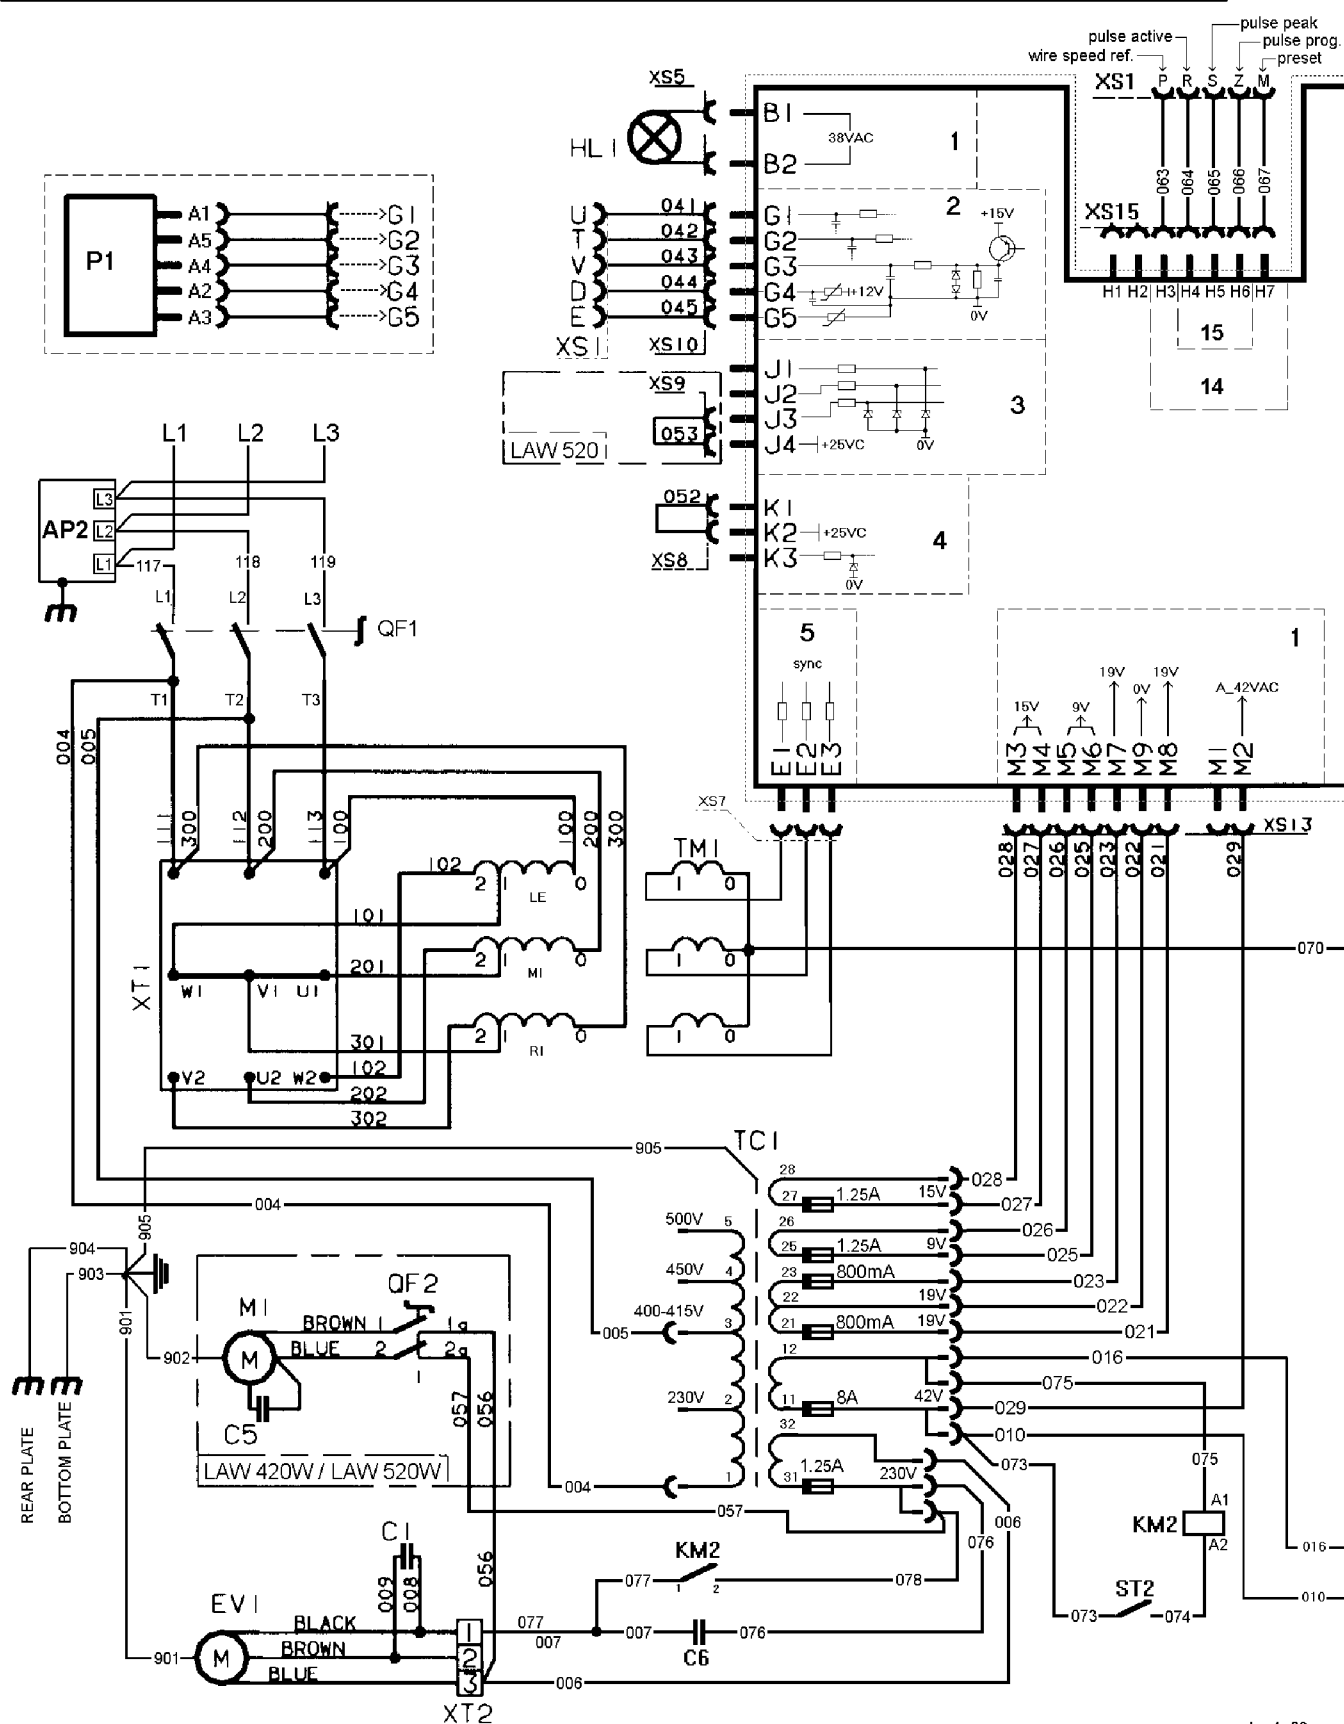

Terminal block XT1 and transformer TC1 are connected for 400 - 415 V 50 Hz: see the connection instructions on page 30.



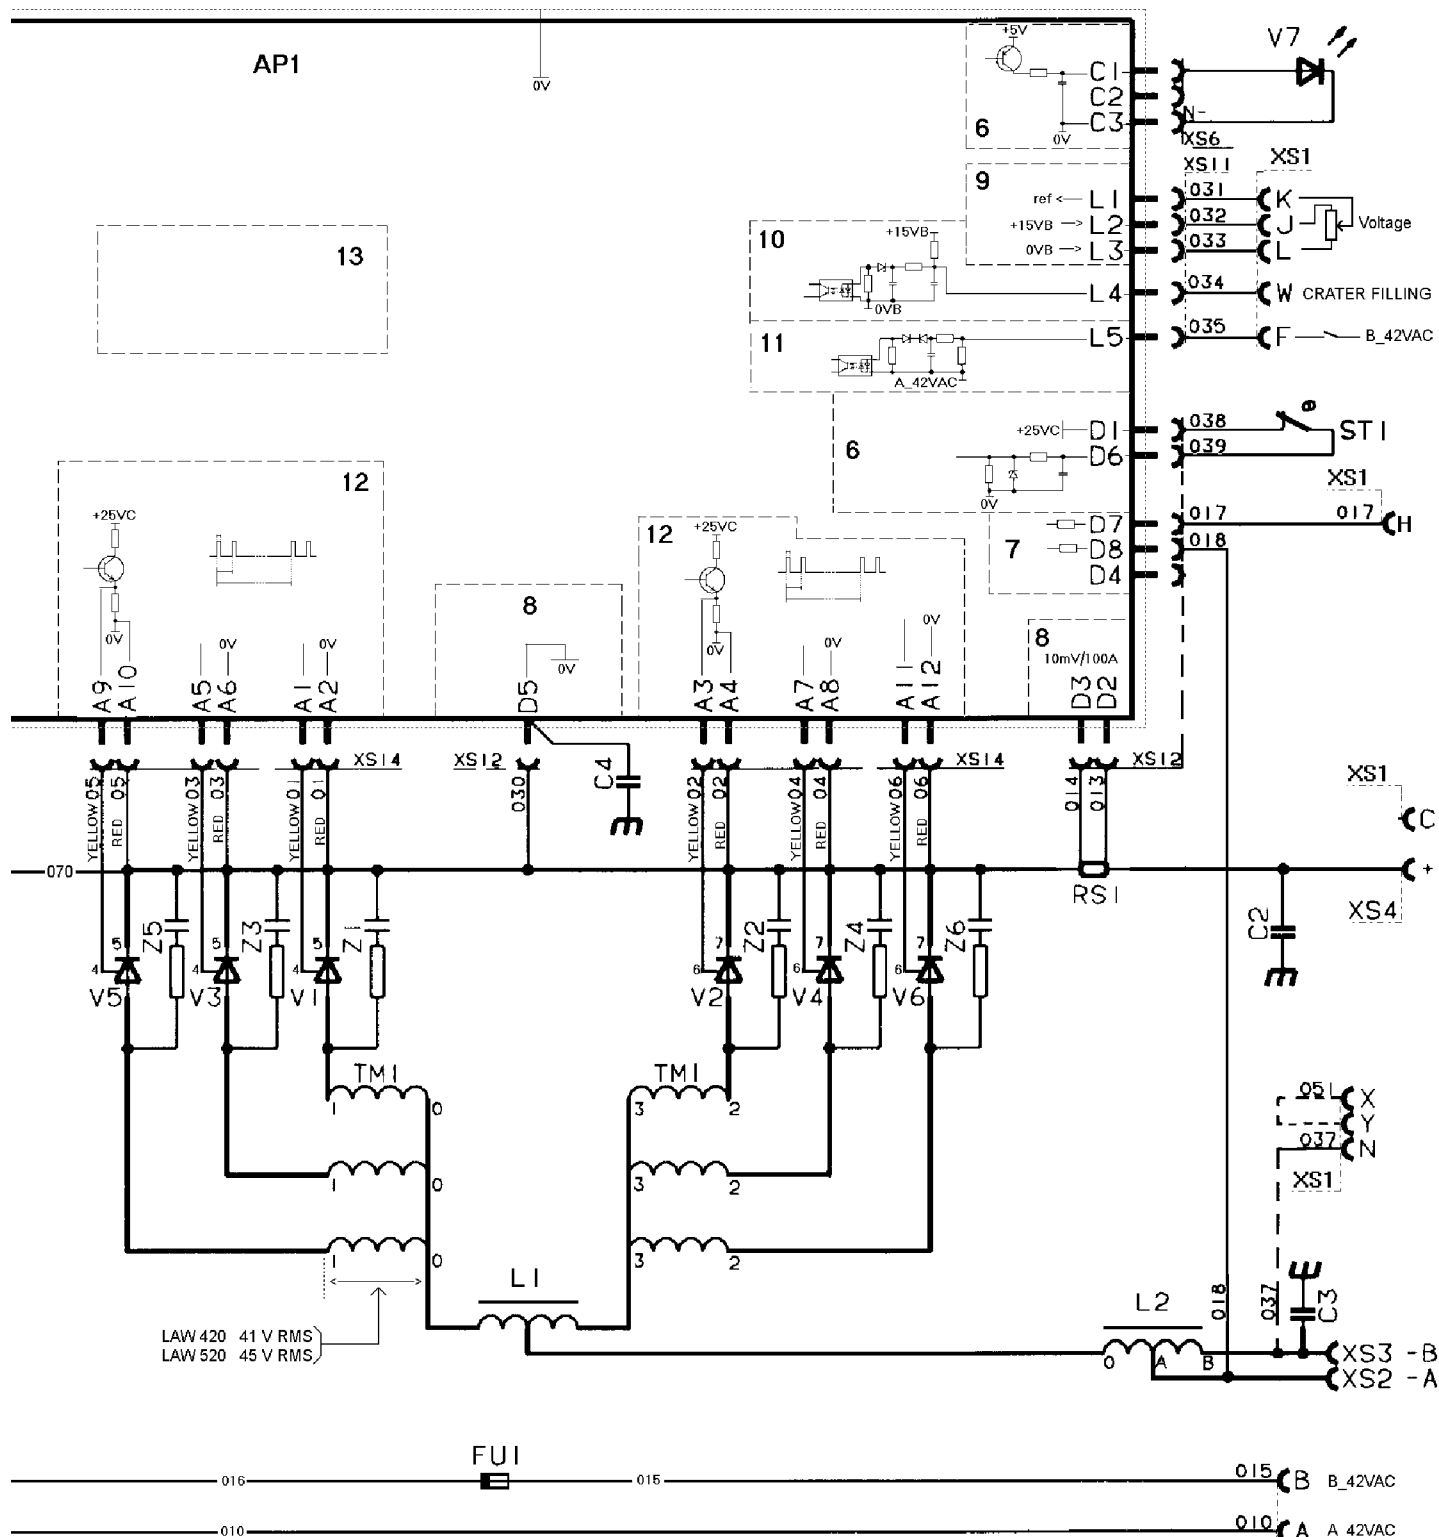




# DESCRIPTION OF OPERATION

Sections 1 - 15 below refer to the diagrams on pages 6 to 9.

The circuit board is screened by a screened enclosure that is connected to 0 V on the circuit board.

The component position drawing on page 22 also shows components that are not fitted to the circuit board. These components are not used in the LAW power units.

## 1 Power supply, circuit board AP1

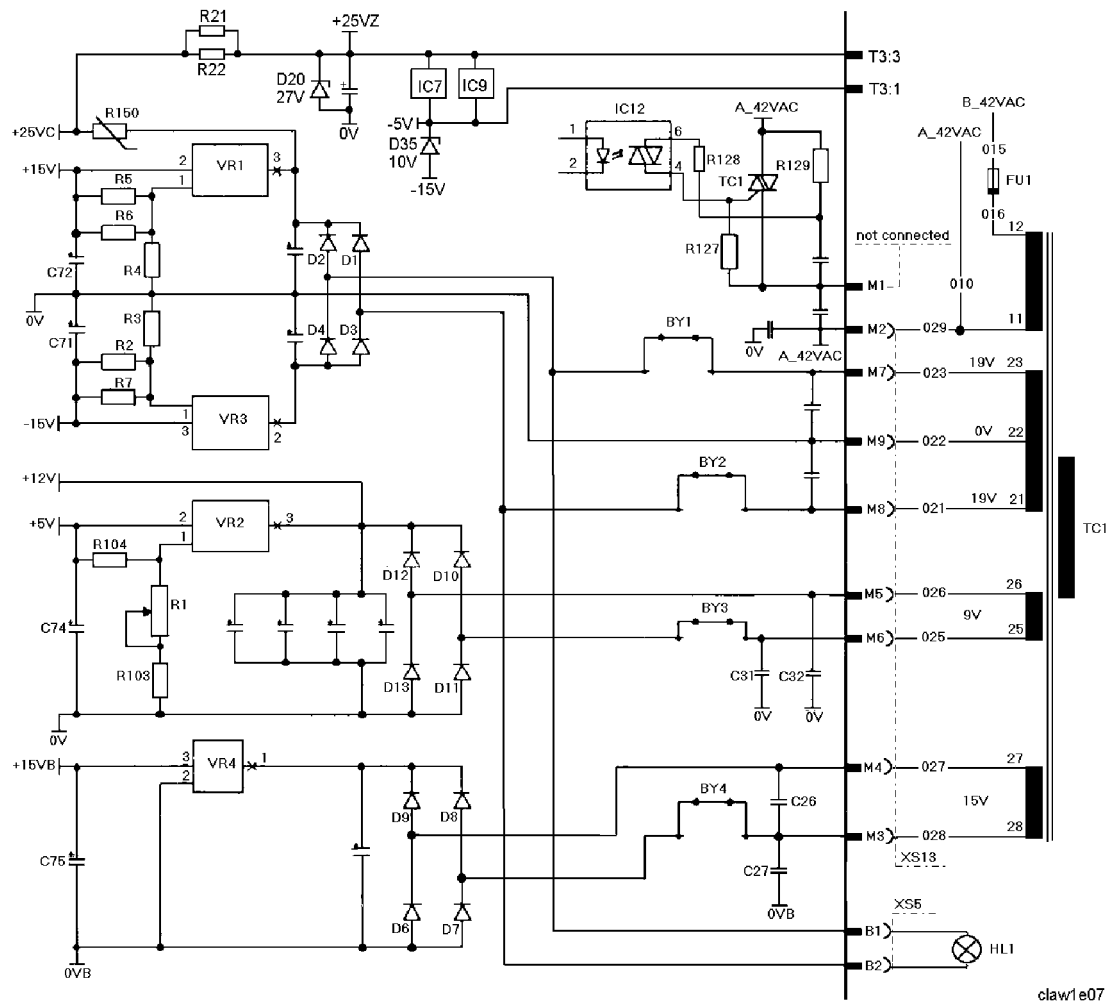

The power supplies from transformer TC1 to the circuit board are prepared for fitting PTC resistors, but are now fitted with links BY1 - BY4.

The power supply supplies the following DC voltages :  
+25 VC, +25 VZ,  $\pm 15$  V, +15 VB, +5 V and +12 V.

### +5V

Internal power supply on the circuit board. Voltage regulator VR2 is adjustable: the voltage is adjusted to  $5.00 \pm 0.01$  V when the board is manufactured.

### +12V

Power supply to the display board and for loss of voltage detection.  
See also Items 2 and 13 below.

### **+15VB**

Power supply to circuits that are galvanically or high- resistance separated from other electronics on the circuit board.

### **+/-15V**

Internal power supply for the circuit board.


### **+25VC**

Internal power supply for the circuit board, protected by a PTC resistor, R150. The resistance value of this resistor increases in the event of current overload.

### **+25VZ**

Internal power supply for the circuit board. Supplies IC7 and IC9 and the reset circuit for the gate pulses. See item 12 on page 18.


## **2 Display output**

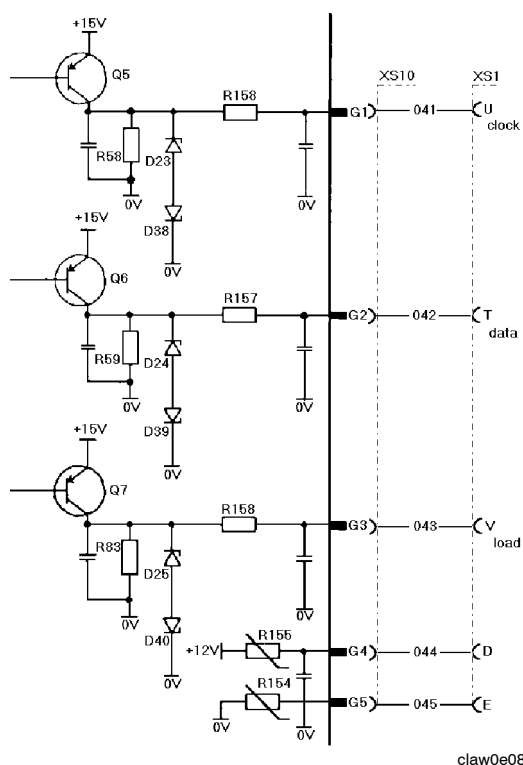

Outputs G1 - G3 are used for serial data transfer of the welding current and arc voltage to a digital display instrument, which may be fitted either in the power unit or in the wire feed unit. The instrument is described in the service manuals for the wire feeders MEK 4/20 and MEK 4S/4SP.

Outputs G4 and G5 supply +12 V to the instrument. This supply is protected by PTC resistors R155 and R154. The resistors protect the circuit board against short circuits to arc voltage or against other voltages occurring in the control cable to the wire feed unit.

### 3 Machine type / Test input

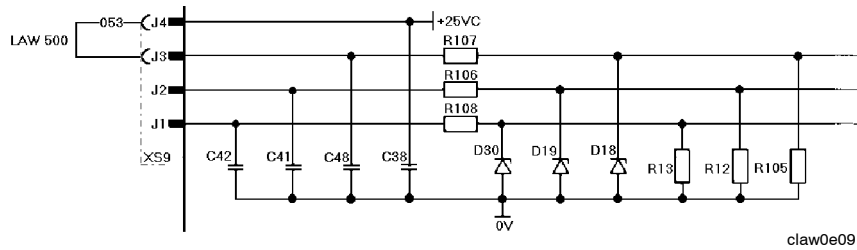


J3 and J4 must be linked in the LAW 520: if the link is removed, the machine will operate as an LAW 420. **But never link J3 and J4 in an LAW 420.**

#### *Test input*

Use the test inputs to test the performance of several input and output signals on the circuit board. See the description on page 24.

### 4 Fixed / controlled firing angle

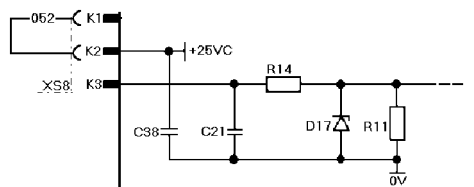

When K2 and K3 are linked, the machine operates with a fixed thyristor firing angle. When K1 and K2 are linked, the machine operates with a controlled (variable) thyristor firing angle.


A fixed thyristor firing angle means that the thyristor output is affected only by the setting of the voltage control potentiometer.

A controlled (variable) thyristor firing angle means that the thyristor output is also affected by the actual value of the arc voltage (arc voltage control). This means that the machine compensates for variations in mains supply voltage.

It is only possible to change between controlled and fixed thyristor firing angle when the machine is switched off.

LAW 420/520 **must** be used with controlled thyristor firing angle.


## 5 Synchronising

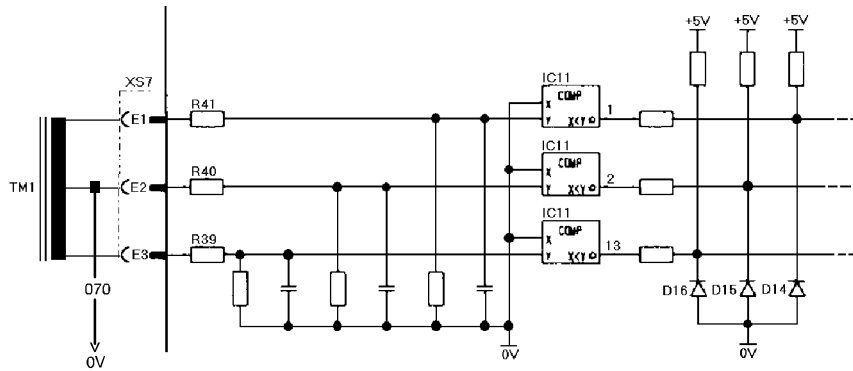

claw0e11

Firing is synchronised to the mains by three zero crossing detectors, IC11;1, IC11;2 and IC11;13. The voltage between the phases at inputs E1, E2 and E3 is about 19 V in the LAW 420 and about 25 V in the LAW 520.

## 6 Thermal overload switch

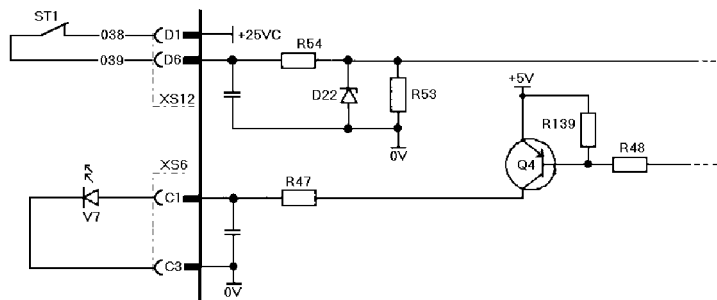

claw0e12

LED V7 lights if the cutout operates. When the cutout operates the thyristor ignition pulses will be blocked.


### LAW 420:

The thermal overload cutout, ST1, is fitted in the interphase transformer winding, L1. It opens at a temperature of 140 °C, and closes at 110 °C.  
(Ordering no. for ST1: 0320 655 012)

### LAW 520:

The thermal overload cutout, ST1, is fitted in the inductor winding, L2. It opens at a temperature of 160 °C, and closes at 130 °C.  
(Ordering no. for ST1: 0320 655 013)

## 7 Arc voltage input

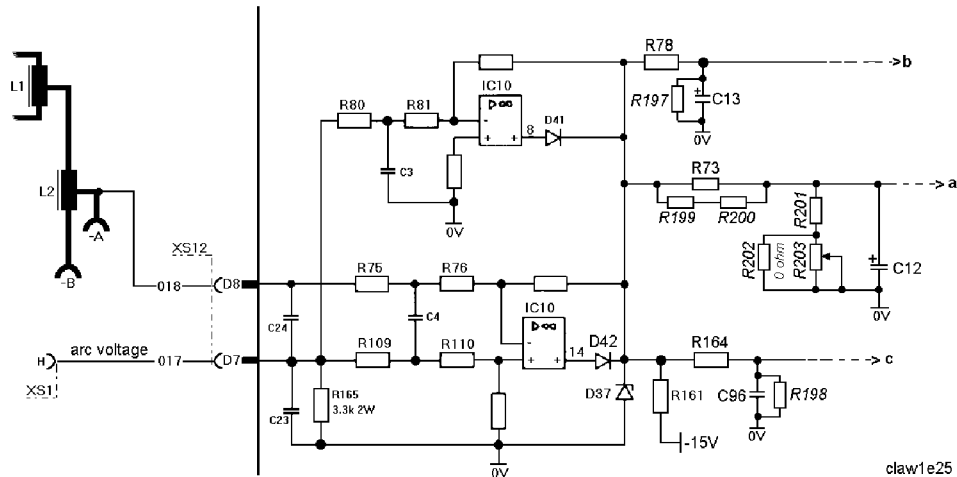

Inputs D7 and D8 measure the arc voltage between the welding wire and one welding terminal on the power unit, regardless of the polarity of the welding wire (positive or negative).

### If the welding wire is negative:

The upper amplifier in IC10 is active, measuring the arc voltage between the positive terminal of power unit (0V) and the welding wire (XS1;H).

### If the welding wire is positive:

The lower amplifier in IC10 is active, measuring the arc voltage between the negative terminal of power unit (inductor terminal A) and the welding wire (XS1;H).

If there is no connection between D7 and the welding wire, the arc voltage will be measured between the positive terminal of power unit (0V) and inductor terminal A.

Time constants are as follows:


- **a** 0.5 s for arc voltage readout on the digital display.
- **b** 22 ms, arc voltage feedback, for control purposes.
- **c** 1 ms for detection of cessation of short-circuiting.

This signal is used at welding start and for control purposes. If short circuits of longer duration occurs this signal acts together with the overload protection, see: 8 Shuntinput on next page.

It is possible to adjust the arc voltage signal to the digital instrument.

When trimming signal **a**, first remove R202 (0  $\Omega$ ), then you can adjust the signal with potentiometer R203. If you want to decrease the signal, you also have to remove R200.

## 8

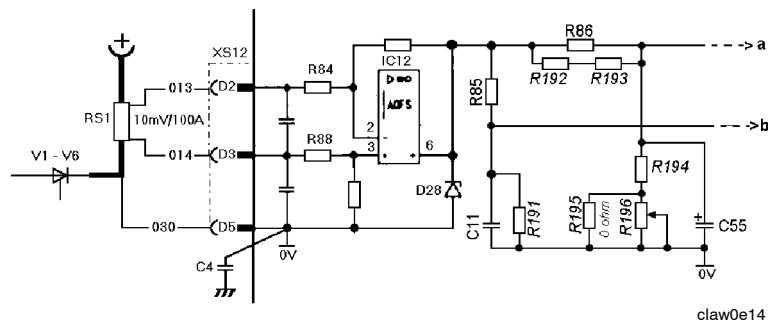

Shunt RS1 provides a 10 mV signal at 100 A. The shunt voltage is linear in relation to the current through the shunt. IC12 amplifies the shunt signal voltage. The shunt signal voltage is connected to the processor via two different time constants:


- **a** A time constant of 0.5 s, for indication of the welding current on the digital display.
- **b** A time constant of 7.26 ms for overload protection.  
See below under Item 13.

The electronic neutral, 0 V, is connected to the positive welding current pole via contact D5. Capacitor C4, which is connected to the case screen, decouples interference to the machine case.

It is possible to adjust the shunt signal voltage **a** to the digital instrument.

When trimming signal **a**, first remove R195 (0  $\Omega$ ), then you can adjust the signal with potentiometer R196. If you want to decrease the signal, you also have to remove R193.


## 9

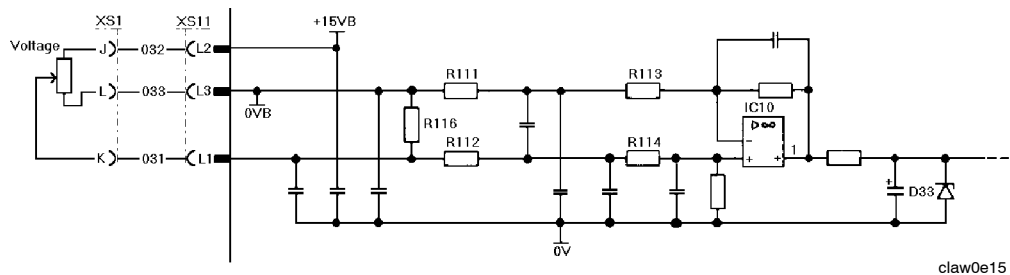

The voltage reference potentiometer is fitted in the wire feed unit. The power supply to the potentiometer, +15 VB, is protected against short circuits to the arc voltage.



## 10 Crater filling

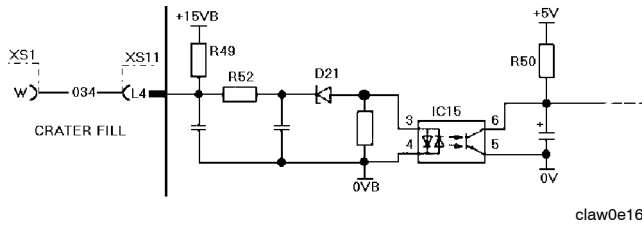

The crater filling function can be used only with an MEK 4, 4S, 4SP or MEK 20 wire feed unit. When the wire feed unit sends a crater fill signal to the power unit, input L4 switches high and low four times.

Each time that the voltage changes, the welding voltage is reduced. The table below shows the percentage of the set voltage at each step, together with the corresponding L4 signal levels.


Normal crater filling			Crater filling during pulse welding (only with MEK 4SP)					
Phase	L4	%	Phase	L4	%Utop	Phase	L4	%Ub
1	low	90	1	low	80	1	low	87
2	high	72	2	high	62	2	high	70
3	low	65	3	low	55	3	low	63
4	high	58	4	high	40	4	high	55

In the table above Utop is the pulse voltage and Ub is the background voltage.

Each step lasts for a maximum of 1.27 seconds.


See the MEK 4/20 and MEK 4S/SP service manuals for further information.

## 11 Start / Stop

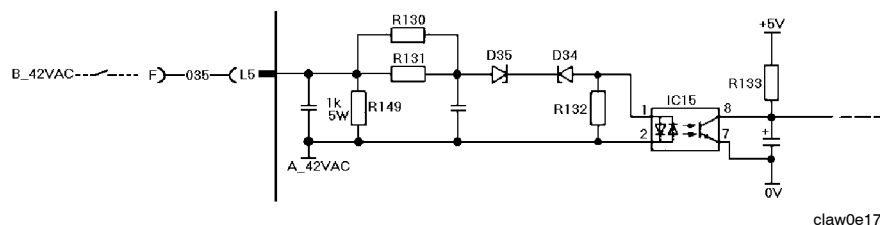

The closing contact in the MEK wire feeders that activates the power unit start input is a triac. In order to ensure that it has sufficient holding current, resistor R149 provides a load of 1 k $\Omega$  5 W at input L5.

## 12 Thyristor circuits

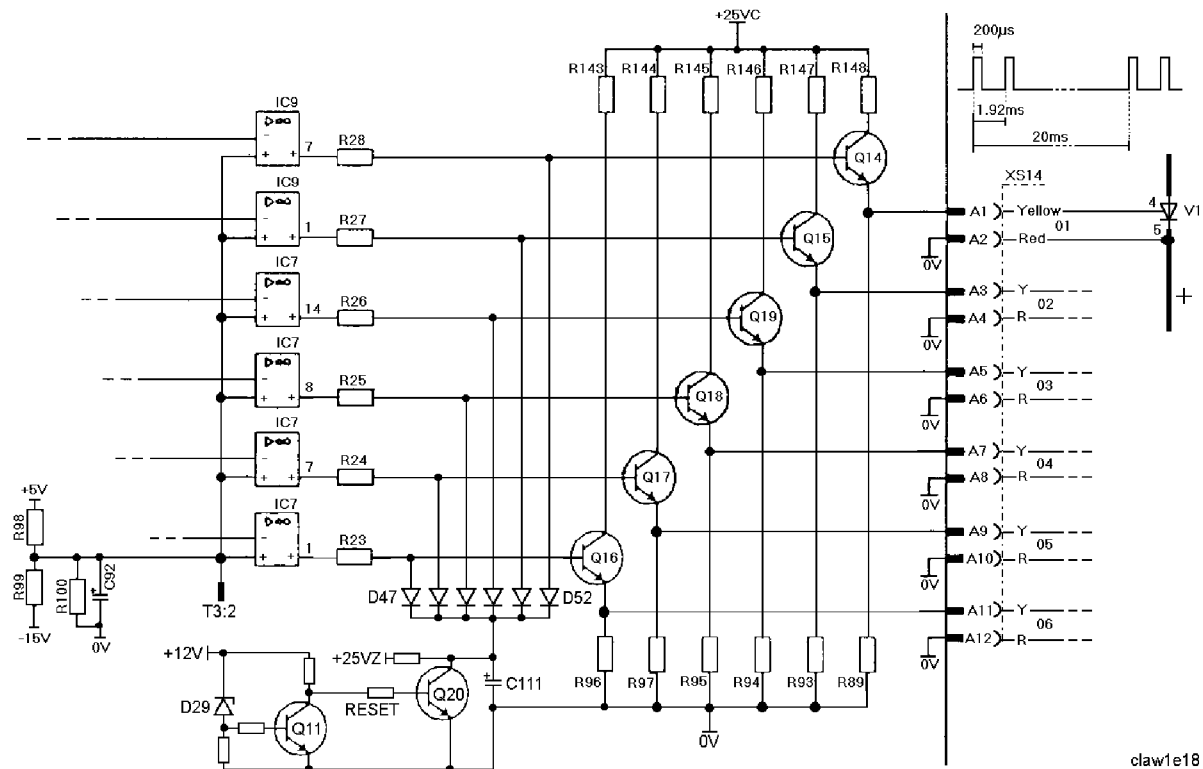

The thyristor firing circuits consist of operational amplifiers IC7 and IC9. Their inverting inputs are connected to the processor and their non-inverting inputs are connected to a fixed voltage of 1.35 V.

If the +5 V power supply is lost, potential divider R99 - R100 pulls the input voltage to the non-inverting inputs down to -0.3 V, thus disabling the firing pulses.

During the first moment of mains power connection the firing circuits are blocked by a reset signal from transistor Q20.

Resistors R143 - R148 limit the thyristor gate currents to about 1.3 A.

In order to make sure that the thyristors always fire, each firing pulse is duplicated. The peak value of the firing voltage is about 22 V when the thyristors are disconnected. **Never** disconnect individual thyristors, as this can unbalance the thyristor bridge and destroy other thyristors.

If a thyristor fails, always check the gate pulses before starting up the new thyristors. If a thyristor has short-circuited, the other thyristors will also have been damaged, which can reduce their lives. If one thyristor has failed, all should be replaced.

### Checking the thyristors

Remove connector XS14 from the circuit board. Open the cover over the thyristors (see item 401 on page 41). Remove the screws that connect the shunt (= the cathode connection) to the thyristors and insert a piece of paper between the shunt and the thyristor cathodes. Measure the resistance of the thyristors with a DMM. The gate and cathode can be tested at connector XS14.

Make each measurement in both directions of polarity (i.e. reverse the test connections from the DMM). The measured values must be in the range as shown below, regardless of polarity.

- Gate - cathode: 5 - 40  $\Omega$
- Anode - cathode: not less than 10 k $\Omega$
- Anode - gate: not less than 10 k $\Omega$

## 13 Processor


In addition to the features already described, the processor performs the following functions :

- ***Frequency measurement***  
Measures the mains frequency when the unit is turned on. If the frequency is either  $50 \pm 4$  Hz or  $60 \pm 4$  Hz, the processor starts the main program. If the frequency is not within the tolerances, the main program that controls the machine will not start.
- ***Voltage monitoring***  
By sensing that the power supply, +12 V, to the main electronics board is present, the processor monitors the power supply to the board. If the supply is lost, the main program stops. When the supply returns, the program starts. See 'Frequency measurement', above.
- ***Overload protection***  
The LAW 400/410 and LAW 500/510 have average current limits, known as slow overload trips, at 412 A and 516 A respectively.
- ***Short-circuit protection***  
Both machines incorporate short-circuit protection (fast current trip), set at 750 A.
- ***Firing pulses***  
The processor generates firing pulses as required by the set welding voltage. Pulses are duplicated in order to prevent any misfiring of the thyristors.
- ***Display management***  
The processor supplies information on the welding voltage and welding current to the digital display instrument.
- ***Crater filling***  
Reduces the arc voltage when the wire feed unit calls for crater filling.
- ***Test routine***  
Controls the test routines, described on page 24.
- ***Elevated starting voltage (Hot Start)***  
The starting voltage in the LAW 420 is 30% higher than the set voltage, and in the LAW 520 is it 20% higher than the set voltage. Arc voltage control comes into operation 300 ms (50 ms when pulsing) after the arc strikes, which reduces the arc voltage to the set value.

The machines are supplied with controlled thyristor firing angle in operation. If the machine is operating with a fixed thyristor firing angle, the hot start feature is inactive, see page 13.

## 14 Presetting


### *Preset XS1;M*

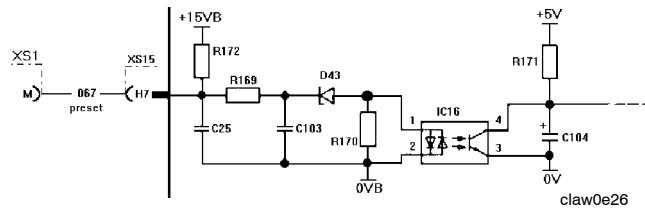

This input is used only when an MEK 4S or MEK 4SP wire feed unit is connected to the LAW power unit.

The wire feed unit has a switch that the welder uses when he wants to see set values for wire feed speed and voltage instead of measured values of welding current and arc voltage. When the switch on the wire feed unit is closed, circuit board input H7 is connected to 0 VB.

### *Wire feed speed reference XS1;P*

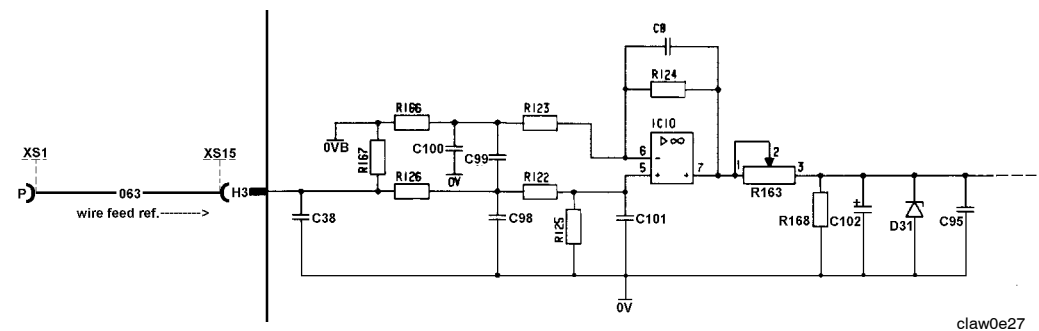

This input is used only when an MEK 4S or MEK 4SP wire feed unit is connected to the LAW power unit.

The wire feeder sends an analogue wire feed speed signal to the LAW for display in the digital display.

The input also senses if an MEK 4S/SP is connected. Scaling of the voltage reference changes if an MEK 4S/SP is connected, relative to the scaling used if MEK 4 or MEK 20 is connected.

The input on the circuit board is adjusted by means of potentiometer R163 so that a voltage of 12.40 V at terminal H3 produces a voltage of  $5.00 \pm 0.005$  V across diode D31.

## 15 Pulse welding


Pulse welding can only be performed with the LAW 420/520 when used together with wire feed unit MEK 4SP.

There is only one voltage reference from the wire feed unit to the power source. However, two different voltage reference signals are needed for pulsing: one for the peak voltage ( $U_{top}$ ) and one for the background voltage ( $U_b$ ).

As  $U_{top}$  is always the same within the same synergy line, the wire feed unit sends the peak voltage reference signal to the power unit immediately when a pulsed synergy line has been selected, and it is then stored in memory in the power unit. The wire feed unit then transmits  $U_b$  continuously to the power unit as long as welding continues on the same synergy line.

$U_{top}$  is transmitted from the feed unit for about 300 ms, when a pulsed synergy line is selected.

The pulse frequency is 42.8 Hz and controlled by the power source.

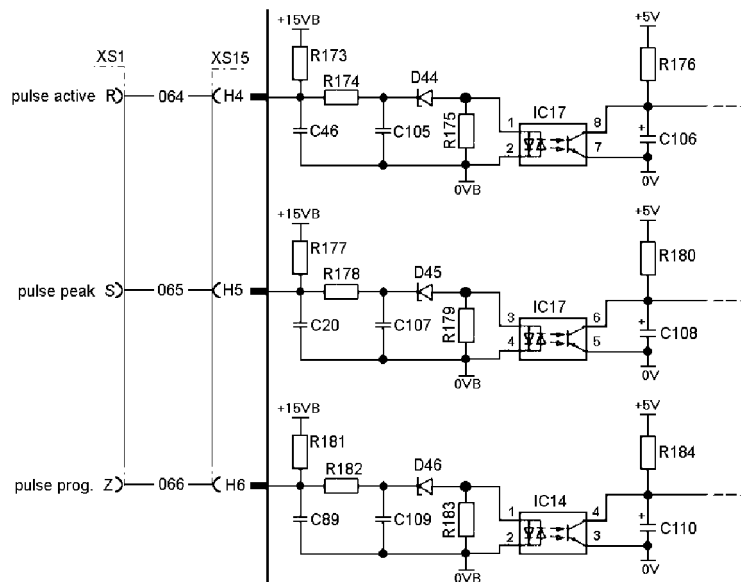

### *Input H4 pulsing signal*

The pulsing signal, H4, tells the power unit that pulsing has been selected. H4 goes low (0 VB) when pulsing has been selected.


### *Input H5 pulse voltage signal*

H5 goes low (0 VB) for about 300 ms when the  $U_{top}$  voltage reference signal is transmitted from the feed unit.

### *Input H6 pulse programming signal*

H6 goes low (0 VB) when custom synergy lines are being constructed in the pulse mode. See the programming description in the MEK 4SP service manual.


# Component positions, circuit board AP1

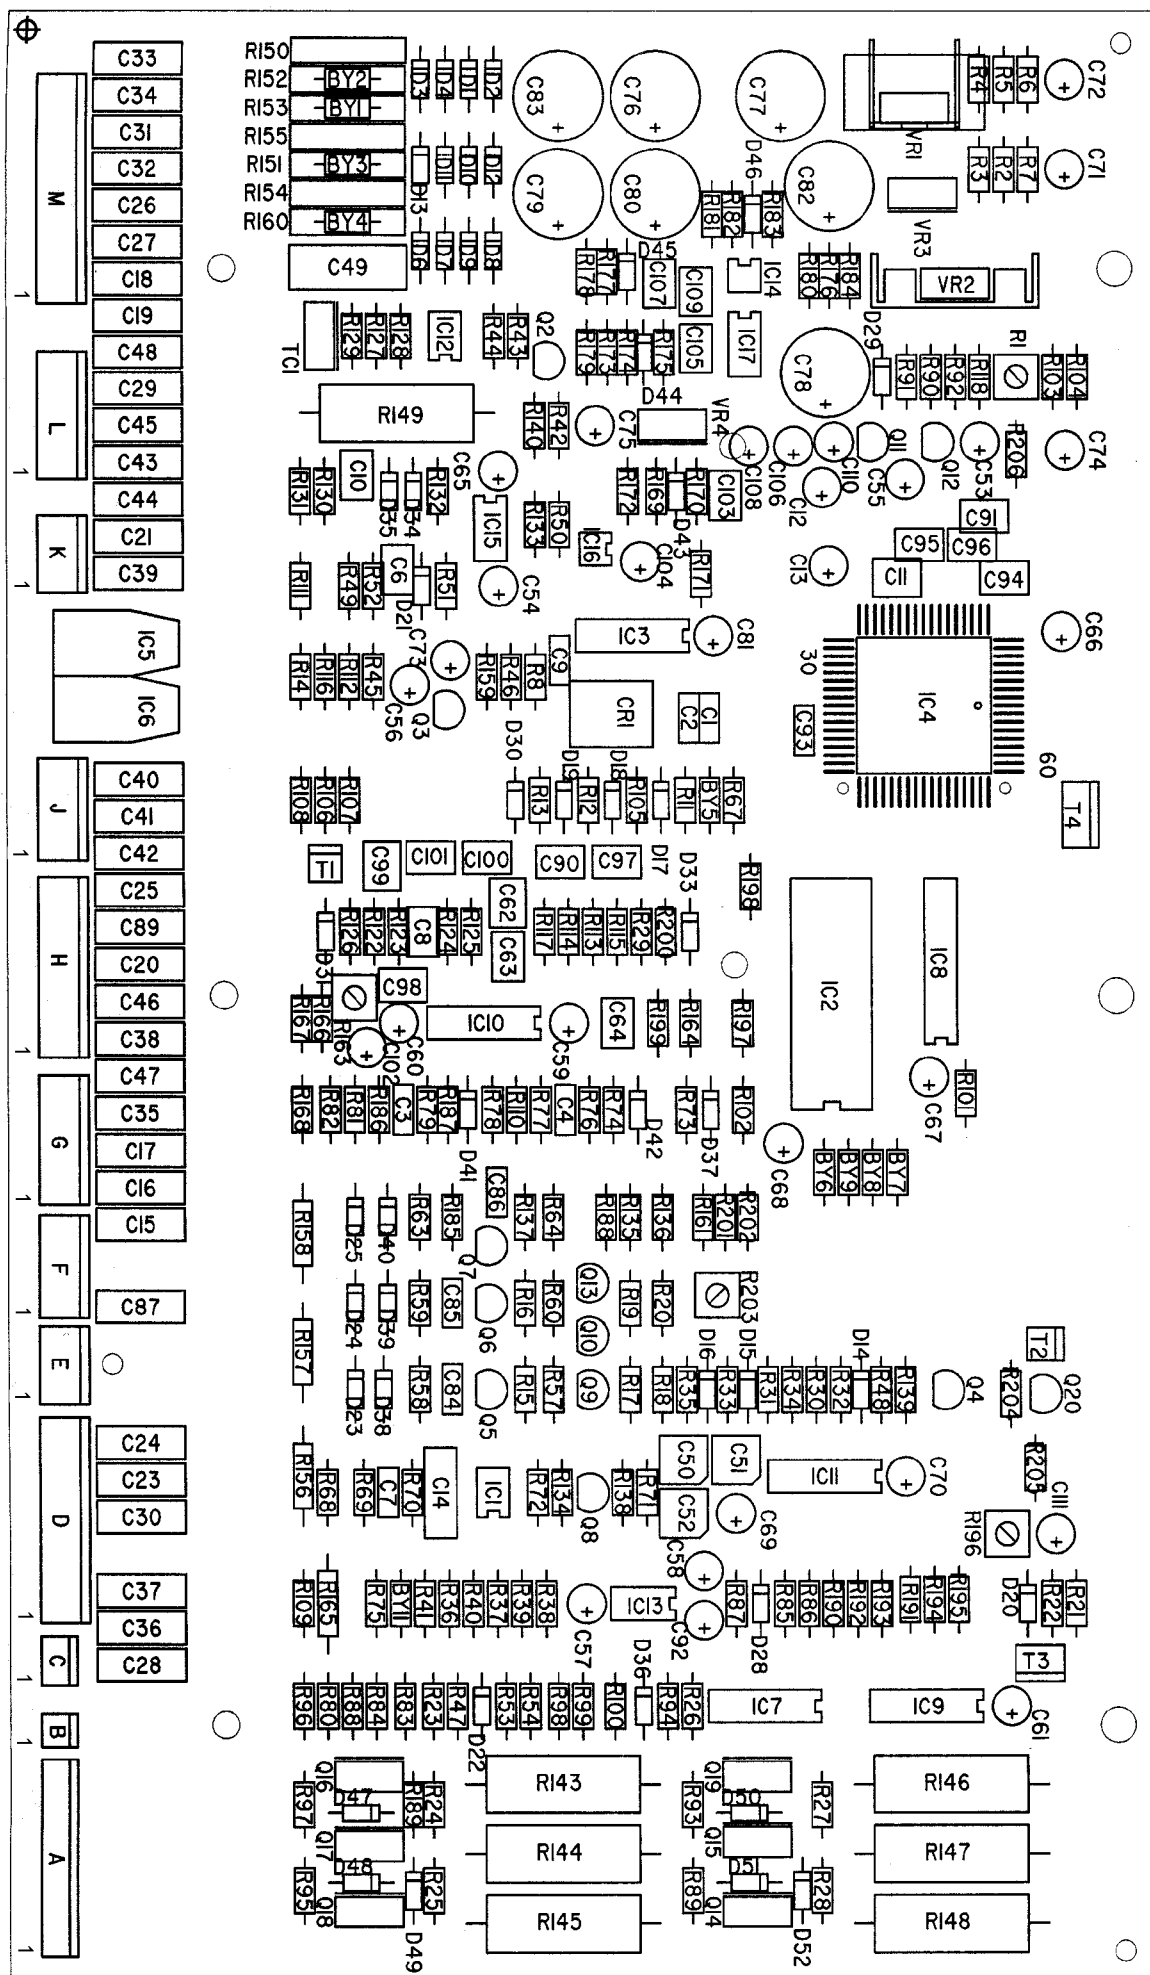


claw1e10

# SUPPRESSION CIRCUIT BOARD AP2

## Circuit diagram

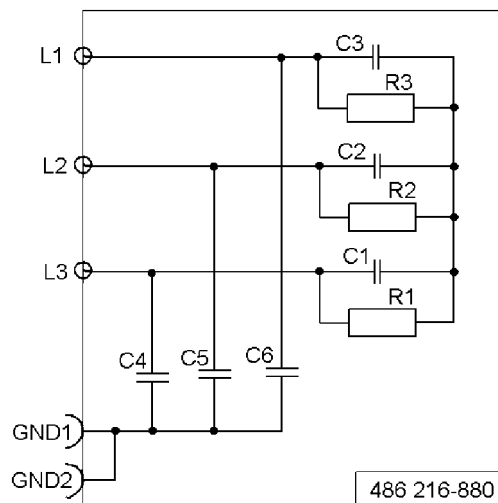


## Component positions

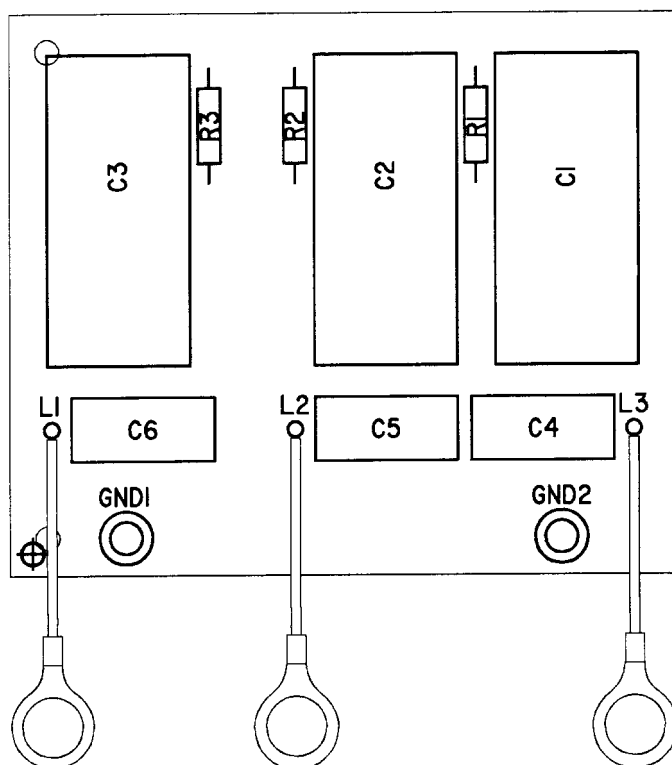

## TEST ROUTINE

The test routine can be used if either the power unit or the wire feed unit has a digital instrument. It must **not** be used when the gate connections are connected to the circuit board.

Activate the test routine by linking contacts J1 and J4 before energising the machine.

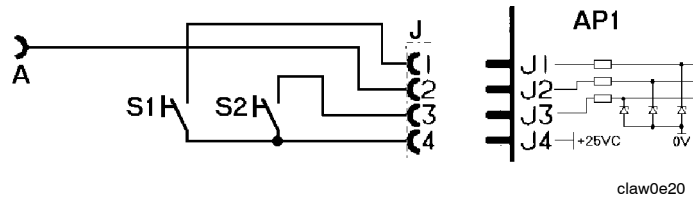


### The test device

Do the following to activate the test routine.

- Turn off the machine.
- **Disconnect connection XS14, carrying the gate pulses, from the circuit board.**
- If the machine is an LAW 520, disconnect connection XS9, machine type.

See the diagram below.

Connect the test device plug J to contacts J1 - J4 on the circuit board.

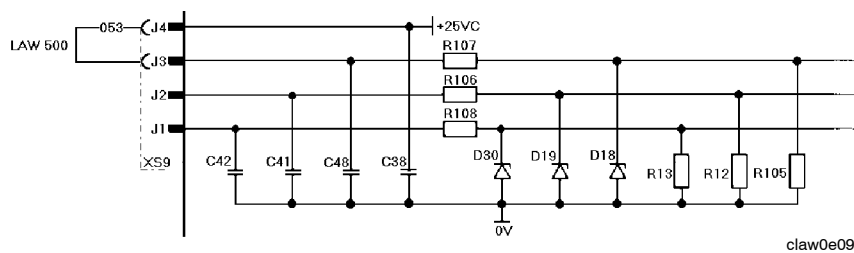

### Machine type / test input

- Close switch S1 on the test device.
- Start the machine.

The first test is of the display itself. All segments of the display should be visible and then extinguished for one second.

If you close switch S2, between J3 and J4, the display will be extinguished.

Open S2 again.

Alternately open and close switch S1 to step through the test routine.

Change over S1 (i.e. from closed to open). The top line of the display now shows LL.1.

Each time that the switch changed, the count will increment by one. The explanations of the various tests are as follows :

### Test no.

**LL.1 - LL.7** These tests are not relevant here.

**LL.8** Voltage setting.

Turn the potentiometer on the wire feed unit to adjust the voltage setting between its upper and lower limits. The display must show 0 - 255.



- LL.9 - L.11** Measurement of the synch pulses at contacts E1-E3.  
The display shows 50 if the synch voltage frequency is 50 Hz.
- L.12** Welding gun switch.  
The display shows 1 1 1 when the welding gun switch is closed and 0 0 0 when it is open.
- L.13 - L.14** These tests are not relevant here.
- L.15** Firing pulses on outputs A1 - A12.  
Connect contact A of the test device to pin A1 on the circuit board. If firing pulses are present on A1, the display will show 0 1 0. Test outputs A3, A5, A7, A9 and A11 in a corresponding way.  
Disconnect contact A of the test device from the circuit board.
- L.16** The thermal overload cutout.  
When the circuit from the thermal overload cutout (at connections D1-D6) is closed, the display will show 0 0 0.  
If the cutout contacts are open, the display will show 1 1 1.
- L.17** Crater filling.  
When the crater filling input L4 is open, the display shows 1 1 1.  
When input L4 is low (= connected to 0VB at board contact L3), the display shows 0 0 0.
- L.18** Fixed firing angle / controlled firing angle.  
K2-K3 closed = fixed firing angle. The display shows 0 0 0.  
K2-K3 open = controlled firing angle. The display shows 1 1 1.
- L.19** Machine type.  
J3-J4 closed = LAW 520. The display shows 5 0 0.  
J3-J4 open = LAW 420. The display shows 4 0 0.
- L.20** Preset, board connector H7.  
This test facility is used only with an MEK 4S and MEK 4SP wire feed unit. With terminal H7 open, presetting is not selected, and the display indicates 0 0 0.  
With terminal H7 connected to 0 VB, presetting is active, and the display indicates 1 1 1.

Turn off the machine and refit the connections to the circuit board as they were originally.


## FITTING INSTRUCTIONS, THYRISTOR MODULES LAW 520

1. Remove all dirt from the contact surfaces of the cooling fins where they contact the thyristor module.
2. Apply a thin layer of thermal paste to the contact surfaces. See item 418 on page 40 for the order number of this paste.
3. Fit the screws and washers as shown in the diagram below, and tighten the screws to a torque of 2 Nm.
4. Make a second pass and tighten all the screws to a torque of 5 Nm.
5. Connect the wires from the circuit board as shown in the diagram below:  
Y = yellow, R = red. Note the markings, 4 - 7, on the thyristor module.
6. Warm up the units by running the machine at 380 A for ten minutes.
7. Retighten the screws to 5 Nm  $\pm$  0.7 Nm.

### Note:

From September 2001 a complete thyristor spare part set with thyristors, screws, washers and thermal paste is delivered. The spare part set is the same for the LAW 420 and LAW 520, follow the instruction above when fitting the components.

### Thyristor module LAW 520

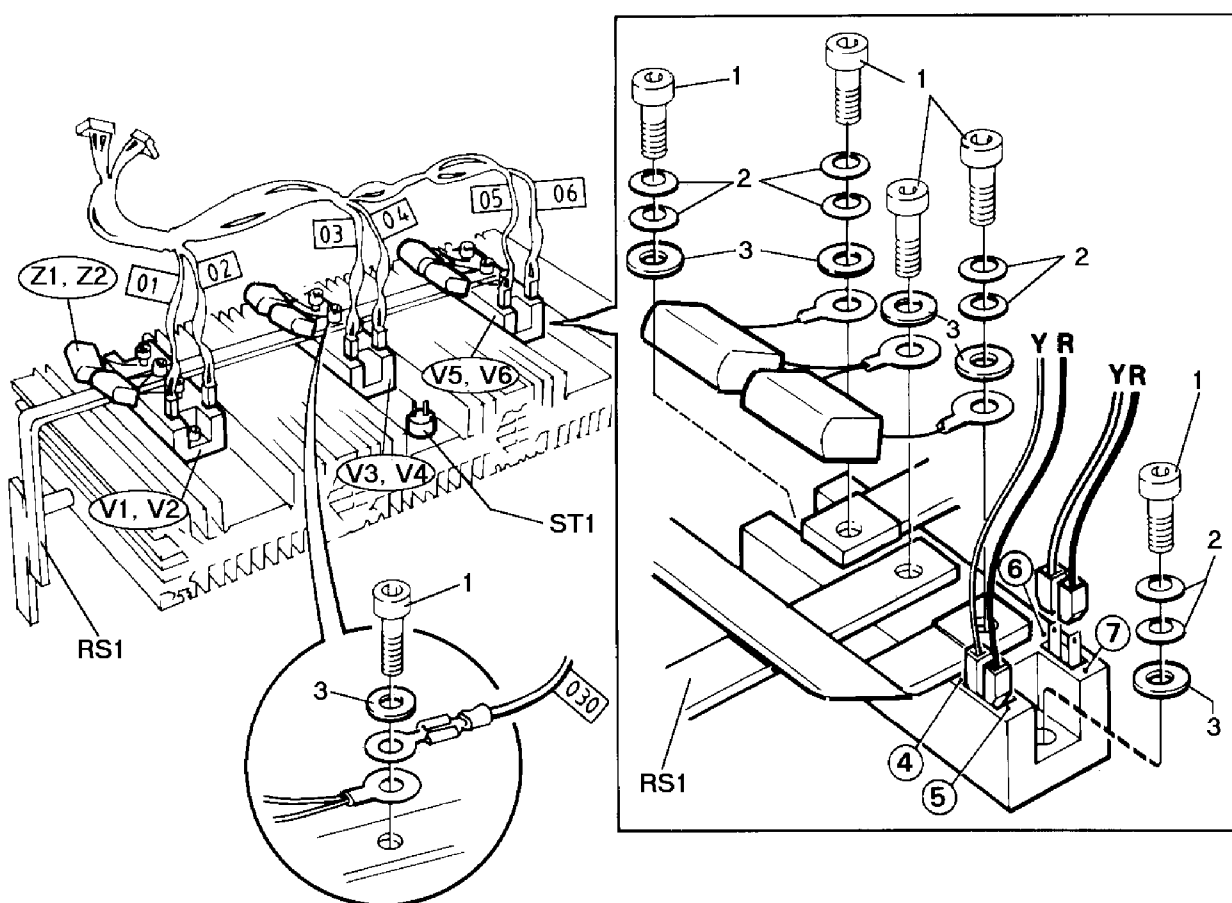

clawOp17

1. Screw, M6 x 16
2. Spring washer,  $\varnothing$  12.5/6.2 x 0.7 mm
3. Washer,  $\varnothing$  12/6.4 x 1.5 mm


## **FITTING INSTRUCTIONS, THYRISTOR MODULES LAW 420**

1. Remove all dirt from the contact surfaces of the cooling fins where they contact the thyristor module.
2. Apply a thin layer of thermal paste to the contact surfaces. See item 418 on page 40 for the order number of this paste.
3. Fit the screws and washers as shown in the diagram below, and tighten the screws to a torque of 2 Nm.
4. Make a second pass and tighten all the screws to a torque of 5 Nm.
5. Connect the wires from the circuit board as shown in the diagram below:  
Y = yellow, R = red. Note the markings, 4 - 7, on the thyristor module.
6. Warm up the units by running the machine at 280 A for ten minutes.
7. Retighten the screws to 5 Nm  $\pm 0.7$  Nm.

### **Note:**


- The screws for the anode and cathode connections (item 4 below) are of a different size from the screws for item 1. The washers and spring washers are also differently sized. Correct dimensions and number of items is to be found on page 40.
- From September 2001 a complete thyristor spare part set with thyristors, screws, washers and thermal paste is delivered. The spare part set is the same for the LAW 420 and LAW 520, follow the instruction on previous page when fitting the components.

### **Thyristor module LAW 420 (Semikron SKMT 92/04D)**

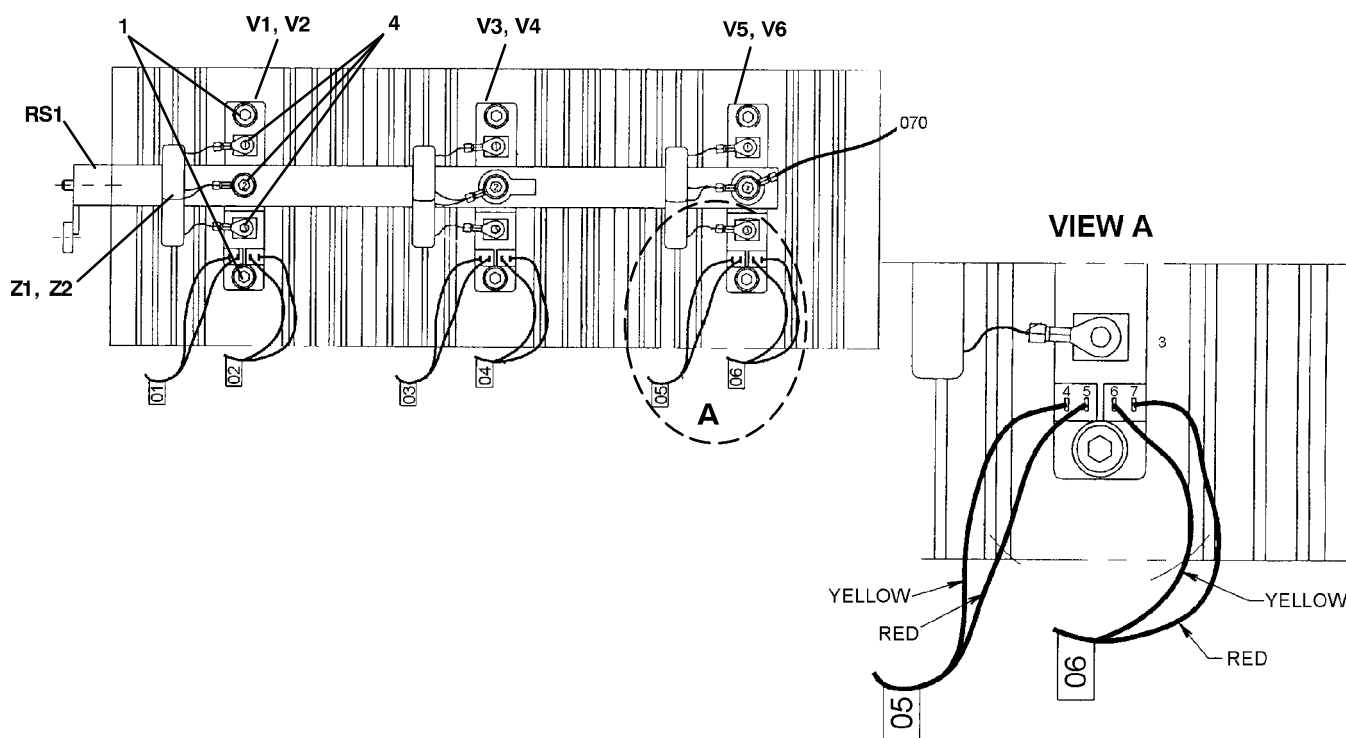


## LOAD CHARACTERISTIC

LAW 420 connected to 400 V mains power supply

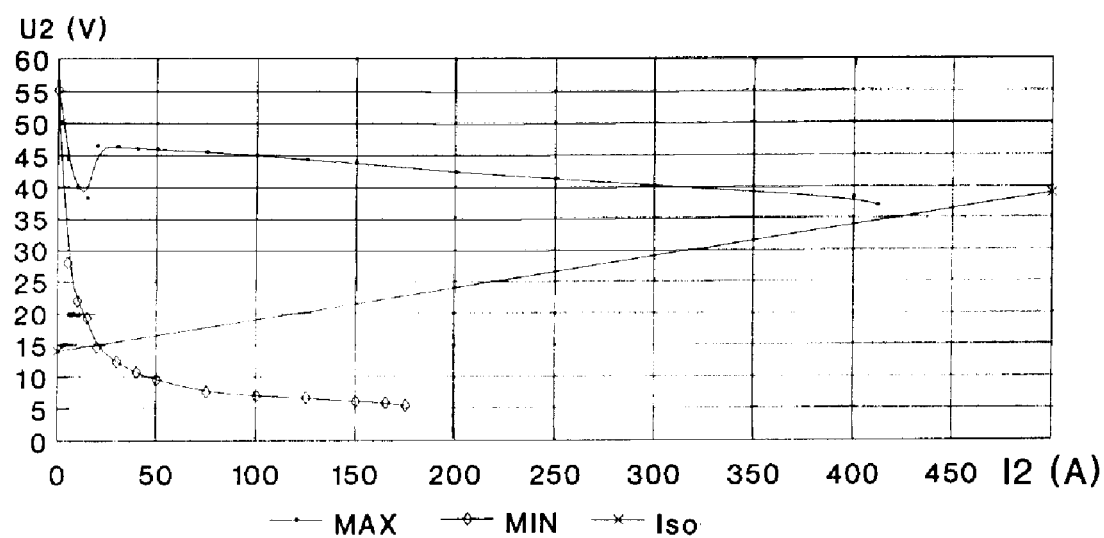





claw0p08

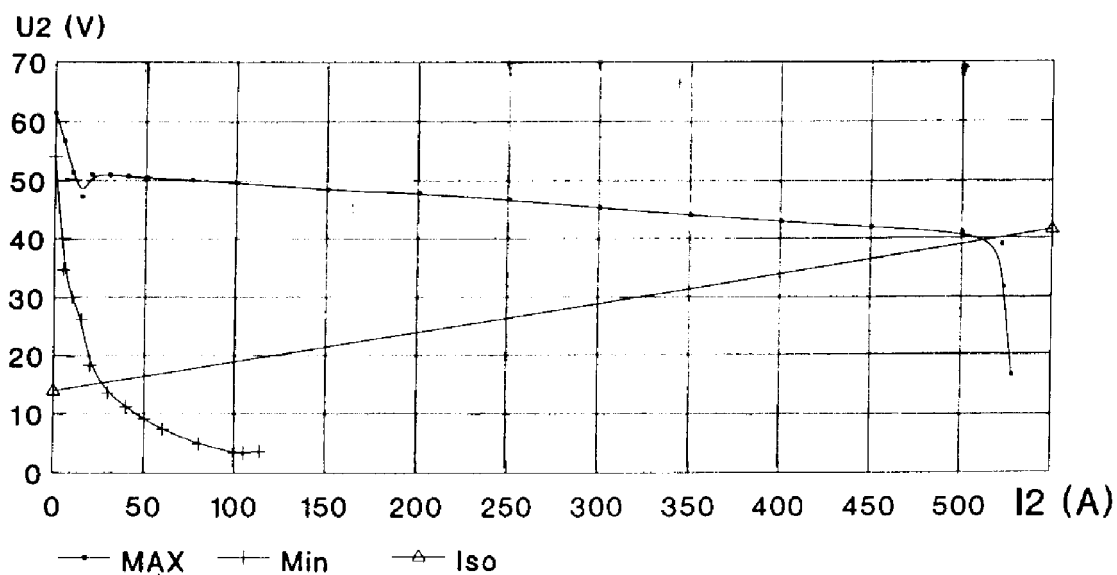LAW 520 connected to 400 V mains power supply




claw0p09

## TECHNICAL DATA

	LAW 420/420W 400 - 415 V	LAW 420/420W 230 - 500 V	LAW 520/520W 400 - 415 V	LAW 520/520W 230 - 500 V
<b>Mains voltage</b>	400-415V 3 ~ 50Hz	230/400-415/500V 3 ~ 50Hz 230/440-460V 3 ~ 60Hz	400-415V 3 ~ 50Hz	230/400-415/500V 3 ~ 50Hz 230/440-460V 3 ~ 60Hz
<b>Load capacity</b>				
At 45% duty cycle	400A/34V	400A/34V		
At 60% duty cycle	350A/32V	350A/32V	500A/39V	500A/39V
At 80% duty cycle			450A/37V	435A/36V
At 100% duty cycle	280A/28V	280A/28V	400A/34V	390A/33.5V
<b>Operating range</b>	40A/16V-400A/34V	40A/16V-400A/34V	40A/16V-500A/39V	40A/16V-500A/39V
<b>Open-circuit voltage</b>	53-58V	53-58V	53-60V	53-60V
<b>Open-circuit power</b>	590/790W	640/840W	670/870W	720/920W
<b>Power factor</b>	0.86	0.84	0.90	0.90
<b>Efficiency</b>	0.74	0.76	0.78	0.78
<b>Control voltage</b>	42V 50/60Hz	42V 50/60Hz	42V 50/60Hz	42V 50/60Hz
<b>Enclosure class</b>	IP 23	IP 23	IP 23	IP23
<b>Electrical protection class</b>				
<b>Weight</b>	200/214kg	201/215kg	225/239kg	227/241kg
<b>Dimensions l x b x h</b>	800x640x835mm	800x640x835mm	800x640x835mm	800x640x835mm

These welding power units fulfil the requirements of IEC 974-1

The  symbol indicates that the power units have been designed for use in areas of elevated electrical danger. Units of Class **IP 23** are intended for indoor and outdoor use.

### PRIMARY CURRENT, MAINS FUSE RATING AND MAINS CABLE CROSS-SECTIONAL AREA

#### LAW 420

	* 400-415V 400-415V 50Hz	** 230-500V 230V 50Hz	** 230-500V 400-415V 50Hz	** 230-500V 500V 50Hz	** 230-500V 230V 60Hz	** 230-500V 440-460V 60Hz
<b>Primary current at:</b>						
45% duty cycle	31A	51A	31A	25A	51A	30A
60% duty cycle	28A	47A	28A	22A	45A	27A
100% duty cycle	23A	39A	23A	19A	37A	22A
<b>Cable CSA mm<sup>2</sup></b>	4x4	4x10	4x4	4x4	4x10	4x4
<b>Fuse rating, slow blow</b>	25A	35A	25A	20A	35A	20A


#### LAW 520

	* 400-415V 400-415V 50Hz	** 230-500V 230V 50Hz	** 230-500V 400-415V 50Hz	** 230-500V 500V 50Hz	** 230-500V 230V 60Hz	** 230-500V 440-460V 60Hz
<b>Primary current at:</b>						
60% duty cycle	42A	69A	42A	31A	69A	42A
80% duty cycle	38A	63A	38A	29A	61A	37A
100% duty cycle	34A	59A	34A	27A	56A	33A
<b>Cable CSA mm<sup>2</sup></b>	4x6	4x16	4x6	4x6	4x16	4x6
<b>Fuse rating, slow blow</b>	35A	63A	35A	35A	50A	25A

\* = Power unit suitable only for a single supply voltage, 400-415V 50Hz.


\*\* = Power unit suitable for various supply voltages.

# PRIMARY CONNECTIONS LAW 420/520 230 - 500 V

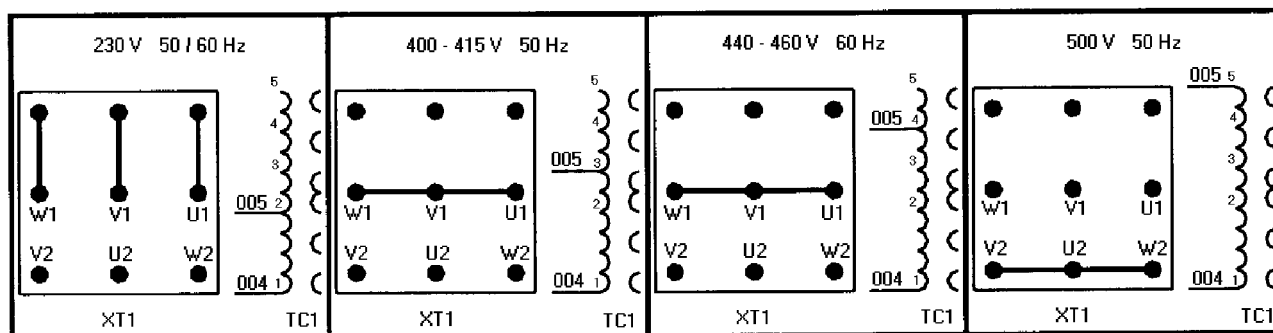


claw0e04

*Terminal block XT1 and transformer TC1 are fitted as shown below.*

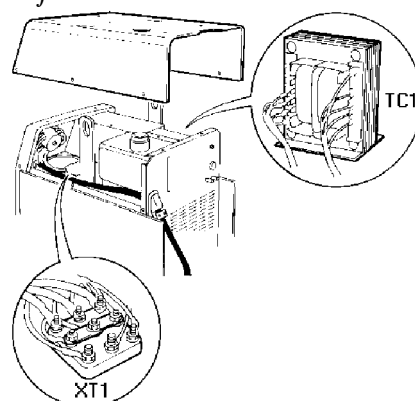

claw0p13

The machine is delivered connected for 400 - 415 V.  
If it is to be connected to a 230 V supply, the mains supply cable cross-sectional area must be increased, as shown in the table on the previous page.

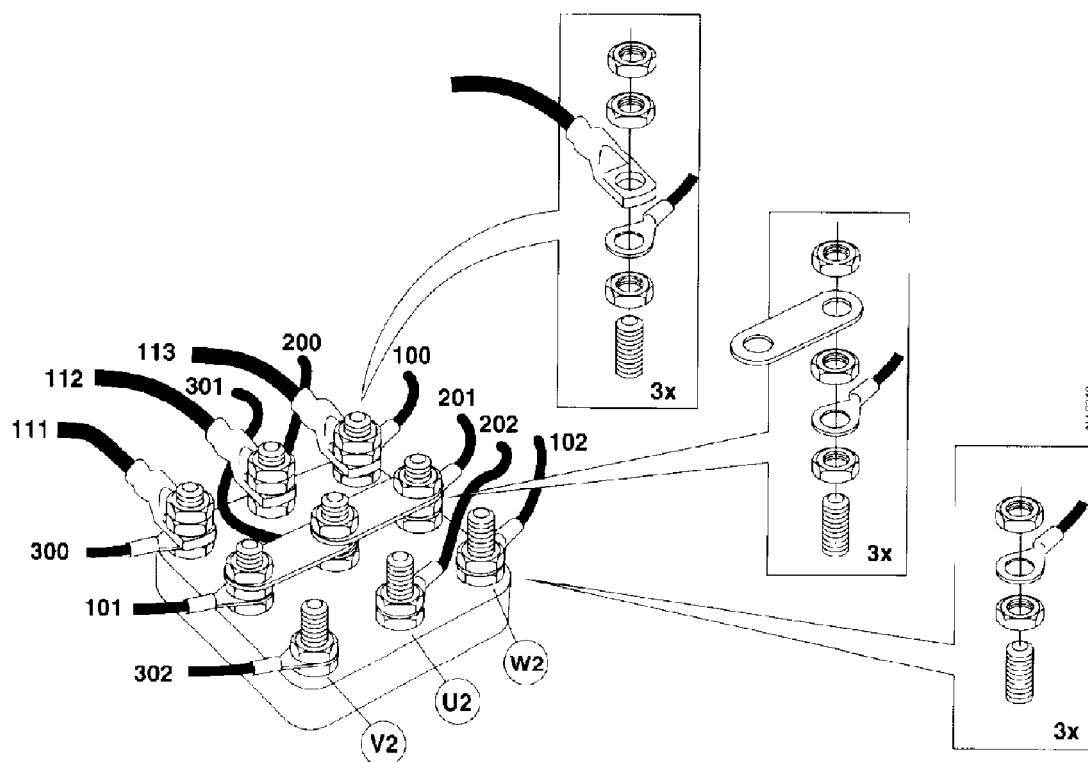

claw0p06


*Terminal block XT1 as shown above is connected for 400-415V 50Hz / 440-460V 60Hz*

---

## CONTROL PANEL AND CONNECTIONS

---

1. Mains supply ON/OFF.
2. Cooling unit ON/OFF, only LAW with water cooler.
3. Indicating lamp, mains supply ON.
4. Indicating lamp, thermal overload.
5. Digital display (accessory).
6. Circuit breaker for 42 V power supply to the wire feed unit.
7. Welding current terminal -A.
8. Welding current terminal -B.
9. The positive polarity welding terminal, the socket for the control cable to the wire feed unit and the cooling water connections are on the back of the machine.

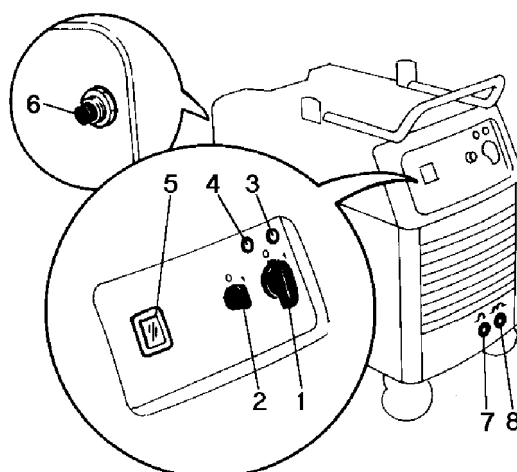

---

## MAINTENANCE

---


Blow the power unit clean with dry compressed air at reduced pressure at regular intervals.

Check the coolant level in power units incorporating water cooling. When topping up, use a mixture of 50% glycol and 50% water.

---

## LIFTING INSTRUCTION


---

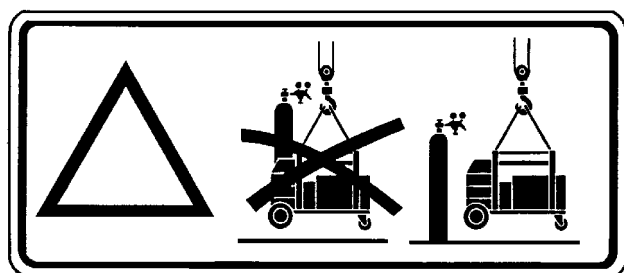

## ACCESSORIES

Item no.	Order no.	Designation
1	0455 173 881	Digital instrument
3	0156 654 883	Mounting post (supplied with LAW)
5	0469 792 881	Counter balance device and mast
9	0156 746 880	Mast
10	0456 693 880	Counter balance device, sprung coil

Item no.	Order no. when connected to LAW 420	Order no. when connected to LAW 420W	Order no. when connected to LAW 520	Order no. when connected to LAW 520W	Benämning
2	0469 962 880	- - -	0469 962 880	- - -	Feed unit MEK 4
	0469 962 881	- - -	0469 962 881	- - -	Feed unit MEK 4 with instrument
	- - -	0469 962 882	- - -	0469 962 882	Feed unit MEK 4 with water connection
	- - -	0469 962 883	- - -	0469 962 883	Feed unit MEK 4 with instr. and water conn.
	0455 175 880	- - -	0455 175 880	- - -	Feed unit MEK 4S
	- - -	0455 175 881	- - -	0455 175 881	Feed unit MEK 4S with water connection
	0455 815 881	0455 815 881	- - -	- - -	Feed unit MEK 4SP with water connection
4	0469 836 880	0469 836 885	0469 836 890	0469 836 895	Cables/hoses set 1.7 metre
	0469 836 881	0469 836 886	0469 836 891	0469 836 896	Cables/hoses set 8 metre
	0469 836 882	0469 836 887	0469 836 892	0469 836 897	Cables/hoses set 16 metre
	0469 836 883	0469 836 888	0469 836 893	0469 836 898	Cables/hoses set 25 metre
	0469 836 884	0469 836 889	0469 836 894	0469 836 899	Cables/hoses set 35 metre

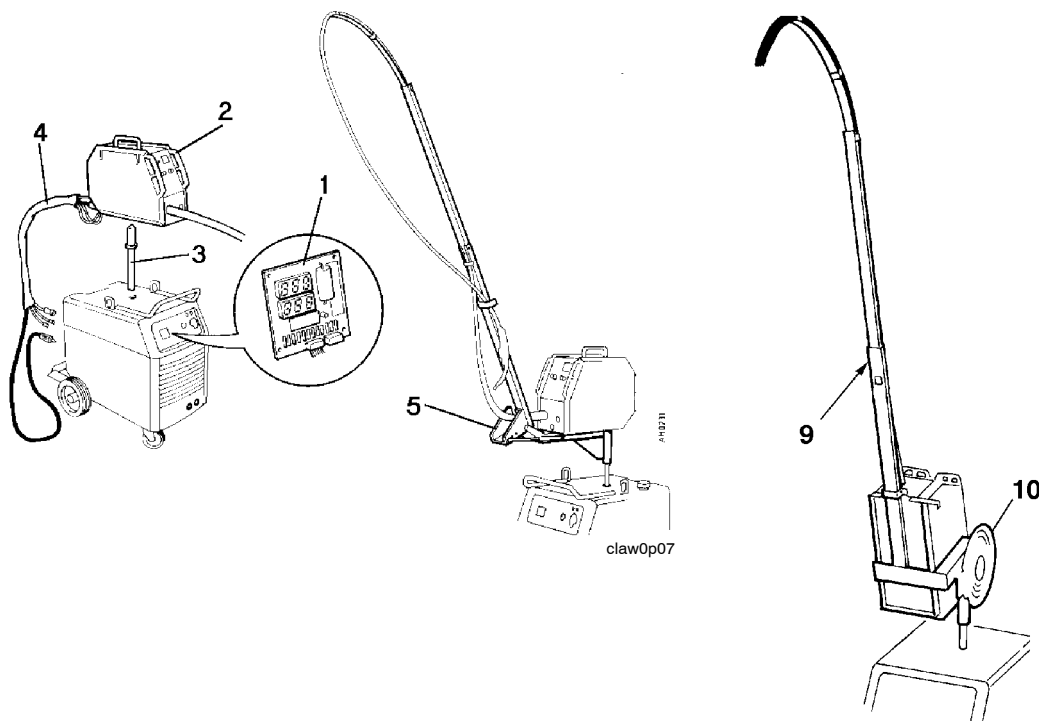


### Warning

There is a risk of tipping if the wire feed cabinet is fitted with a counter balance arm. Secure the equipment, especially if used on an uneven or sloping surface. Limit the angle of rotation of the wire feed cabinet using the straps supplied.

When moving the equipment do **NOT** pull on the torch.



## Spare parts list

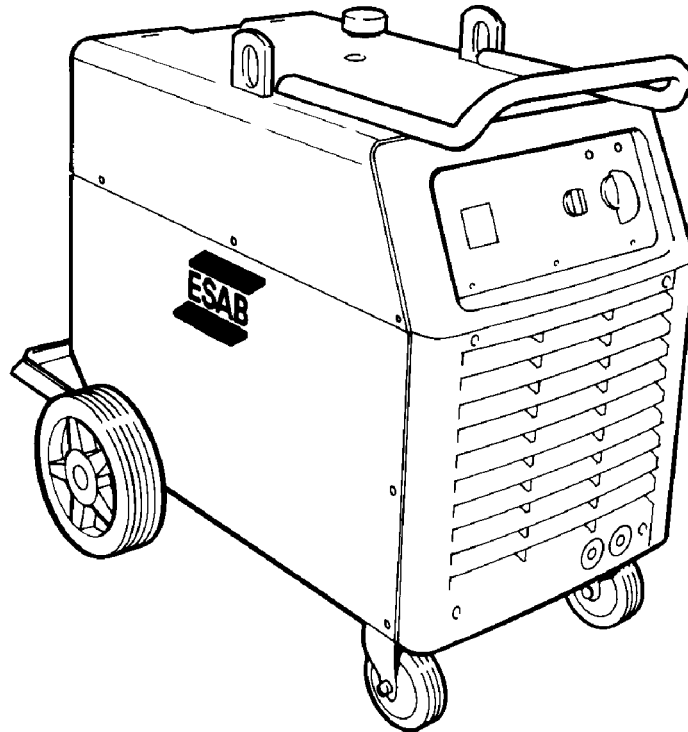

daw0p00

Valid for serial no. 912-xxx-xxxx


## Ordering numbers for LAW 420, LAW 520

0458 115 880	LAW 420	400-415 V 3 ~ 50 Hz
0458 115 881	LAW 420	230/400-415/500 V 3 ~ 50 Hz; 230/440-460 V 3 ~ 60 Hz
0458 115 882	LAW 420W	400-415 V 3 ~ 50 Hz; with water cooler
0458 115 883	LAW 420W	230/400-415/500 V 3 ~ 50 Hz; 230/440-460 V 3 ~ 60 Hz, with water cooler
0458 117 880	LAW 520	400-415 V 3 ~ 50 Hz
0458 117 881	LAW 520	230/400-415/500 V 3 ~ 50 Hz; 230/440-460 V 3 ~ 60 Hz
0458 117 882	LAW 520W	400-415 V 3 ~ 50 Hz; with water cooler
0458 117 883	LAW 520W	230/400-415/500 V 3 ~ 50 Hz; 230/440-460 V 3 ~ 60 Hz, with water cooler

Spare parts are to be ordered through the nearest ESAB agency as per the list on the back of the cover. Kindly indicate type of unit, serial number, denominations and ordering numbers according to the spare parts list.

Maintenance and repair work should be performed by an experienced person, and electrical work only by a trained electrician. Use only recommended spare parts.



Item no.	Qty	Ordering no.	Denomination	Notes
101	1	0321 173 001	Securing chain	
102	1	0469 868 001	Handle	
103	1	0469 681 001	Cover	
104	2	0468 797 001	Seal	
105	2	0468 796 001	Support plate	
106	2	0211 103 005	Roll pin	Ø 8x28
107	1	0458 147 001	Side panel with text	Left
108	2	0469 873 001	Castor wheel	Ø 125mm h=150mm
109	2	0469 872 001	Wheel	Ø 250mm
110	2	0192 859 126	Locking washer	
111	2	0215 100 037	Washer	Ø 36/21x3
112	1	0469 516 002	Shaft	
113	1	0469 685 001	Clamp	
114	1	0456 683 001	Shelf	
115	1	0458 147 002	Side panel with text	Right
118	4	0366 481 002	Seal	
119	1	0469 950 880	Cable inlet	
120	1	0458 992 001	Cover	Only for machines without water cooler

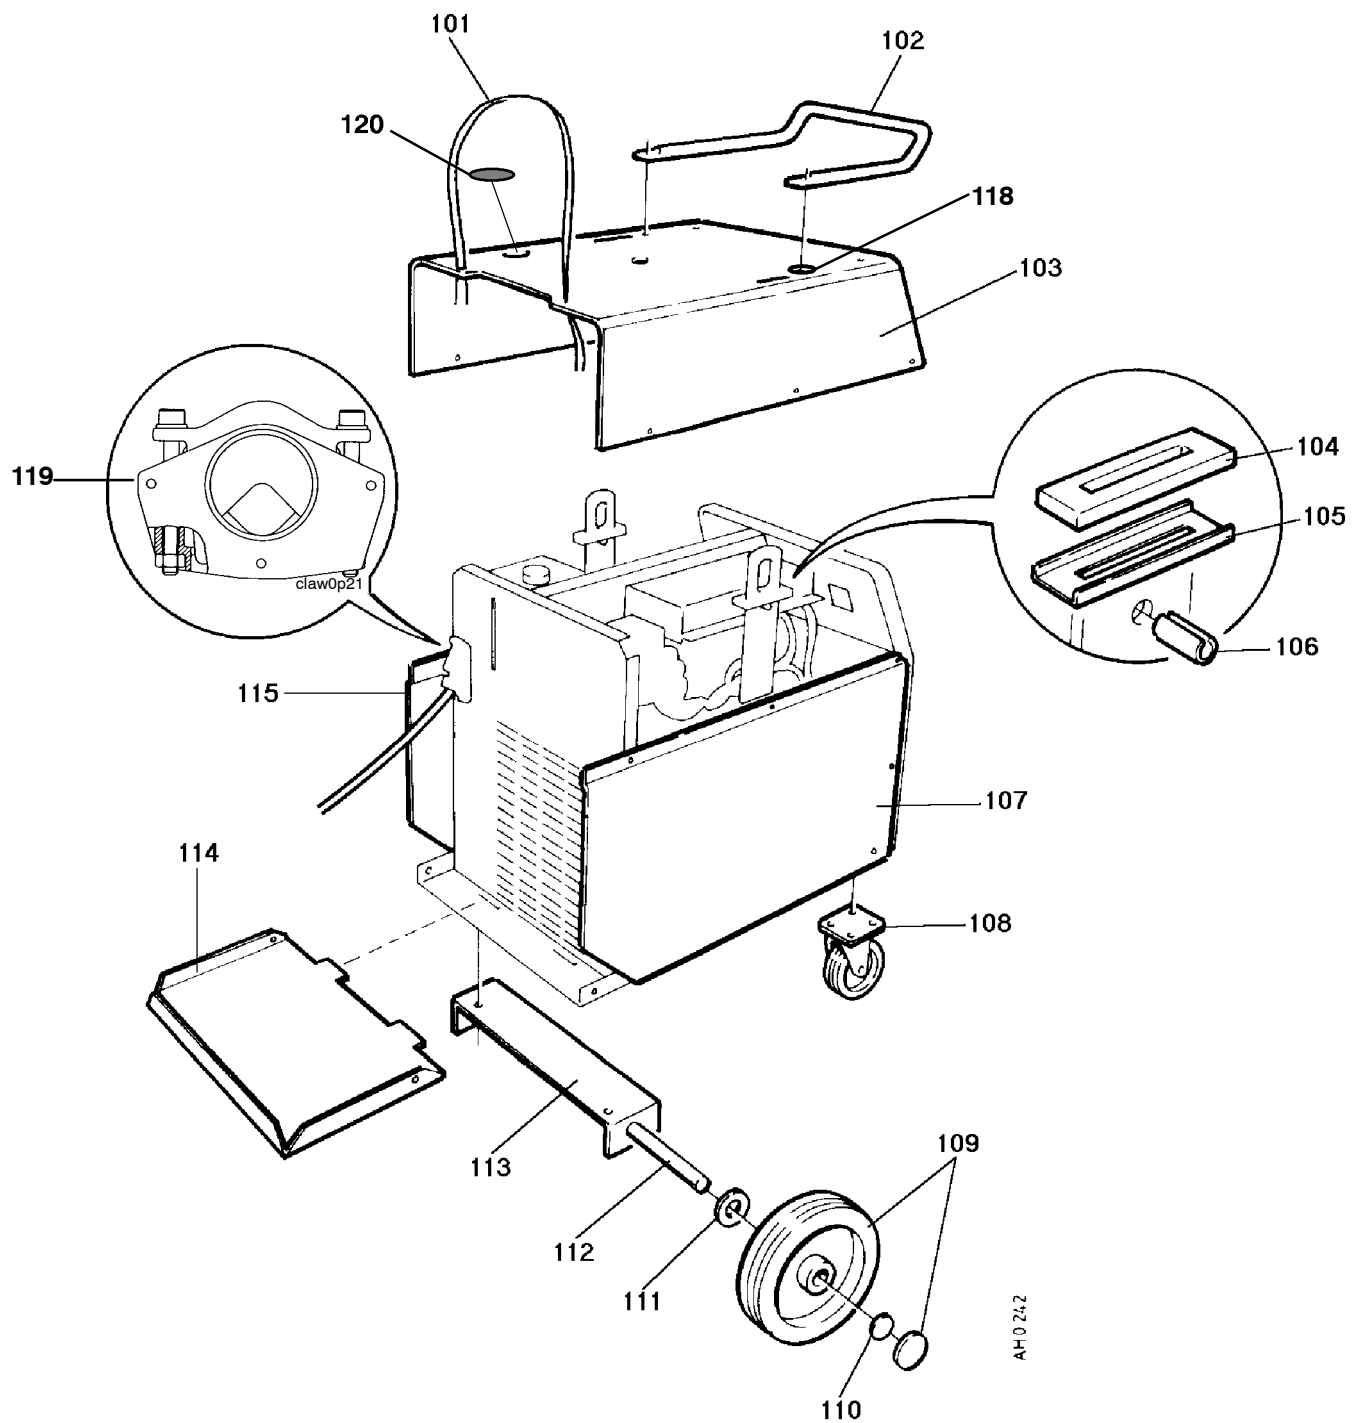

claw0p01

C = component designation in the circuit diagram




Item no.	Qty LAW 420	Qty LAW 520	Ordering no.	Denomination	Notes	C
201	1	1	0469 882 001	Control transformer	400-415 V mains voltage	TC1
	1	1	0455 306 001	Control transformer	230-500 V mains voltage	TC1
202	1	1	0469 899 001	Terminal	230-500 V mains voltage	XT1
203	2	2	0469 899 002	Jumper		
204	24	24		Nut	M8	
205	1	1	0455 174 001	Seal		
206	1	1	0455 172 001	Glass		
207	1	-	0458 122 001	Panel with text	LAW 420	
	1	-	0458 123 001	Panel with text	LAW 420W	
	-	1	0458 137 001	Panel with text	LAW 520	
	-	1	0458 138 001	Panel with text	LAW 520W	
208	1	1	0455 201 002	Light-emitting diode	Yellow	V7
209	1	1	0455 201 001	Indicating lamp	42 VAC, white	HL1
210	1	-	0455 158 001	Switch	32A 19kW 500VAC, 400-415 V mains voltage	QF1
	1	-	0455 159 001	Switch	40A 26kW 500VAC, 230-500 V mains voltage	QF1
	-	1	0455 159 001	Switch	40A 26kW 500VAC, 400-415 V mains voltage	QF1
	-	1	0455 160 001	Switch	63A 42kW 500VAC, 230-500 V mains voltage	QF1
211	1	1	0366 296 003	Knob	Only LAW with water cooler	
212	1	1	0455 307 002	Switch	Only LAW with water cooler	QF2
213	1	1	0455 173 881	Digital instrument	Option, complete	PI
	1	1	0486 212 880	Circuit board	For digital instrument	
214	3	3	0455 226 010	Spacer	For circuit board	
215	1	1	0455 211 001	Cover		
216	1	1	0193 260 061	Connector	2-pole	XS5
	1	1	0193 260 062	Connector	3-pole	XS6
	2	2	0193 260 151	Connector	3-pole	XS7, XS8
	-	1	0193 260 152	Connector	4-pole	XS9
	2	2	0193 260 153	Connector	5-pole	XS10, XS11
	1	1	0193 260 156	Connector	8-pole	XS12
	1	1	0193 260 157	Connector	9-pole	XS13
	1	1	0193 260 071	Connector	12-pole	XS14
	1	1	0193 260 155	Connector	7-pole	XS15
217	1	1	0486 480 884	Circuit board		AP1
218b	3	3	0194 019 005	Insulating washer		
	2	2	0193 517 344	Screw		
219	1	1	0455 210 001	Box		
220	1	1	0467 911 882	Capacitor	0.1 $\mu$ F 250 V, with cable lugs	C4
221	3	3	0394 516 031	Spacer screw	M5	
222	1	1	0191 193 118	Tape	To be ordered per metre, 0.31 metre as delivered	
223	1	1	0366 481 003	Seal	Only for machines with water tank	
224	1	1	0469 689 002	Cover	For machines with water tank	
225	1	1	0486 216 880	Circuit board	Suppressor board	AP2
	1	1	0162 772 001	Terminal	3-pole, for connection of L1, L2, L3 to AP2	

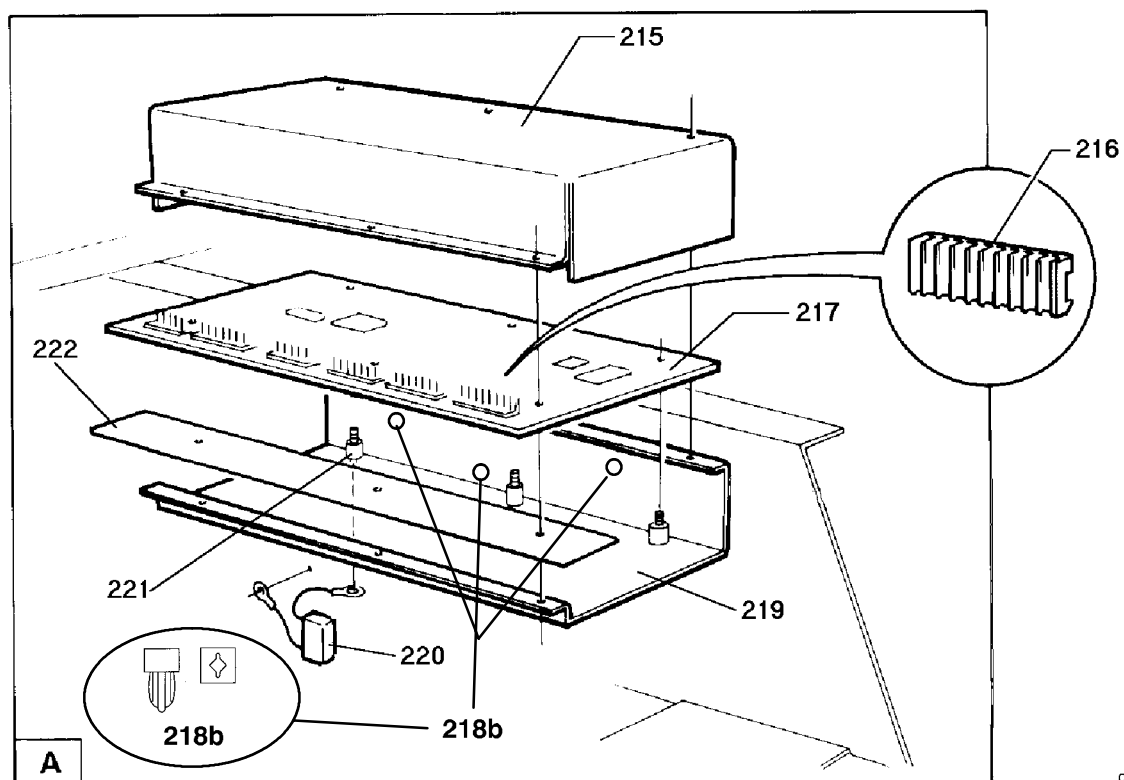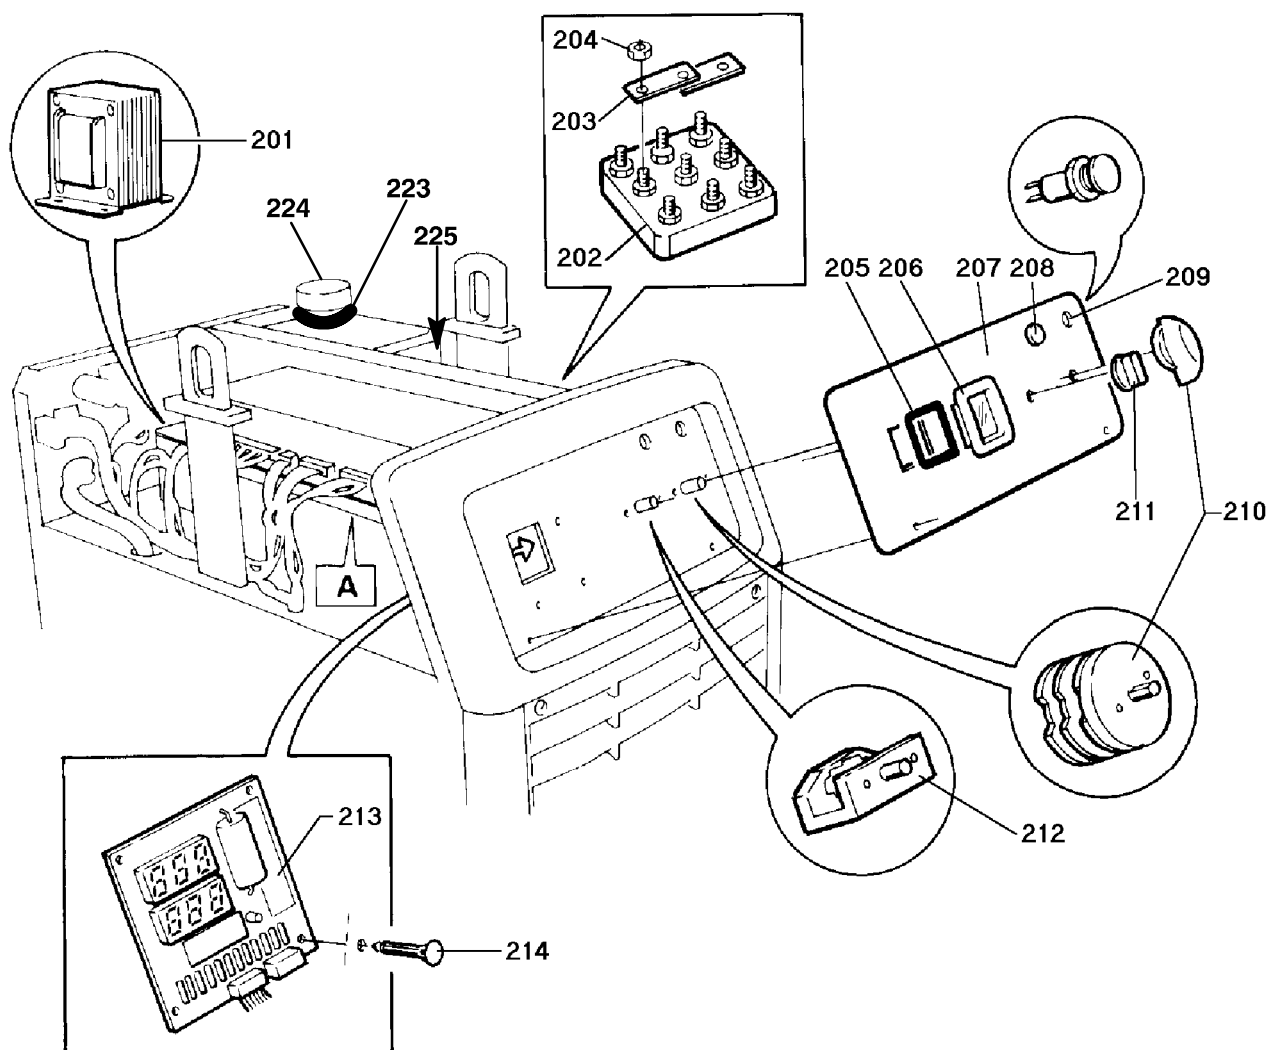

claw1200

C = component designation in the circuit diagram

Item no.	Qty LAW 420	Qty LAW 520	Ordering no.	Denomination	Notes	C
301	1	1	0469 678 001	Centre plate		
302	1	1	0469 675 001	Intermediate plate		
303	1	-	0469 876 880	Inductor		L2
	-	1	0469 876 881	Inductor	With thermal cutouts	L2, ST1, ST2
304	1	1	0469 704 001	Front panel		
-			0469 381 001	Clips	Clips with M6 nut	
305	1	1	0469 703 001	Front grill		
-			0469 381 001	Clips	Clips with M6 nut	
307	1	-	0469 696 880	Inductor	Interphase transformer. With thermal cutouts	L1, ST1, ST2
	-	1	0469 697 880	Inductor	Interphase transformer	L1
308	1	1	0455 217 001	Attachment		
309	1	-	0457 100 880	Transformer	400-415 V mains voltage	TM1
	1	-	0457 102 880	Transformer	230-500 V mains voltage	TM1
	-	1	0457 104 880	Transformer	400-415 V mains voltage	TM1
	-	1	0457 106 880	Transformer	230-500 V mains voltage	TM1
311	1	1		Nut	M10	
312	3	3		Washer	With flat pin connection 6.3x0.8, M10	
313	4	4		Washer	Ø 22/10.5x2	
314	6	6	0219 504 307	Spring washer	Ø 20/10.2x1.1	
315	1	1		Screw	M10x40	
316	1	1	0193 586 102	Circuit breaker	10 A	FU1
317	1	1	0368 544 005	Sleeve socket	23-pole	XS1
			0323 945 003	Sleeve		
318	1	1	0466 884 003	Connection block	3-pole	XT2
319	1	1	0191 085 203	Capacitor	3 µF 400 V	C1
320	2	2	0467 911 881	Capacitor	0.1 µF 250 V, with cable lugs	C2,C3
321	1	-	0469 879 880	Cable set	A=50mm <sup>2</sup>	
	-	1	0469 879 881	Cable set	A=95mm <sup>2</sup>	
322	3	3		Screw	M10x30	
323	3	3	0160 362 881	Current terminal	1-pole	XS2-XS4
324	1	1	0191 085 206	Capacitor	400 V 6 µF	C6
325	1	1	0193 927 001	Contactor		KM2

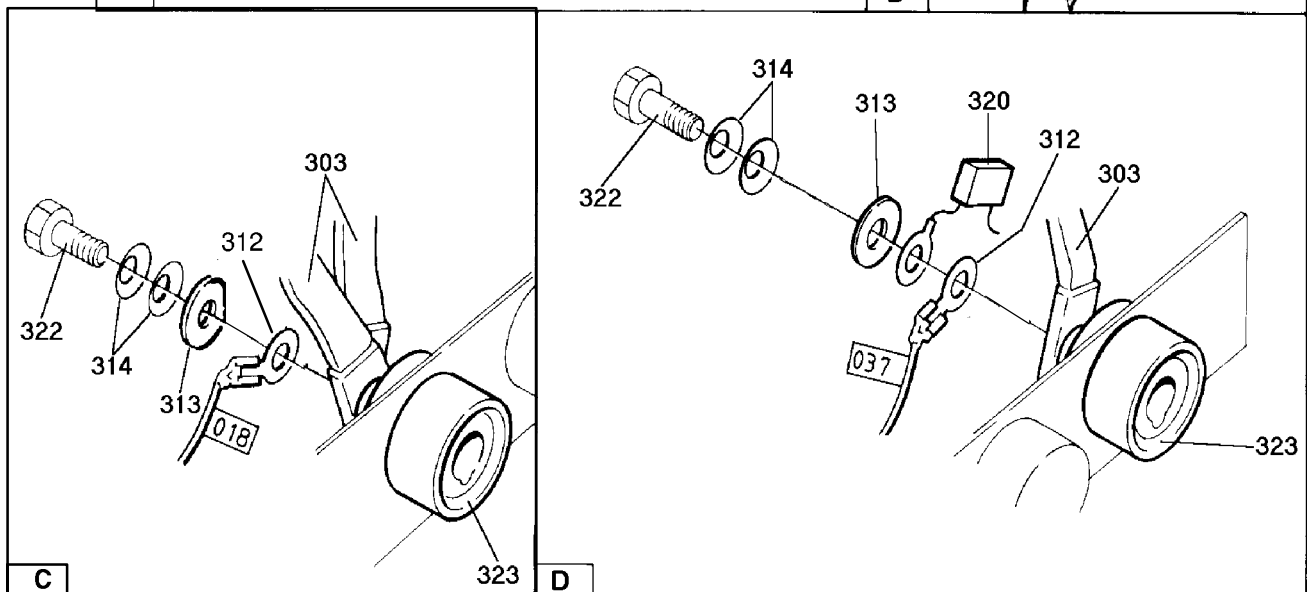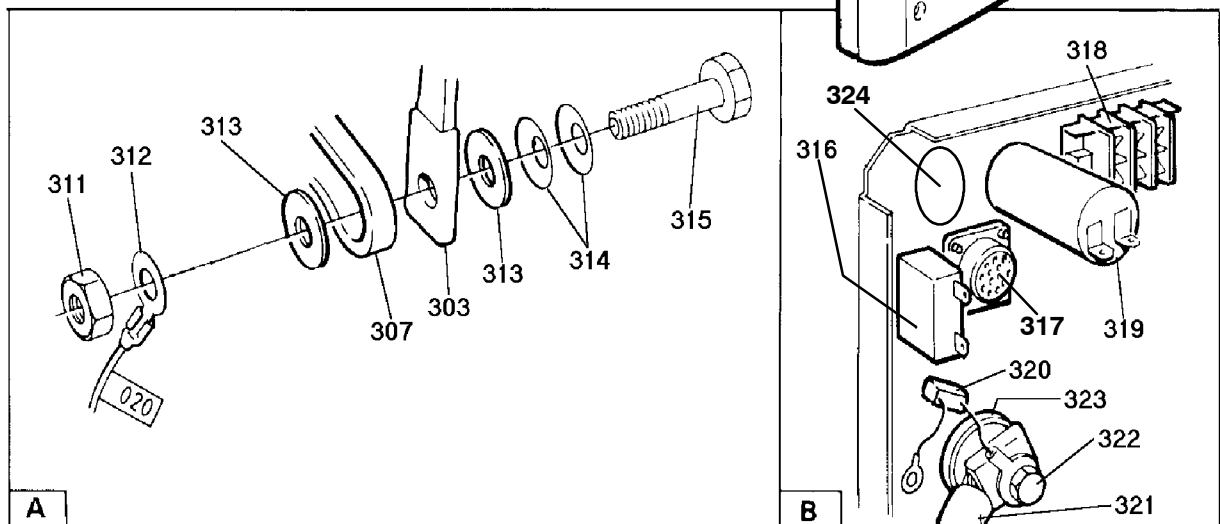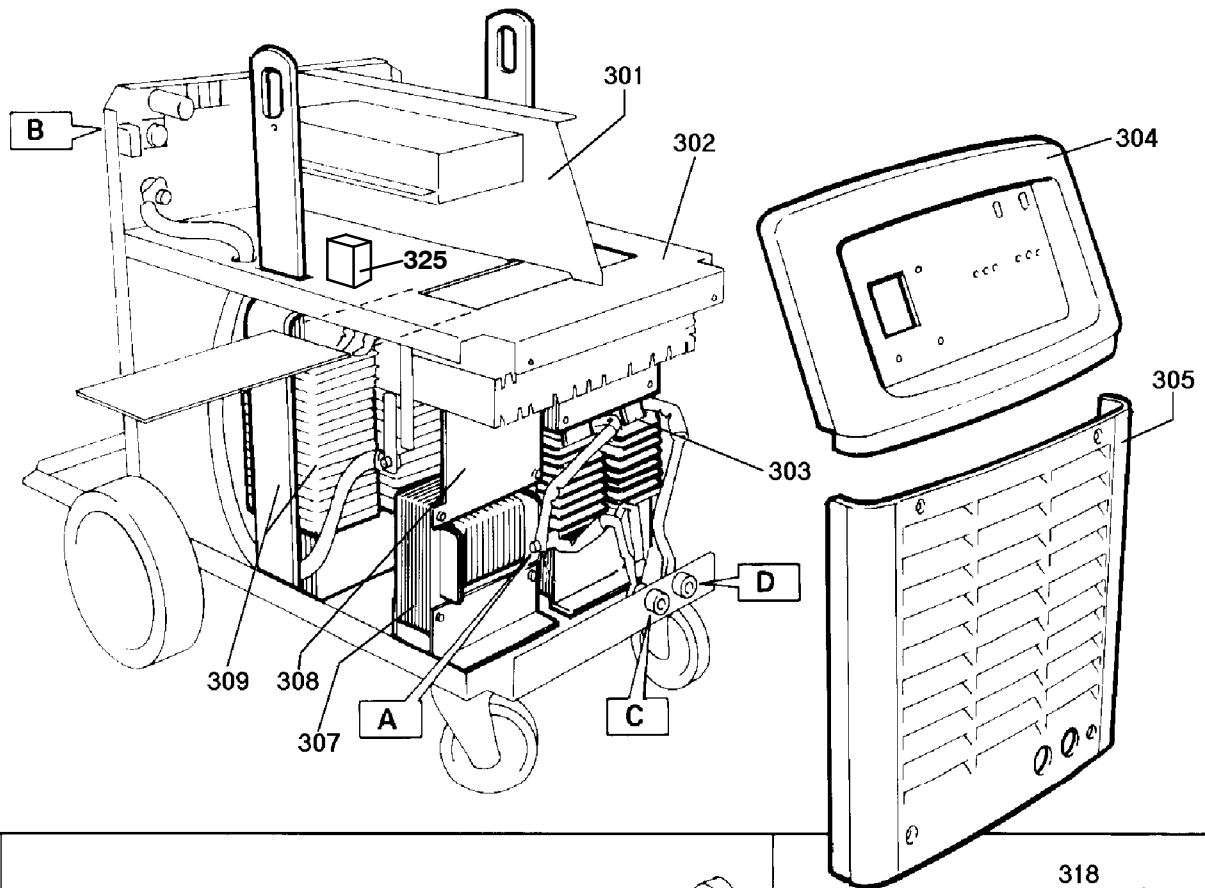

daw 1300


C = component designation in the circuit diagram

Item no.	Qty LAW 420	Qty LAW 520	Ordering no.	Denomination	Notes	C
401	1	1	0469 691 001	Cover		RS1
402	1	1	0193 609 105	Insulator	M5	
403	1	1	0469 878 881	Shunt	60mV/600A	
404	1	1		Screw	M8x25	
405	2	2		Washer	Ø 16/8.4x1.5	
406				Cable set	See item 321	
407	1	1		Nut	M8	
408	2	2		Nut	M5	
409	2	2		Screw	M5x12	
410	1	1		Thyristor bridge	Contains items 403 and 411 - 421 The items must be ordered separately	
411	1	1	0469 861 884	Cable set		Z1 - Z6
412	3	3	0469 693 880	Suppressor	RC filter	
414	6	15		Screw	M6x16, See item 450	
415	6	15		Washer	Ø 12/6.4x1.5, See item 450	
416	12	24		Spring washer	Ø 12.5/6.2x0.7, See item 450	
417	1	1		Washer	With flat pin connection 6.3x0.8, M6	
418	3	3		Thyristor module	See item 450	V1 - V6
-				Thermal compound	For fitting of thyristor modules, See item 450	
419	9	-		Screw	M5x16	
420	9	-		Washer	Ø 10/5.6x1	
421	12	-	0219 504 302	Spring washer	Ø 10/5.2x0.5	


## SPARE PART SET

Item	Ordering no.	Denomination	Notes
450	0455 157 880	Thyristor modules	Includes (a set of 3 thyristors) items 414, 415, 416, 418, roller and mounting instruction.
-	0458 910 002	Roller handle	For the roller in the spare parts set above.




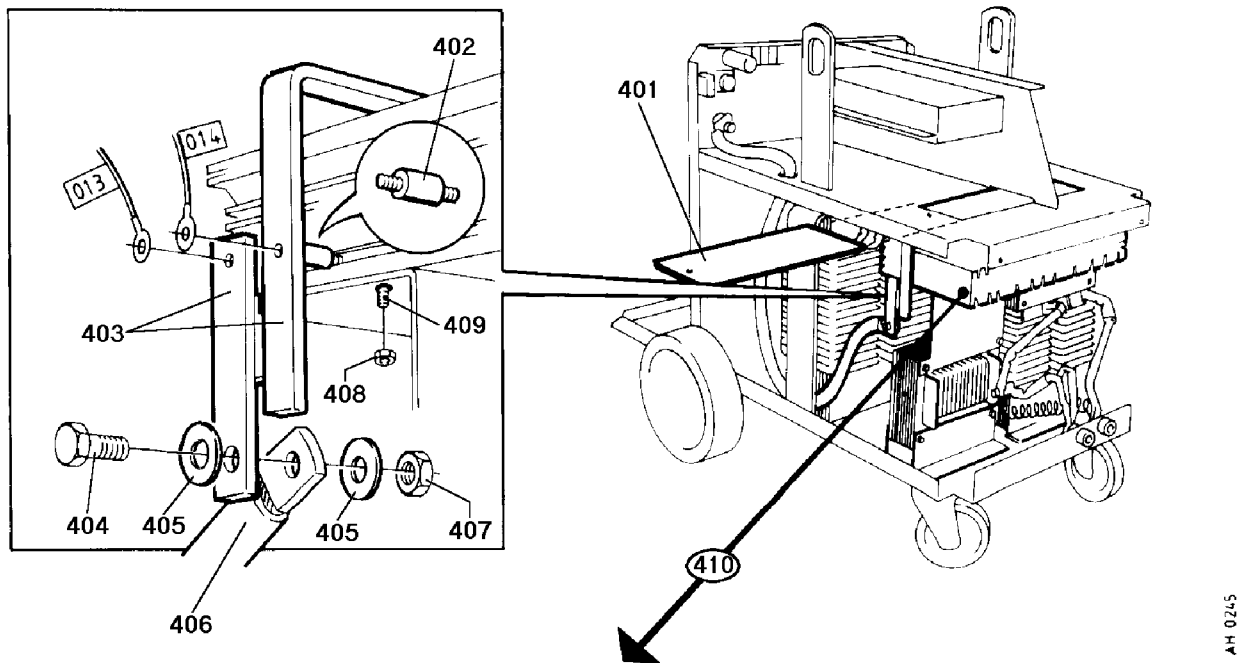

AH 0245

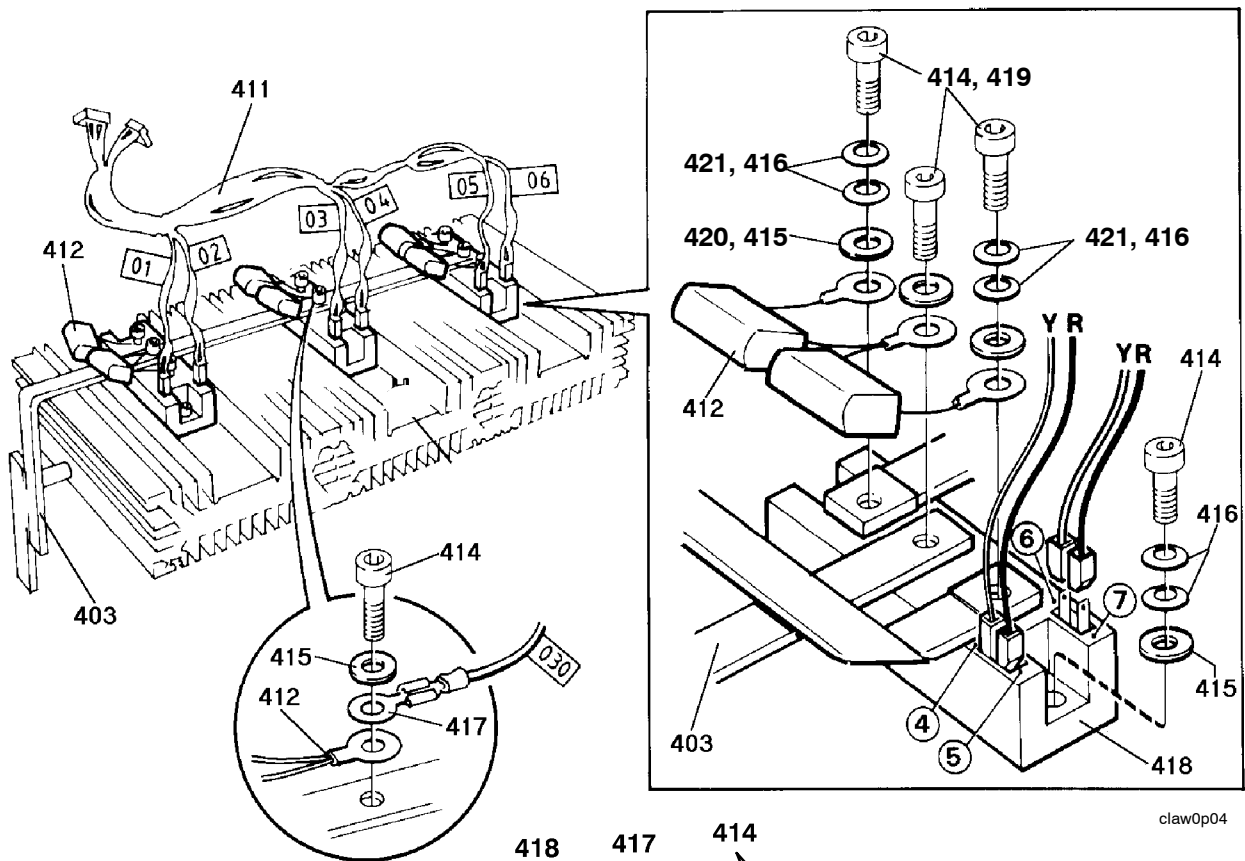

clawOp04

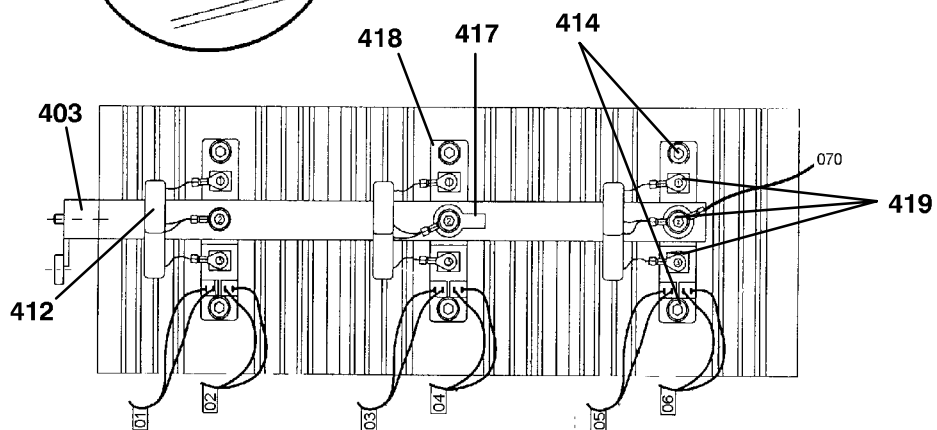


LAW 4/5 = LAW 420/520

LAW 4/5W = LAW 420W/520W

C = component designation in the circuit diagram

Item no.	Qty LAW 4/5	Qty LAW 4/5W	Ordering no.	Denomination	Notes	C
501	-	1	0365 803 011	Quick connector	Female, red, with non-return valve	
	-	1	0365 803 012	Quick connector	Female, blue, with non-return valve	
	-	-	0365 803 013	Quick connector	Male, with non-return valve. For connection set 8 - 35 metre	
	-	-	0365 803 010	Quick connector	Male. For connection set 1.7 metre	
502	-	1	0455 162 001	Hose		
503a	-	1	0469 689 002	Cover		
503b	-	1	0469 689 001	Water tank		
504	-	1	0457 987 001	Hose	L = 340mm, to be ordered per metre	
505	1	1	0469 893 001	Fan housing		EV1
506	1	1	0369 827 001	Fan		
507	1	1	0455 165 001	Attachment		
508	-	1	0457 987 001	Hose	L = 620mm, to be ordered per metre	C5
509	-	1	0191 085 105	Capacitor	5 $\mu$ F 400 V	
510	-	1	0469 692 001	Pump	1A 0.2kW 230V 50Hz, item 509 included	M1
511	-	1	0469 688 001	Cooler		
512	1	1	0455 166 001	Rear panel with text		
513	-	1	0455 161 001	Hose		

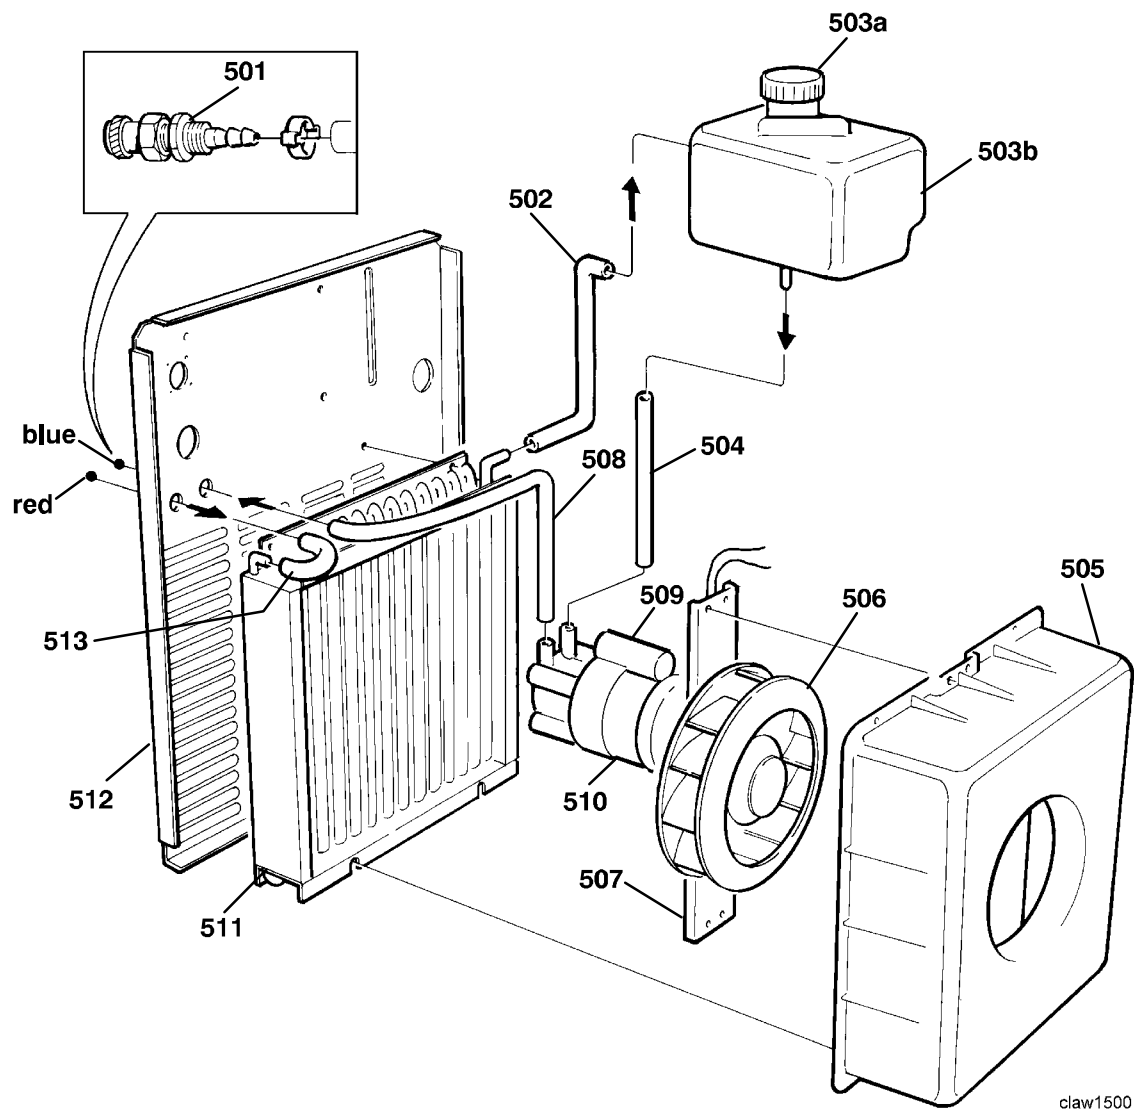

[illegible]

[illegible]

# ESAB subsidiaries and representative offices

## Europe

### AUSTRIA

ESAB Ges.m.b.H  
Vienna-Liesing  
Tel: +43 1 888 25 11  
Fax: +43 1 888 25 11 85

### BELGIUM

S.A. ESAB N.V.  
Brussels  
Tel: +32 2 745 11 00  
Fax: +32 2 726 80 05

### THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.  
Prague  
Tel: +420 2 819 40 885  
Fax: +420 2 819 40 120

### DENMARK

Aktieselskabet ESAB  
Copenhagen-Valby  
Tel: +45 36 30 01 11  
Fax: +45 36 30 40 03

### FINLAND

ESAB Oy  
Helsinki  
Tel: +358 9 547 761  
Fax: +358 9 547 77 71

### FRANCE

ESAB France S.A.  
Cergy Pontoise  
Tel: +33 1 30 75 55 00  
Fax: +33 1 30 75 55 24

### GERMANY

ESAB GmbH  
Solingen  
Tel: +49 212 298 0  
Fax: +49 212 298 204

### GREAT BRITAIN

ESAB Group (UK) Ltd  
Waltham Cross  
Tel: +44 1992 76 85 15  
Fax: +44 1992 71 58 03

ESAB Automation Ltd  
Andover  
Tel: +44 1264 33 22 33  
Fax: +44 1264 33 20 74

### HUNGARY

ESAB Kft  
Budapest  
Tel: +36 1 20 44 182  
Fax: +36 1 20 44 186

### ITALY

ESAB Saldatura S.p.A.  
Mesero (Mi)  
Tel: +39 02 97 96 81  
Fax: +39 02 97 28 91 81

### THE NETHERLANDS

ESAB Nederland B.V.  
Utrecht  
Tel: +31 30 248 59 22  
Fax: +31 30 248 52 60

### NORWAY

AS ESAB  
Larvik  
Tel: +47 33 12 10 00  
Fax: +47 33 11 52 03

### POLAND

ESAB Sp.z.o.o  
Warszaw  
Tel: +48 22 813 99 63  
Fax: +48 22 813 98 81

### PORTUGAL

ESAB Lda  
Lisbon  
Tel: +351 1 837 1527  
Fax: +351 1 859 1277

### SLOVAKIA

ESAB Slovakia s.r.o.  
Bratislava  
Tel: +421 7 44 88 24 26  
Fax: +421 7 44 88 87 41

### SPAIN

ESAB Ibérica S.A.  
Alcobendas (Madrid)  
Tel: +34 91 623 11 00  
Fax: +34 91 661 51 83

### SWEDEN

ESAB Sverige AB  
Gothenburg  
Tel: +46 31 50 95 00  
Fax: +46 31 50 92 22  
  
ESAB International AB  
Gothenburg  
Tel: +46 31 50 90 00  
Fax: +46 31 50 93 60

### SWITZERLAND

ESAB AG  
Dietikon  
Tel: +41 1 741 25 25  
Fax: +41 1 740 30 55

## North and South America

### ARGENTINA

CONARCO  
Buenos Aires  
Tel: +54 11 4 753 4039  
Fax: +54 11 4 753 6313

### BRAZIL

ESAB S.A.  
Contagem-MG  
Tel: +55 31 333 43 33  
Fax: +55 31 361 31 51

### CANADA

ESAB Group Canada Inc.  
Mississauga, Ontario  
Tel: +1 905 670 02 20  
Fax: +1 905 670 48 79

### MEXICO

ESAB Mexico S.A.  
Monterrey  
Tel: +52 8 350 5959  
Fax: +52 8 350 7554

### USA

ESAB Welding & Cutting Products  
Florence, SC  
Tel: +1 843 669 44 11  
Fax: +1 843 664 44 58

## Asia/Pacific

### AUSTRALIA

ESAB Australia Pty Ltd  
Ermington  
Tel: +61 2 9647 1232  
Fax: +61 2 9748 1685

### CHINA

Shanghai ESAB A/P  
Shanghai  
Tel: +86 21 6539 7124  
Fax: +86 21 6543 6622

### INDIA

ESAB India Ltd  
Calcutta  
Tel: +91 33 478 45 17  
Fax: +91 33 468 18 80

### INDONESIA

P.T. Esabindo Pratama  
Jakarta  
Tel: +62 21 460 01 88  
Fax: +62 21 461 29 29

### MALAYSIA

ESAB (Malaysia) Snd Bhd  
Selangor  
Tel: +60 3 703 36 15  
Fax: +60 3 703 35 52

### SINGAPORE

ESAB Singapore Pte Ltd  
Singapore  
Tel: +65 861 43 22  
Fax: +65 861 31 95  
  
ESAB Asia/Pacific Pte Ltd  
Singapore  
Tel: +65 861 74 42  
Fax: +65 863 08 39

### SOUTH KOREA

ESAB SeAH Corporation  
Kyung-Nam  
Tel: +82 551 289 81 11  
Fax: +82 551 289 88 63

### THAILAND

ESAB (Thailand) Ltd  
Samutprakarn  
Tel: +66 2 393 60 62  
Fax: +66 2 748 71 11

### UNITED ARAB EMIRATES

ESAB Middle East  
Dubai  
Tel: +971 4 338 88 29  
Fax: +971 4 338 87 29

## Representative offices

### BULGARIA

ESAB Representative Office  
Sofia  
Tel/Fax: +359 2 974 42 88

### EGYPT

ESAB Egypt  
Dokki-Cairo  
Tel: +20 2 390 96 69  
Fax: +20 2 393 32 13

### ROMANIA

ESAB Representative Office  
Bucharest  
Tel/Fax: +40 1 322 36 74

### RUSSIA-CIS

ESAB Representative Office  
Moscow  
Tel: +7 095 937 98 20  
Fax: +7 095 937 95 80

ESAB Representative Office  
St Petersburg  
Tel: +7 812 325 43 62  
Fax: +7 812 325 66 85

## Distributors

*For addresses and phone numbers to our distributors in other countries, please visit our home page*

**[www.esab.net](http://www.esab.net)**



ESAB Welding Equipment AB  
SE-695 81 LAXÅ  
SWEDEN  
Phone +46 584 81 000  
Fax +46 584 123 08

[www.esab.net](http://www.esab.net)